

# **TG90-TG91-TG92 TG510-TG515 TG520-TG525**

**Light oil burners**

**MANUAL OF INSTALLATION - USE - MAINTENANCE**

***CIB* UNIGAS**

**BURNERS - BRUCIATORI - BRULERS - BRENNER - QUEMADORES - ГОРЕЛКИ**

## DANGERS, WARNINGS AND NOTES OF CAUTION

**THIS MANUAL IS SUPPLIED AS AN INTEGRAL AND ESSENTIAL PART OF THE PRODUCT AND MUST BE DELIVERED TO THE USER.**

**INFORMATION INCLUDED IN THIS SECTION ARE DEDICATED BOTH TO THE USER AND TO PERSONNEL FOLLOWING PRODUCT INSTALLATION AND MAINTENANCE.**

**THE USER WILL FIND FURTHER INFORMATION ABOUT OPERATING AND USE RESTRICTIONS, IN THE SECOND SECTION OF THIS MANUAL. WE HIGHLY RECOMMEND TO READ IT.**

**CAREFULLY KEEP THIS MANUAL FOR FUTURE REFERENCE.**

### 1) GENERAL INTRODUCTION

- The equipment must be installed in compliance with the regulations in force, following the manufacturer's instructions, by qualified personnel.
- Qualified personnel means those having technical knowledge in the field of components for civil or industrial heating systems, sanitary hot water generation and particularly service centres authorised by the manufacturer.
- Improper installation may cause injury to people and animals, or damage to property, for which the manufacturer cannot be held liable.
- Remove all packaging material and inspect the equipment for integrity. In case of any doubt, do not use the unit - contact the supplier.

The packaging materials (wooden crate, nails, fastening devices, plastic bags, foamed polystyrene, etc), should not be left within the reach of children, as they may prove harmful.

- Before any cleaning or servicing operation, disconnect the unit from the mains by turning the master switch OFF, and/or through the cut-out devices that are provided.
- Make sure that inlet or exhaust grilles are unobstructed.
- In case of breakdown and/or defective unit operation, disconnect the unit. Make no attempt to repair the unit or take any direct action.

Contact qualified personnel only.

Units shall be repaired exclusively by a servicing centre, duly authorised by the manufacturer, with original spare parts and accessories.

Failure to comply with the above instructions is likely to impair the unit's safety.

To ensure equipment efficiency and proper operation, it is essential that maintenance operations are performed by qualified personnel at regular intervals, following the manufacturer's instructions.

- When a decision is made to discontinue the use of the equipment, those parts likely to constitute sources of danger shall be made harmless.
- In case the equipment is to be sold or transferred to another user, or in case the original user should move and leave the unit behind, make sure that these instructions accompany the equipment at all times so that they can be consulted by the new owner and/or the installer.
- This unit shall be employed exclusively for the use for which it is meant. Any other use shall be considered as improper and, therefore, dangerous.

The manufacturer shall not be held liable, by agreement or otherwise, for damages resulting from improper installation, use and failure to comply with the instructions supplied by the manufacturer. The occurrence of any of the following circumstances may cause explosions, polluting unburnt gases (example: carbon monoxide CO), burns, serious harm to people, animals and things:

- Failure to comply with one of the WARNINGS in this chapter
- Incorrect handling, installation, adjustment or maintenance of the burner
- Incorrect use of the burner or incorrect use of its parts or optional supply

### 2) SPECIAL INSTRUCTIONS FOR BURNERS

- The burner should be installed in a suitable room, with ventilation openings complying with the requirements of the regulations in force, and sufficient for good combustion.
- Only burners designed according to the regulations in force should be used.
- This burner should be employed exclusively for the use for which it was designed.
- Before connecting the burner, make sure that the unit rating is the same as delivery mains (electricity, gas oil, or other fuel).
- Observe caution with hot burner components. These are, usually, near to the flame and the fuel pre-heating system, they become hot during the unit operation and will remain hot for some time after the burner has stopped.

When the decision is made to discontinue the use of the burner, the user shall have qualified personnel carry out the following operations:

- a Remove the power supply by disconnecting the power cord from the mains.
- b Disconnect the fuel supply by means of the hand-operated shut-off valve and remove the control handwheels from their spindles.

### Special warnings

- Make sure that the burner has, on installation, been firmly secured to the appliance, so that the flame is generated inside the appliance fire-box.
- Before the burner is started and, thereafter, at least once a year, have qualified personnel perform the following operations:
  - a set the burner fuel flow rate depending on the heat input of the appliance;
  - b set the flow rate of the combustion-supporting air to obtain a combustion efficiency level at least equal to the lower level required by the regulations in force;
  - c check the unit operation for proper combustion, to avoid any harmful or polluting unburnt gases in excess of the limits permitted by the regulations in force;
  - d make sure that control and safety devices are operating properly;
  - e make sure that exhaust ducts intended to discharge the products of combustion are operating properly;
  - f on completion of setting and adjustment operations, make sure that all mechanical locking devices of controls have been duly tightened;
  - g make sure that a copy of the burner use and maintenance instructions is available in the boiler room.
- In case of a burner shut-down, reset the control box by means of the RESET pushbutton. If a second shut-down takes place, call the Technical Service, **without trying to RESET further**.
- The unit shall be operated and serviced by qualified personnel only, in compliance with the regulations in force.

### 3) GENERAL INSTRUCTIONS DEPENDING ON FUEL USED

#### 3a) ELECTRICAL CONNECTION

- For safety reasons the unit must be efficiently earthed and installed as required by current safety regulations.
- It is vital that all safety requirements are met. In case of any doubt, ask for an accurate inspection of electrics by qualified personnel, since the manufacturer cannot be held liable for damages that may be caused by failure to correctly earth the equipment.
- Qualified personnel must inspect the system to make sure that it is adequate to take the maximum power used by the equipment shown on the equipment rating plate. In particular, make sure that the system cable cross section is adequate for the power absorbed by the unit.
- No adaptors, multiple outlet sockets and/or extension cables are permitted to connect the unit to the electric mains.
- An omnipolar switch shall be provided for connection to mains, as required by the current safety regulations.
- The use of any power-operated component implies observance of a few basic rules, for example:
  - do not touch the unit with wet or damp parts of the body and/or with bare feet;
  - do not pull electric cables;
  - do not leave the equipment exposed to weather (rain, sun, etc.) unless expressly required to do so;
  - do not allow children or inexperienced persons to use equipment;
- The unit input cable shall not be replaced by the user. In case of damage to the cable, switch off the unit and contact qualified personnel to replace. When the unit is out of use for some time the electric switch supplying all the power-driven components in the system (i.e. pumps, burner, etc.) should be switched off.

### 3b) FIRING WITH GAS, LIGHT OIL OR OTHER FUELS

#### GENERAL

- The burner shall be installed by qualified personnel and in compliance with regulations and provisions in force; wrong installation can cause injuries to people and animals, or damage to property, for which the manufacturer cannot be held liable.
- Before installation, it is recommended that all the fuel supply system pipes be carefully cleaned inside, to remove foreign matter that might impair the burner operation.
- Before the burner is commissioned, qualified personnel should inspect the following:
  - a the fuel supply system, for proper sealing;
  - b the fuel flow rate, to make sure that it has been set based on the firing rate required of the burner;
  - c the burner firing system, to make sure that it is supplied for the designed fuel type;
  - d the fuel supply pressure, to make sure that it is included in the range shown on the rating plate;
  - e the fuel supply system, to make sure that the system dimensions are adequate to the burner firing rate, and that the system is equipped with all the safety and control devices required by the regulations in force.
- When the burner is to remain idle for some time, the fuel supply tap or taps should be closed.

#### SPECIAL INSTRUCTIONS FOR USING GAS

Have qualified personnel inspect the installation to ensure that:

- a the gas delivery line and train are in compliance with the regulations and provisions in force;
- b all gas connections are tight;
- c the boiler room ventilation openings are such that they ensure the air supply flow required by the current regulations, and in any case are sufficient for proper combustion.
- Do not use gas pipes to earth electrical equipment.
- Never leave the burner connected when not in use. Always shut the gas valve off.
- In case of prolonged absence of the user, the main gas delivery valve to the burner should be shut off.

#### Precautions if you can smell gas

- a do not operate electric switches, the telephone, or any other item likely to generate sparks;
- b immediately open doors and windows to create an air flow to purge the room;
- c close the gas valves;
- d contact qualified personnel.
- Do not obstruct the ventilation openings of the room where gas appliances are installed, to avoid dangerous conditions such as the development of toxic or explosive mixtures.

### DIRECTIVES AND STANDARDS

#### *Gas burners*

##### European directives

- Regulation 2016/426/UE (appliances burning gaseous fuels)
- 2014/35/UE (Low Tension Directive)
- 2014/30/UE (Electromagnetic compatibility Directive)
- 2006/42/EC (Machinery Directive)

##### Harmonized standards

- UNI EN 676 (Automatic forced draught burners for gaseous fuels)
- EN 55014-1 (Electromagnetic compatibility- Requirements for household appliances, electric tools and similar apparatus)
- EN 60204-1:2006 (Safety of machinery – Electrical equipment of machines.)
- CEI EN 60335-1 (Specification for safety of household and similar electrical appliances);
- CEI EN 60335-2-102 (Household and similar electrical appliances. Safety. Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections).
- UNI EN ISO 12100:2010 (Safety of machinery - General principles for design - Risk assessment and risk reduction);

#### *Light oil burners*

##### European directives

- 2014/35/UE (Low Tension Directive)
- 2014/30/UE (Electromagnetic compatibility Directive)
- 2006/42/EC (Machinery Directive)

##### Harmonized standards

- UNI EN 267-2011 (Automatic forced draught burners for liquid fuels)
- EN 55014-1 (Electromagnetic compatibility- Requirements for household appliances, electric tools and similar apparatus)
- EN 60204-1:2006 (Safety of machinery – Electrical equipment of machines.)
- CEI EN 60335-1 (Specification for safety of household and similar electrical appliances);
- CEI EN 60335-2-102 (Household and similar electrical appliances. Safety. Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections).
- UNI EN ISO 12100:2010 (Safety of machinery - General principles for design - Risk assessment and risk reduction);

##### National Standard

- UNI 7824 (Atomizing burners of the monobloc type. Characteristics and test methods)

#### *Heavy oil burners*

##### European Directives

- 2014/35/UE (Low Tension Directive)
- 2014/30/UE (Electromagnetic compatibility Directive)
- 2006/42/EC (Machinery Directive)

##### Harmonized standards

- UNI EN 267 (Automatic forced draught burners for liquid fuels)
- EN 55014-1 (Electromagnetic compatibility- Requirements for household appliances, electric tools and similar apparatus)
- EN 60204-1:2006 (Safety of machinery – Electrical equipment of machines.)
- CEI EN 60335-1 (Specification for safety of household and similar electrical appliances);
- CEI EN 60335-2-102 (Household and similar electrical appliances. Safety. Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections).
- UNI EN ISO 12100:2010 (Safety of machinery - General principles for design - Risk assessment and risk reduction);

##### Norme nazionali / National Standard

- UNI 7824 (Atomizing burners of the monobloc type. Characteristics and test methods).

### Gas - Light oil burners

#### European Directives

- Regulation 2016/426/UE (appliances burning gaseous fuels)
- 2014/35/UE (Low Tension Directive)
- 2014/30/UE (Electromagnetic compatibility Directive)
- 2006/42/EC (Machinery Directive)

#### Harmonized standards

- UNI EN 676 (Automatic forced draught burners for gaseous fuels)
- UNI EN 267 (Automatic forced draught burners for liquid fuels)
- EN 55014-1 (Electromagnetic compatibility- Requirements for household appliances, electric tools and similar apparatus)
- EN 60204-1:2006 (Safety of machinery – Electrical equipment of machines.)
- CEI EN 60335-1 (Specification for safety of household and similar electrical appliances);
- CEI EN 60335-2-102 (Household and similar electrical appliances. Safety. Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections).
- UNI EN ISO 12100:2010 (Safety of machinery - General principles for design - Risk assessment and risk reduction);

#### Norme nazionali / National Standard

- UNI 7824 (Atomizing burners of the monobloc type. Characteristics and test methods.

### Gas - Heavy oil burners

#### European directives:

- Regulation 2016/426/UE (appliances burning gaseous fuels)
- 2014/35/UE (Low Tension Directive)
- 2014/30/UE (Electromagnetic compatibility Directive)
- 2006/42/EC (Machinery Directive)

#### Harmonized standards

- UNI EN 676 (Automatic forced draught burners for gaseous fuels)
- EN 55014-1 (Electromagnetic compatibility- Requirements for household appliances, electric tools and similar apparatus)
- EN 60204-1:2006 (Safety of machinery – Electrical equipment of machines.)
- CEI EN 60335-1 (Specification for safety of household and similar electrical appliances);
- CEI EN 60335-2-102 (Household and similar electrical appliances. Safety. Particular requirements for gas, oil and solid-fuel burning appliances having electrical connections).
- UNI EN ISO 12100:2010 (Safety of machinery - General principles for design - Risk assessment and risk reduction);

#### National Standard

- UNI 7824 (Atomizing burners of the monobloc type. Characteristics and test methods.

### Industrial burners

#### European directives

- Regulation 2016/426/UE (appliances burning gaseous fuels)
- 2014/35/UE (Low Tension Directive)
- 2014/30/UE (Electromagnetic compatibility Directive)
- 2006/42/EC (Machinery Directive)

#### Harmonized standards

- EN 55014-1 (Electromagnetic compatibility- Requirements for household appliances, electric tools and similar apparatus)
- EN 746-2 (Industrial thermoprocessing equipment - Part 2: Safety requirements for combustion and fuel handling systems)
- UNI EN ISO 12100:2010 (Safety of machinery - General principles for design - Risk assessment and risk reduction);
- EN 60204-1:2006 (Safety of machinery – Electrical equipment of machines.)
- EN 60335-2 (Electrical equipment of non-electric appliances for household and similar purposes. Safety requirements)

### Burner data plate

For the following information, please refer to the data plate:

- burner type and burner model: must be reported in any communication with the supplier
- burner ID (serial number): must be reported in any communication with the supplier
- date of production (year and month)
- information about fuel type and network pressure

|              |    |
|--------------|----|
| Type         | -- |
| Model        | -- |
| Year         | -- |
| S.Number     | -- |
| Output       | -- |
| Oil Flow     | -- |
| Fuel         | -- |
| Category     | -- |
| Gas Pressure | -- |
| Viscosity    | -- |
| El.Supply    | -- |
| El.Consump.  | -- |
| Fan Motor    | -- |
| Protection   | -- |
| Drwaing n°   | -- |
| P.I.N.       | -- |

### SYMBOLS USED



**WARNING!**

Failure to observe the warning may result in irreparable damage to the unit or damage to the environment



**DANGER!**

Failure to observe the warning may result in serious injuries or death.



**WARNING!**

Failure to observe the warning may result in electric shock with lethal consequences

Figures, illustrations and images used in this manual may differ in appearance from the actual product.



## GENERAL FEATURES

This series of industrial burners is designed for all those applications that require big-sized air fans or air-flue heat exchangers to be installed in sound-proof areas to reduce noise. They can be provided with built-in or separately-mounted control panel (console or wall-mounted).

Note: the figure is indicative only

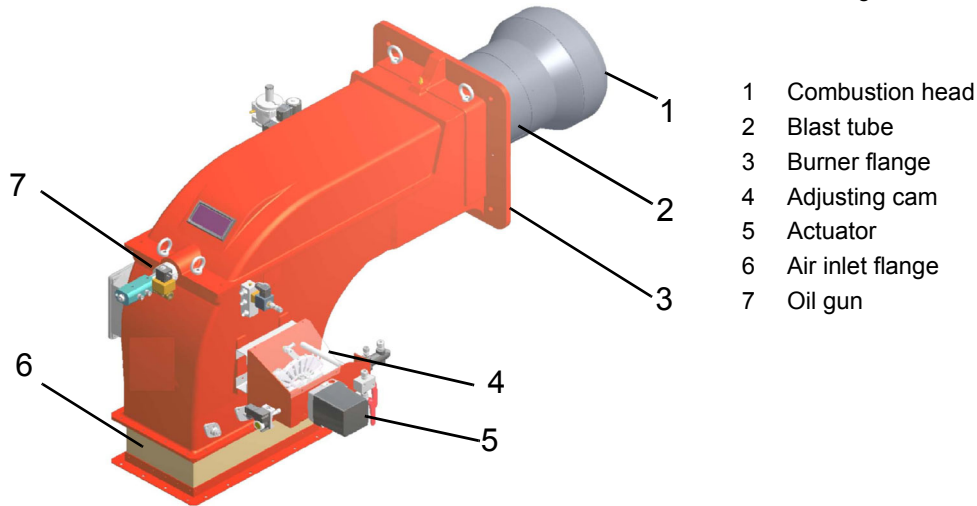


Fig. 1

**Light oil operation:**the fuel coming from the supply line, is pushed by the pump to the nozzle and then into the combustion chamber, where the mixture between fuel and air takes place and consequently the flame.

In the burners, the mixture between fuel and air, to perform clean and efficient combustion, is activated by atomisation of oil into very small particles. This process is achieved making pressurised oil passing through the nozzle.

The pump main function is to transfer oil from the tank to the nozzle in the desired quantity and pressure. To adjust this pressure, pumps are provided with a pressure regulator (except for some models for which a separate regulating valve is provided). Other pumps are provided with two pressure regulators: one for the high and one for low pressure (in double-stage systems with one nozzle).

The adjustable combustion head can improve the burner performance. The combustion head determines the energetic quality and the geometry of the flame. Fuel and comburent are routed into separated ways as far as the zone of flame generation (combustion chamber).

The control panel, placed on the burner front side, shows each operating stage.

## How to select the burner

To check if the burner is suitable for the boiler to which it must be installed, the following parameters are needed:

- fuel
- furnace input, in kW or kcal/h (kW = kcal/h / 860);
- boiler type;
- combustion chamber type (3-smoke pass, reverse flame, other)
- temperature or pressure of the thermal carrier fluid
- Comburent air temperature
- Air duct positioning
- Pressure in the combustion chamber
- Elevation (altitude) of burner installation
- Gas train (only for gas burners)
- Pumping unit (only for light-oil or heavy-oil burners)
- Air fan
- Bilt-in or separated control panel
- backpressure (data are available on the boiler's ID plate or in the user's manual).

Burners provided with built-in control panel are designed for IP40 index of protection. For other values of IP, please contact the manufacturer Technical Dpt.


### Data requested:

- furnace input;
- air temperature
- altitude
- generator pressure or temperature

### Example:

- furnace input: 9600kW
- air temperature: 15°C
- altitude: 0m

Fig. 2

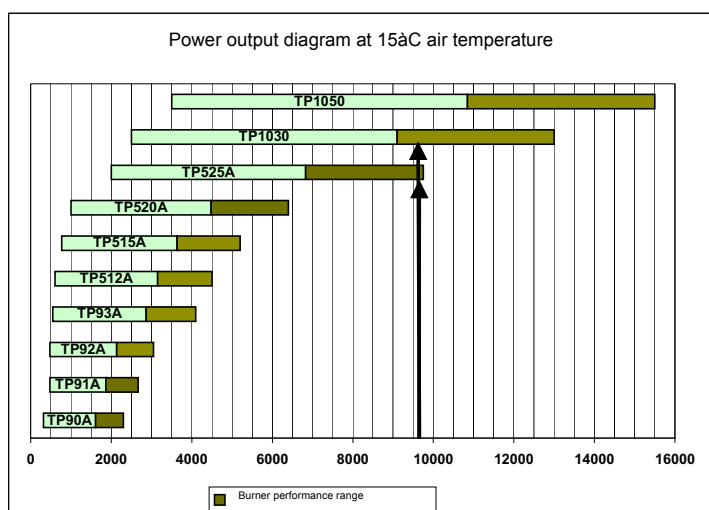

See the diagram in Fig. 2, as to find the burners that better suite the power range requested in the exmple (9600kW). Once the models are founded out, the choice regards technical and economical features. Technical features can be summarised in a higher modulation ratio (fewer start-ups, less consumption, fewer swigings in the generator temperature and pressure values.

## Burner model identification

Burners are identified by burner type and model. Burner model identification is described as follows.

| Type                               | TG92                                                                                   | Model | G-. | PR. | S.  | .   | A.  |
|------------------------------------|----------------------------------------------------------------------------------------|-------|-----|-----|-----|-----|-----|
|                                    | (1)                                                                                    |       | (2) | (3) | (4) | (5) | (6) |
| (1) BURNER TYPE                    | TG90-TG91-TG92-TG510-TG515-TG520-TG525                                                 |       |     |     |     |     |     |
| (2) FUEL                           | G - Light oilA - Biodiesel                                                             |       |     |     |     |     |     |
| (3) OPERATION (Available versions) | PR - ProgressiveMD - Fully modulating                                                  |       |     |     |     |     |     |
| (4) BLAST TUBE                     | S - StandardL - Extended                                                               |       |     |     |     |     |     |
| (5) DESTINATION COUNTRY            | * - see data plate                                                                     |       |     |     |     |     |     |
| (6) BURNER VERSION                 | G - Separate control panel and junction box<br>E - No control panel, junction box only |       |     |     |     |     |     |

---


**Technical specifications**

| BURNERS                 |                 | TG90                           | TG91       | TG92       |
|-------------------------|-----------------|--------------------------------|------------|------------|
| Output                  | min. -max. kW   | 264 - 1900                     | 698 - 2093 | 849 - 2558 |
| Light oil rate          | min. -max. kg/h | 22 - 160                       | 59 - 176   | 72 - 215   |
| Fuel                    |                 | Light oil                      |            |            |
| Viscosity               |                 | 1.3 °E @20°C                   |            |            |
| Power supply            |                 | 400V 3N ~ 50Hz                 |            |            |
| Fan motor               | kW              | see fan ID plate               |            |            |
| Pump motor              | kW              | 1.1                            | 0.55       | 1.1        |
| Total power consumption | kW              | 1.6                            | 1.05       | 1.6        |
| Index of protection     |                 | IP40                           |            |            |
| Operation               |                 | Progressive - Fully modulating |            |            |
| Operating temperature   | °C              | -10 ÷ +50                      |            |            |
| Storage temperature     | °C              | -20 ÷ +60                      |            |            |
| Working service *       |                 | Intermittent                   |            |            |

| BURNERS                 |                 | TG510                          | TG515       | TG520       | TG525       |
|-------------------------|-----------------|--------------------------------|-------------|-------------|-------------|
| Output                  | min. -max. kW   | 1314 - 3953                    | 1628 - 4884 | 2326 - 6977 | 2000 - 9750 |
| Light oil rate          | min. -max. kg/h | 111 - 331                      | 137 - 411   | 196 - 588   | 168 - 821   |
| Fuel                    |                 | Light oil                      |             |             |             |
| Viscosity               |                 | 1.3 °E @20°C                   |             |             |             |
| Power supply            |                 | 400V 3N ~ 50Hz                 |             |             |             |
| Fan motor               | kW              | see fan ID plate               |             |             |             |
| Pump motor              | kW              | 1.1                            | 1.5         | 1.5         | 4           |
| Total power consumption | kW              | 1.6                            | 2           | 2           | 4.5         |
| Operation               |                 | Progressive - Fully modulating |             |             |             |
| Index of protection     |                 | IP40                           |             |             |             |
| Operating temperature   | °C              | -10 ÷ +50                      |             |             |             |
| Storage temperature     | °C              | -20 ÷ +60                      |             |             |             |
| Working service *       |                 | Intermittent                   |             |             |             |

**\* NOTE ON THE WORKING SERVICE:** the Siemens LMO.. control box automatically stops after 24h of continuous working. The control box immediately starts up, automatically. If the burner is provided with Siemens LOA.. or LAL.. control box one controlled shutdown must be performed after 24 hours of continuous operation, for safety reasons.

Output diagram (air temperature = 15°C)

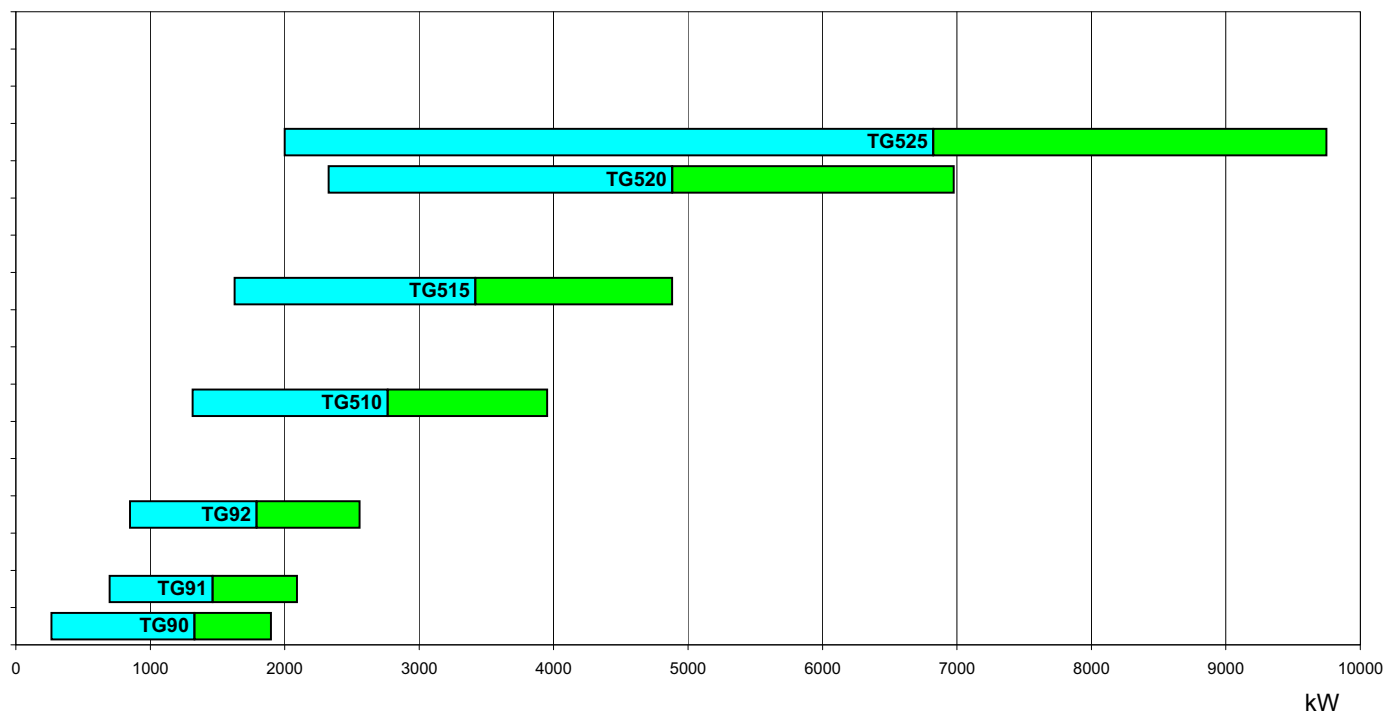

Burner performance range

 Performance range

To get the input in kcal/h, multiply value in kW by 860. Data are referred to standard conditions: 1013mbar, 15°C


### Fan installation

**ATTENTION!** The bellows unit provided is made of canvas and is provided with blocking spacers to avoid breaking it during installation: first place the bellows unit between flanges, then remove the spacers. Canvas has to be stretched after the installation, but not stressed.


**ATTENTION!** the air duct dimensioning must be performed according to the flow rate, the temperature, the distance between the fan and the burner and according to the fan features as well..

**ATTENTION!** It is suggested to install the fan on vibration-damping supports in order to reduce vibration propagation.

Connect the air duct to the burner by means of the bellows unit provided together with the burner (see the picture below).

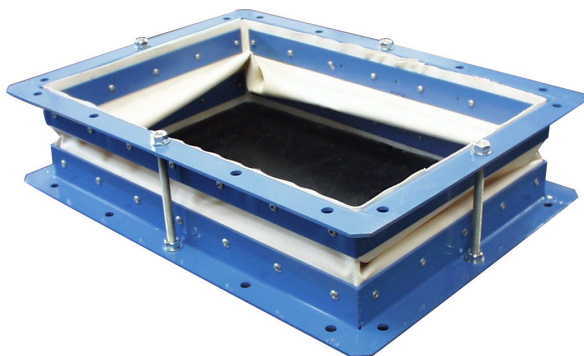

# Overall dimensions (mm)


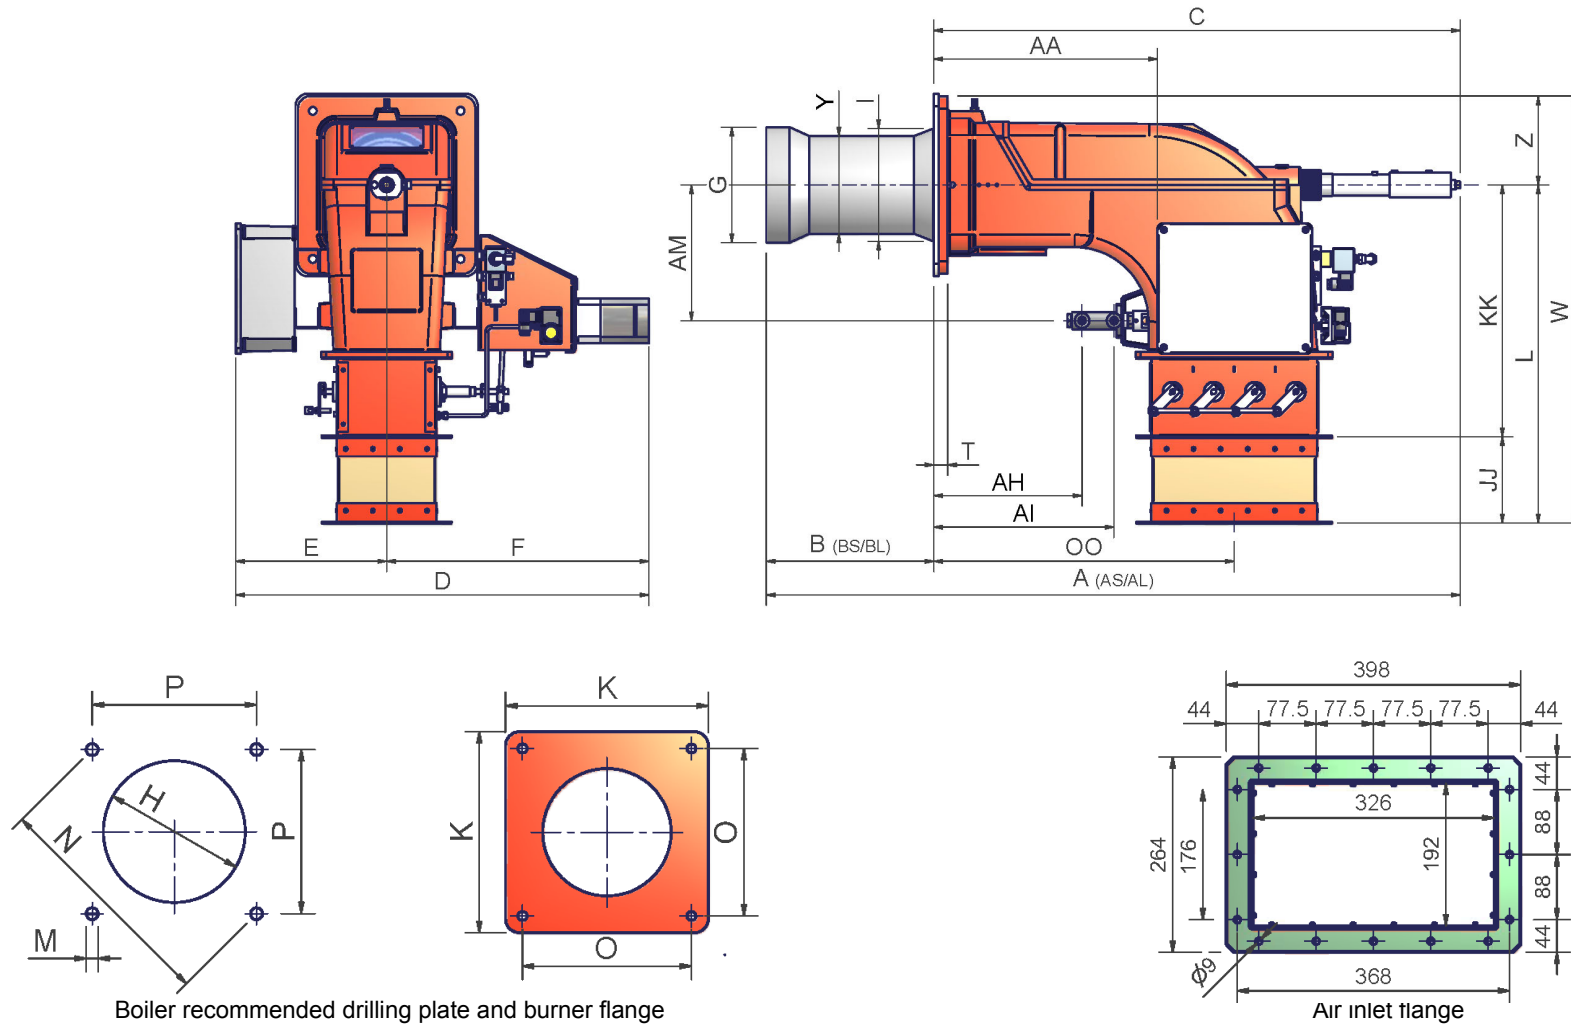


|             | A(S*) | A(L*) | AA  | AH  | AI  | AM  | B(S*) | B(L*) | C    | CC  | D   | E   | F   | G   | H   | I   | JJ  | K   | KK  | L   | M   | N   | Omin | Omax | OO  | P   | T  | W   | Y   | Z   |
|-------------|-------|-------|-----|-----|-----|-----|-------|-------|------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|------|------|-----|-----|----|-----|-----|-----|
| <b>TG90</b> | 1356  | 1506  | 454 | 301 | 366 | 275 | 340   | 490   | 1090 | 307 | 840 | 307 | 533 | 234 | 276 | 228 | 175 | 360 | 510 | 685 | M14 | 424 | 300  | 300  | 610 | 300 | 35 | 865 | 228 | 180 |
| <b>TG91</b> | 1317  | 1490  | 454 | 301 | 366 | 275 | 300   | 488   | 1017 | 307 | 840 | 307 | 533 | 238 | 268 | 228 | 175 | 360 | 510 | 685 | M12 | 417 | 280  | 310  | 610 | 295 | 28 | 865 | 228 | 180 |
| <b>TG92</b> | 1311  | 1484  | 454 | 301 | 366 | 275 | 294   | 491   | 1017 | 307 | 840 | 307 | 533 | 266 | 296 | 228 | 175 | 360 | 510 | 685 | M12 | 417 | 280  | 310  | 610 | 295 | 28 | 865 | 228 | 180 |



\* S: measure referred to burner provided with standard blast tube

\* L: measure referred to burner provided with extended blast tube




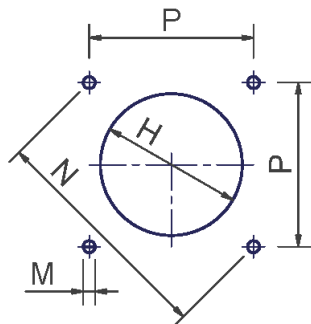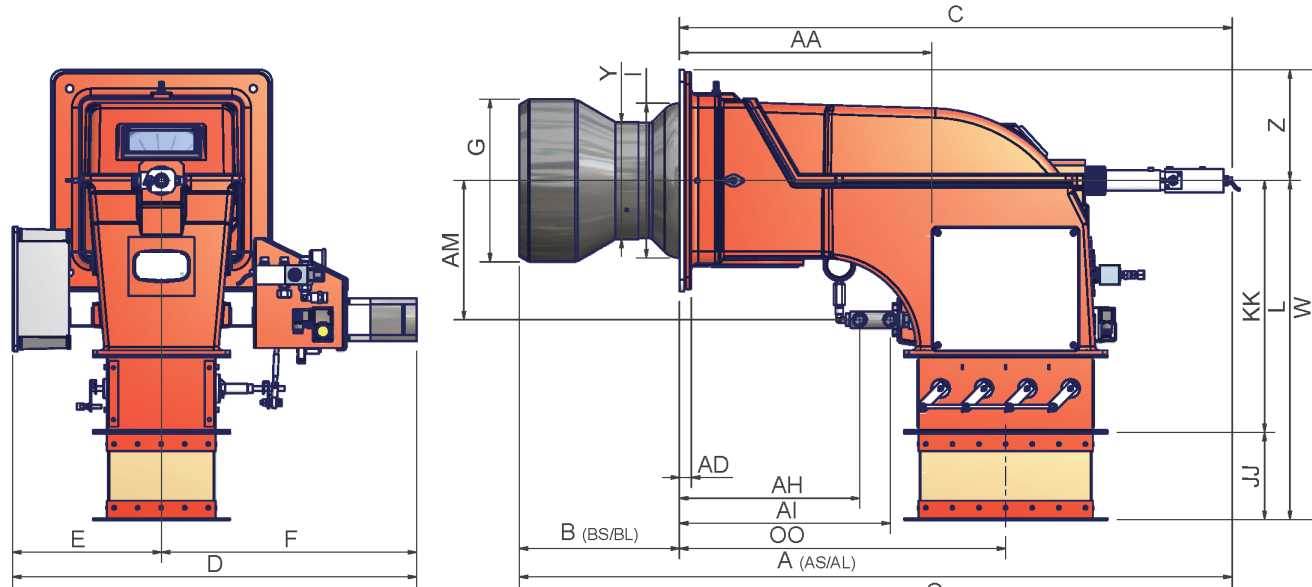

Boiler recommended drilling template and burner flange

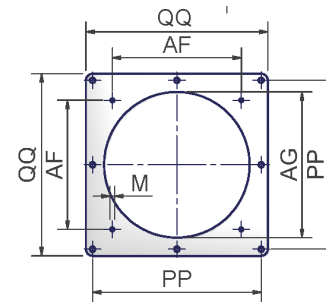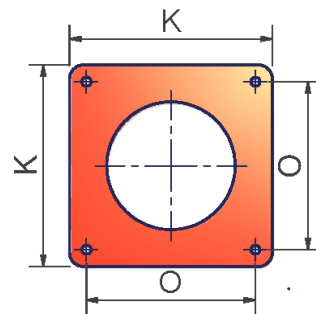

Counterflange and air inlet flange

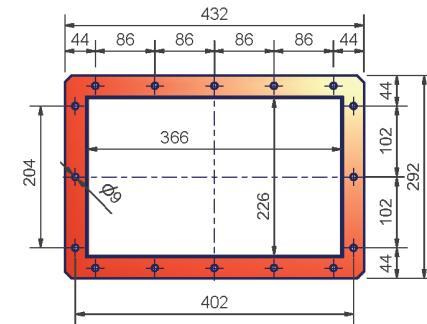

|              | A(S*) | A(L*) | AA  | AD | AF    | AG    | AH  | AI  | AM  | B(S*) | B(L*) | C    | D   | E   | F   | G   | H     | I   | JJ  | K   | KK  | L   | M   | N   | O   | OO  | P   | PP    | QQ    | W   | Y   | Z   |
|--------------|-------|-------|-----|----|-------|-------|-----|-----|-----|-------|-------|------|-----|-----|-----|-----|-------|-----|-----|-----|-----|-----|-----|-----|-----|-----|-----|-------|-------|-----|-----|-----|
| <b>TG510</b> | 1485  | 1705  | 536 | 25 | x     | x     | 383 | 448 | 295 | 300   | 520   | 1175 | 858 | 316 | 542 | 329 | 369   | 328 | 185 | 460 | 534 | 719 | M14 | 552 | 390 | 693 | 390 | x     | x     | 954 | 328 | 235 |
| <b>TG515</b> | 1485  | 1705  | 536 | 25 | x     | x     | 383 | 448 | 295 | 300   | 520   | 1175 | 858 | 316 | 542 | 350 | 390   | 328 | 185 | 460 | 534 | 719 | M14 | 552 | 390 | 693 | 390 | x     | x     | 954 | 328 | 235 |
| <b>TG520</b> | 1485  | 1705  | 536 | 25 | x     | x     | 383 | 448 | 295 | 300   | 520   | 1175 | 858 | 316 | 542 | 370 | 410   | 328 | 185 | 460 | 534 | 719 | M14 | 552 | 390 | 693 | 390 | x     | x     | 954 | 328 | 235 |
| <b>TG525</b> | 1705  | x     | 536 | 25 | 390** | 440** | x   | x   | x   | 520   | x     | 1175 | 858 | 316 | 542 | 434 | 484** | 328 | 185 | 460 | 534 | 719 | M14 | 552 | 390 | 693 | 390 | 510** | 550** | 954 | 340 | 235 |

\* S: measure referred to burner provided with standard blast tube

\* L: measure referred to burner provided with extended blast tube

\*\* Fit a counterflange between burner and boiler

## MOUNTINGS AND CONNECTIONS

### Packing

The burners and accessories are dispatched in wooden packages.

Packing cases of this kind are affected by humidity and are not suitable for stacking. The following are placed in each packing case.


- burner;
- light oil flexible hoses;
- control panel
- oil pumping unit;
- gasket to be inserted between the burner and the boiler;
- envelope containing this manual.

To get rid of the burner packing, follow the procedures laid down by current laws on disposal of materials.

### Handling the burner

|                                                                                   |                                                                                                                                                                                                                                      |
|-----------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>ATTENTION!</b> the lifting and moving operations must be carried out by specialised and trained personnel. If these operations are not carried out perfectly, there is the residual risk of the burner to overturn and fall down. |
|                                                                                   | As for moving the burner, use means suited for the weight to sustain (see paragraph "Technical specifications").                                                                                                                     |

The burner is provided with eyebolts, for handling operations.

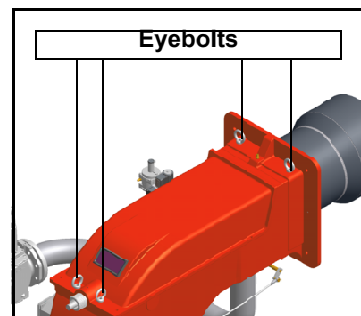

### Fitting the burner to the boiler

- 1 To perform the installation, it is necessary to drill the boiler door as described on paragraph "Overall dimensions";
- 2 screw the studbolts (5) on the boiler door, according to the drilling plate (see paragraph "Overall dimensions");
- 3 move the burner towards the boiler: lift the burner by means of the eyebolts placed on its top side;
- 4 remove the blast tube, by loosening the three screws beside the burner flange;
- 5 place the ceramic fibre plait on the burner flange;
- 6 replace the blast tube: before fastening completely the screws, avoid any misalignment between the blast tube axis and the combustion head axis;
- 7 install the burner to the boiler;
- 8 fix the burner to the stud bolts, by means of the fixing nuts, according to Fig. 3.
- 9 After fitting the burner to the boiler, ensure that the gap between the blast tube and the refractory lining is sealed with appropriate insulating material (ceramic fibre cord or refractory cement).

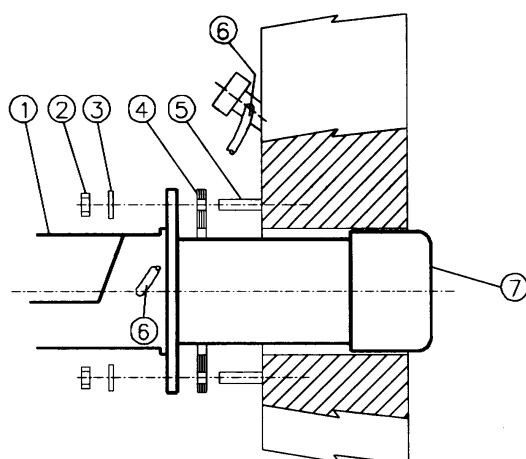


Fig. 3

#### Keys

- |   |                     |
|---|---------------------|
| 1 | Burner              |
| 2 | Fixing nut          |
| 3 | Washer              |
| 4 | Ceramic fibre plait |
| 5 | Stud bolt           |
| 7 | Blast tube          |

### Fan installation

Pay attention when designing the air duct: dimensioning must be performed according to the flow rate, the temperature, the distance between the fan and the burner and according to the fan features as well.


|                                                                                     |                                                                                                                                                                                                                                                                                                         |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>ATTENTION!</b> The bellows unit provided is made of canvas and is provided with blocking spacers to avoid breaking it during installation: <b>first</b> place the bellows unit between flanges, <b>then</b> remove the spacers. Canvas has to be stretched after the installation, but not stressed. |
|-------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

### Matching the burner to the boiler

The burners described in this manual have been tested with combustion chambers that comply with EN676 regulation and whose dimensions are described in the diagram. In case the burner must be coupled with boilers with a combustion chamber smaller in diameter or shorter than those described in the diagram, please contact the supplier, to verify that a correct matching is possible, with respect of the application involved. To correctly match the burner to the boiler verify the necessary input and the pressure in combustion chamber are included in the burner performance curve; otherwise the choice of the burner must be revised consulting the burner manufacturer. To choose the blast tube length follow the instructions of the boiler manufacturer. In absence of these consider the following:

- Cast-iron boilers, three pass flue boilers (with the first pass in the rear part): the blast tube must protrude no more than 100 mm into the combustion chamber.
- Pressurised boilers with flame reversal: in this case the blast tube must penetrate at least 50 - 100 mm into combustion chamber in respect to the tube bundle plate.
- The length of the blast tubes does not always allow this requirement to be met, and thus it may be necessary to use a suitably-sized spacer to move the burner backwards or to design a blast tube that suits the utilisation (please, contact the manufacturer).

### Connection diagram of the air pressure switch to the burner air conduct

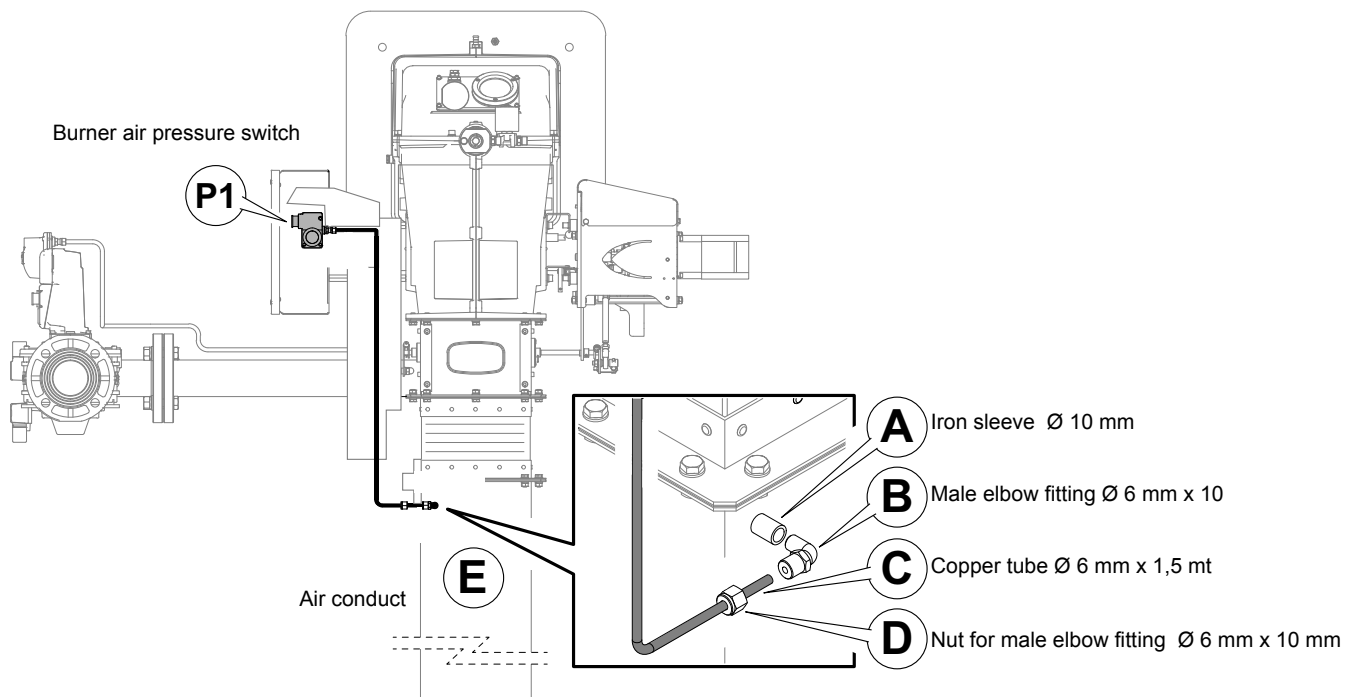

Copper tube connection Ø 6 mm:

- Drill the air duct (with hole from Ø 10 mm);
- Fit sleeve **A** (Ø 10 mm) and weld it on channel **E**;
- Assemble in sequence the **B-D** details on the tube (Ø 6 mm) **C** appropriately shaped up to the connection on the air pressure switch (**P1**).

Fig. 4 - Gravity circuit

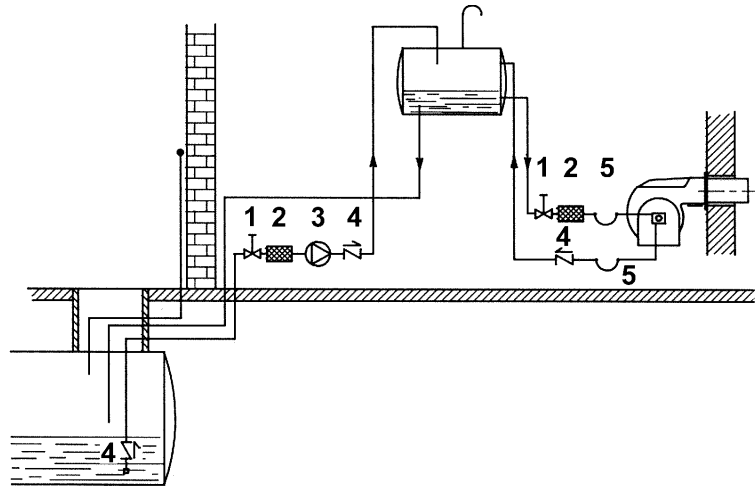


Fig. 5 - Ring circuit


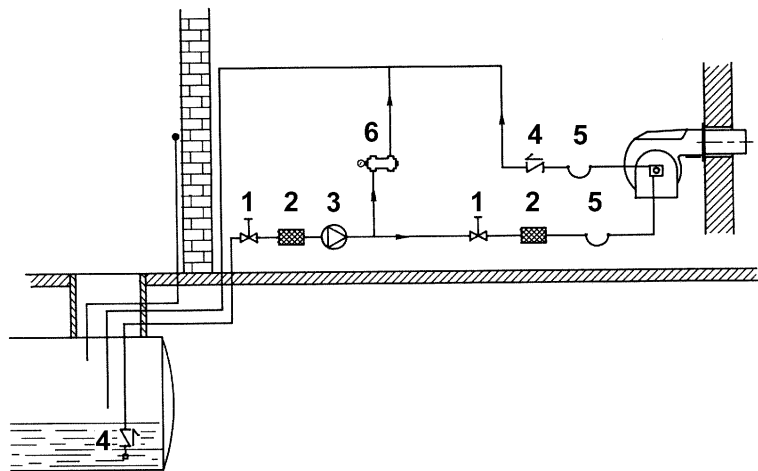


Fig. 6 - Suction circuit

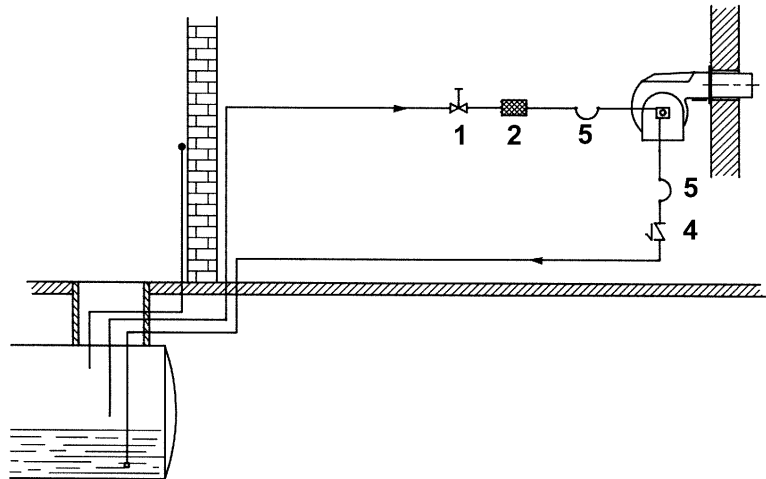

### Key

- 1 Manual valve
- 2 Light oil filter
- 3 Light oil feeding pump
- 4 One way valve
- 5 Flexible hoses
- 6 Relief valve

**NOTE:** in plants where gravity or ring feed systems are provided, install an automatic interception device (see n. 4 - Fig. 7).

## Installation diagram of light oil pipes



PLEASE READ CAREFULLY THE “WARNINGS” CHAPTER AT THE BEGINNING OF THIS MANUAL.

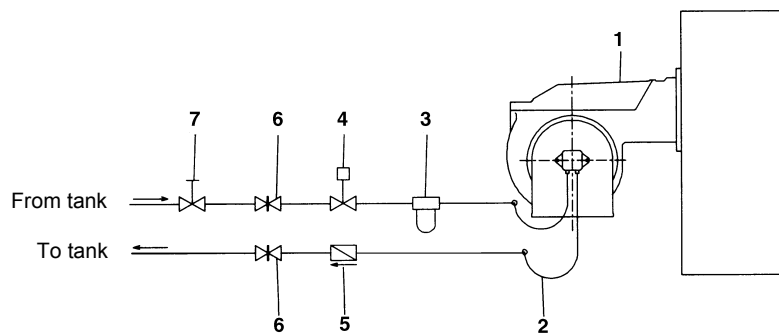


Fig. 7 - Double-pipe system

The burner is supplied with filter and flexible hoses, all the parts upstream the filter and downstream the return flexible hose, must be installed by the customer. As far as the hoses connection, see the related paragraph.

### Key

- 1 Burner
- 2 Flexible hoses (fitted)
- 3 Light oil filter (fitted)
- 4 Automatic interceptor (\*)
- 5 One-way valve (\*)
- 6 Gate valve
- 7 Quick-closing gate-valve (outside the tank or boiler rooms)

(\*) Only for installations with gravity, siphon or forced circulation feed systems. If the device installed is a solenoid valve, a timer must be installed to delay the valve closing.

The direct connection of the device without a timer may cause pump breaks.

The pumps that are used can be installed both into single-pipe and double-pipe systems.


**Single-pipe system:** a single pipe drives the oil from the tank to the pump's inlet. Then, from the pump, the pressurised oil is driven to the nozzle: a part comes out from the nozzle while the other part goes back to the pump. In this system, the by-pass plug, if provided, must be removed and the optional return port, on the pump's body, must be sealed by steel plug and washer.

**Double-pipe system:** as for the single pipe system, a pipe that connects the tank to the pump's inlet is used besides another pipe that connects the pump's return port to the tank, as well. The excess of oil goes back to the tank: this installation can be considered self-bleeding. If provided, the inside by-pass plug must be installed to avoid air and fuel passing through the pump.

Burners come out from the factory provided for double-stage systems. They can be suited for single-pipe system (recommended in the case of gravity feed) as described before.

To change from a 1-pipe system to a 2-pipe-system, insert the by-pass plug **G** (as for ccw-rotation- referring to the pump shaft).

**Caution:** Changing the direction of rotation, all connections on top and side are reversed.

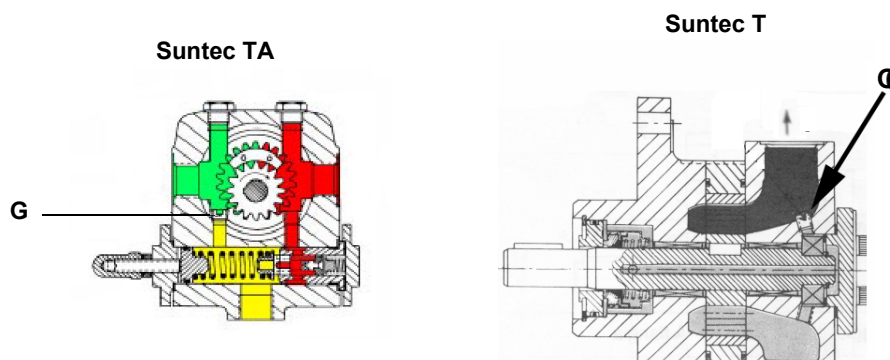

### Bleed

Bleeding in two-pipe operation is automatic: it is assured by a bleed flat on the piston. In one-pipe operation, the plug of a pressure gauge port must be loosened until the air is evacuated from the system.


### Light oil pumps

The pumps provided with these burners can be

- Suntec TA
- Suntec T

| Suntec TA..           |                            |
|-----------------------|----------------------------|
| Oil viscosity         | 3 ÷ 75 cSt                 |
| Oil temperature       | 0 ÷ 150°C                  |
| Min. suction pressure | - 0.45 bar to avoid gasing |
| Max. suction pressure | 5 bar                      |
| Max. return pressure  | 5 bar                      |
| Rotation speed        | 3600 rpm max.              |


- 1 Inlet G1/2
- 2 To the nozzle G1/2
- 3 Return G1/2
- 4 Pressure gauge port G1/4
- 5 Vacuum gauge port G1/4
- 6 Pressure governor

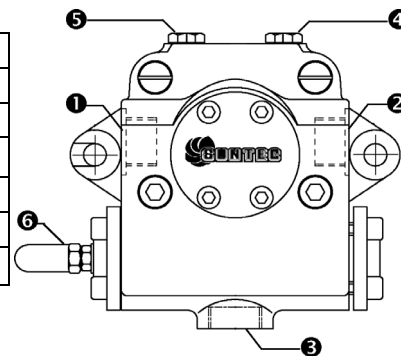

| Suntec T..               |                              |
|--------------------------|------------------------------|
| Viscosity                | 3 - 75 cSt                   |
| Oil temperature          | 0 - 150 °C                   |
| Minimum suction pressure | - 0.45 bar to prevent gasing |
| Maximum suction pressure | 5 bar                        |
| Rated speed              | 3600 rpm max.                |

#### Key

- 1 Inlet G3/4
- 2 Pressure gauge port G1/4
- 3 Vacuum gauge port to measure the inlet vacuum G1/4
- 4 To pressure adjusting valve G3/4

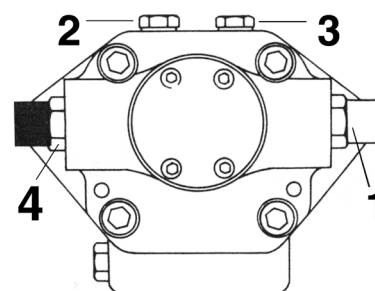

"Note: pump with "C" rotation.

Suntec TV Pressure governor

#### Pressure adjustment

Remove cap-nut 1 and the gasket 2, unscrew the lock nut 4. To increase pressure, twist adjusting screw 3 clockwise.

To decrease the pressure, twist screw counterclockwise. Tight the lock nut 4, refit the gasket 2 and the cap nut 1.

#### Key

- 1 Cap nut
- 2 Gasket
- 3 Adjusting screw
- 4 Lock nut
- 5 Gasket

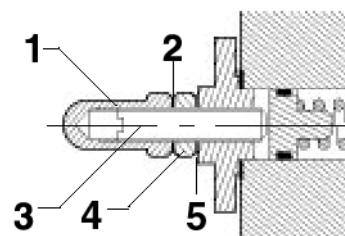


Fig. 8

#### Assembling the light oil flexible hoses

To connect the flexible light oil hoses to the pump, proceed as follows, according to the pump provided:


- 1 remove the closing nuts **A** and **R** on the inlet and return connections of the pump;
- 2 screw the rotating nut of the two flexible hoses on the pump **being careful to avoid exchanging the inlet and return lines**: see the arrows marked on the pump that show the inlet and the return (see previous paragraph).



Suntec TA

### Connecting the burner to the light oil pumping unit

Follow the scheme in the picture below to connect the burner to the oil pumping unit. The pump sends the oil coming from the tank to the burner. The pressure governor makes the oil reach the nozzle at the required pressure, while the excess of oil goes back to the tank. To change the delivery pressure act on the VRM adjusting screw of the delivery pressure governor.

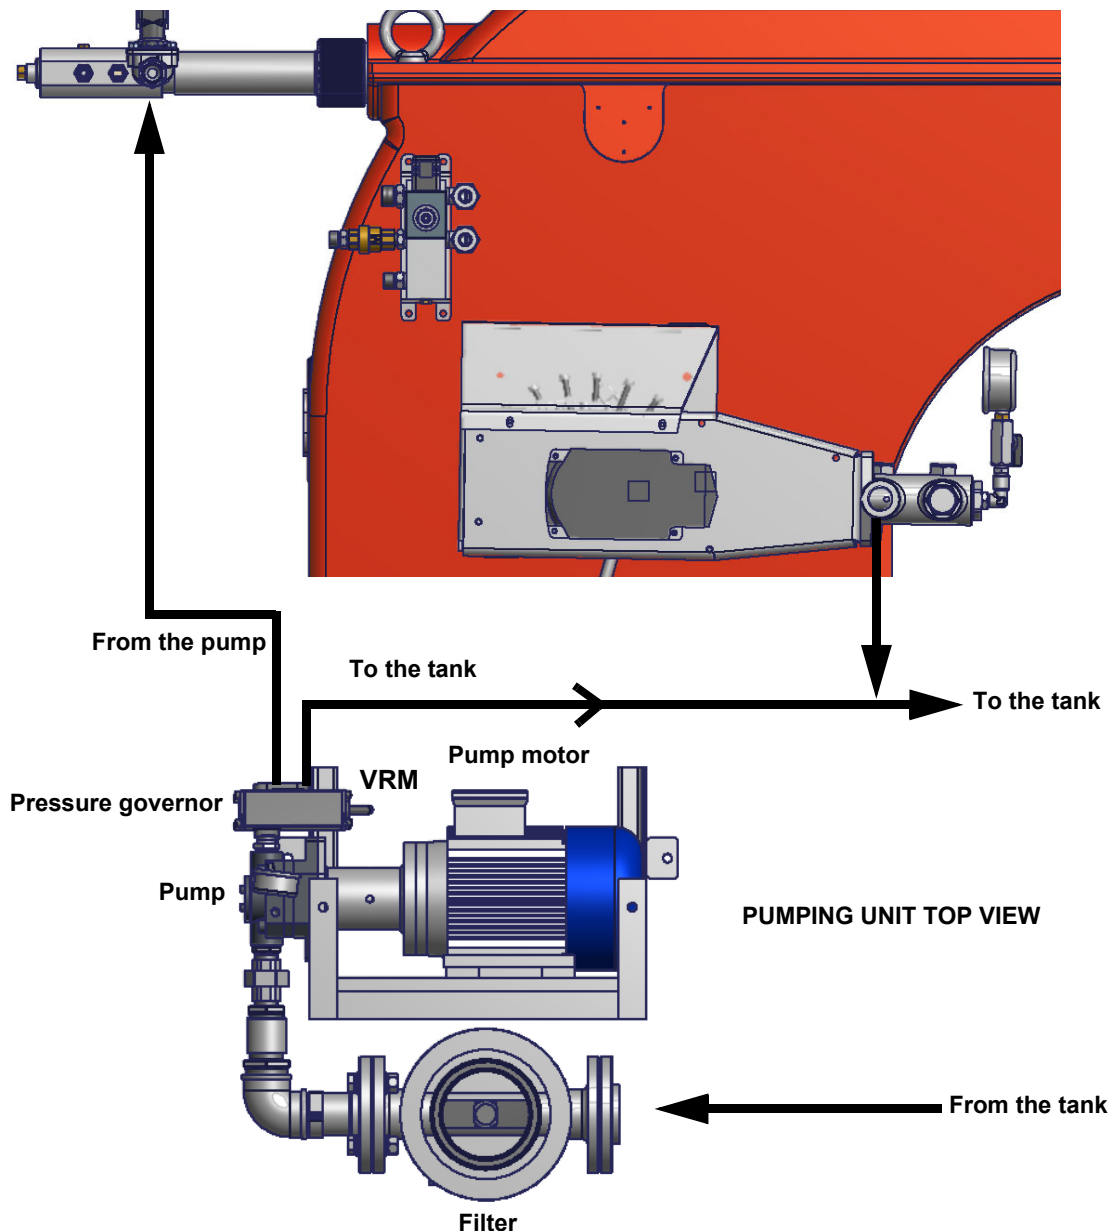

### About the use of fuel pumps

- Make sure that the by-pass plug is not used in a single pipe installation, because the fuel unit will not function properly and damage to the pump and burner motor could result.
- Do not use fuel with additives to avoid the possible formation over time of compounds which may deposit between the gear teeth, thus obstructing them.
- After filling the tank, wait before starting the burner. This will give any suspended impurities time to deposit on the bottom of the tank, thus avoiding the possibility that they might be sucked into the pump.
- On initial commissioning a "dry" operation is foreseen for a considerable length of time (for example, when there is a long suction line to bleed). To avoid damages inject some lubrication oil into the vacuum inlet.
- Care must be taken when installing the pump not to force the pump shaft along its axis or laterally to avoid excessive wear on the joint, noise and overloading the gears.
- Pipes should not contain air pockets. Rapid attachment joint should therefore be avoided and threaded or mechanical seal junctions preferred. Junction threads, elbow joints and couplings should be sealed with removable component. The number of junctions should be kept to a minimum as they are a possible source of leakage.
- Do not use PTFE tape on the suction and return line pipes to avoid the possibility that particles enter circulation. These could deposit on the pump filter or the nozzle, reducing efficiency. Always use O-Rings or mechanical seal (copper or aluminium gaskets) junctions if possible.
- An external filter should always be installed in the suction line upstream of the fuel unit.



### Oil circuit

The fuel is pushed into the pump 1 to the nozzle 3 at the delivery pressure set by the pressure governor. The solenoid valve 2 stops the fuel immission into the combustion chamber. The fuel flow rate that is not burnt goes back to the tank through the return circuit. The spill-back nozzle is feded at constant pressure, while the return line pressure is adjusted by means of the pressure governor controlled by an actuator coupled to an adjusting cam. The fuel amount to be burnt is adjusted by means of the burner actuator according to the adjustments set (see prevoius paragraph).

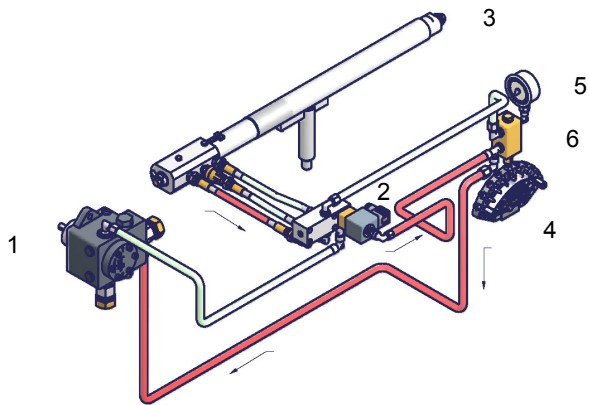


Fig. 9 - Stand-by

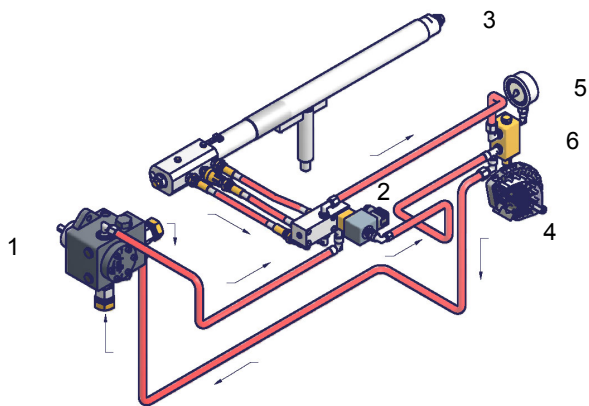


Fig. 10 - Prepurge

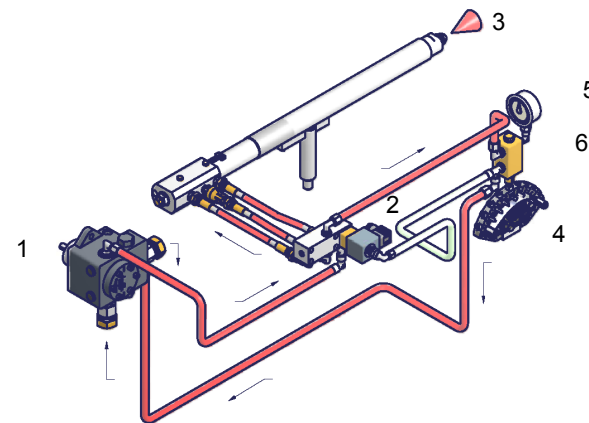


Fig. 11 - Low flame

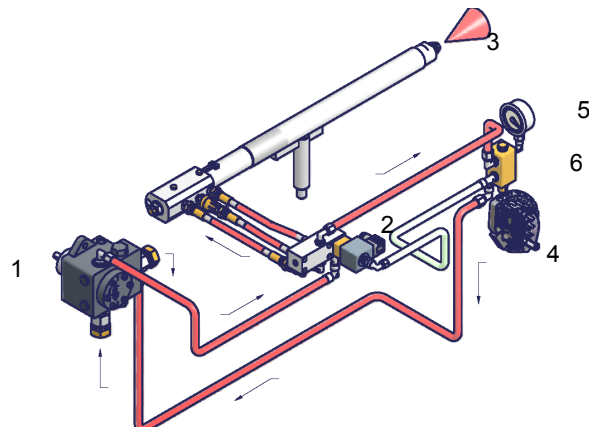


Fig. 12 - High flame

#### Key

- 1 Oil pump
- 2 Oil solenoid valve
- 3 Nozzle
- 4 Adjusting cam
- 5 Pressure gauge
- 6 Pressure governor

---

## Electrical connections



**RESPECT THE BASIC SAFETY RULES. MAKE SURE OF THE CONNECTION TO THE EARTHING SYSTEM. DO NOT REVERSE THE PHASE AND NEUTRAL CONNECTIONS. FIT A DIFFERENTIAL THERMAL MAGNET SWITCH ADEQUATE FOR CONNECTION TO THE MAINS. STRICTLY OBSERVE THE DATA PLATE.**

- Remove the cover from the burner electrical panel.
- Execute the electrical connections to the power supply terminal board, check the direction of the motor (see next paragraph) and replace the cover of the electrical panel.



**WARNING: The burner is provided with a jumper between terminals 6 and 7; in the event of connecting the high/low flame thermostat remove this jumper before connecting the thermostat.**

**IMPORTANT: while connecting electric supply wires to burner's terminal block be sure that ground wire should be longer than phase and neutral ones.**

As far as electrical connections, see the attached wiring diagrams.

### Motor rotation

Once the burner electrical connection is accomplished, remember to check the rotation of the fan motor.

The motors must rotate in the direction showed on their casing. In the event of wrong rotation, reverse the three-phase supply and check again the motor rotation.

**NOTE:** Burners are provided for three-phase 400 V supply, and in the case of three-phase 230 V supply it is necessary to modify the electrical connections inside the terminal box of the electric motor and replace the thermal cutout relay.

## ADJUSTING LIGHT OIL FOLW RATE

### Light oil nozzles

The light oil flow rate can be adjusted choosing a by-pass nozzle that suits the boiler/utilisation's output and setting the delivery and return pressure values according to the values quoted on diagrams on figure and , according to the burner type. Nozzles provided are the following according to the burner type:

TG90 - TG91 - TG92: Bergonzo A3


TG93-510-515-520-525: Fluidics WR2/ UNIGAS M3 45°

As far as reading the pressure values, see next paragraphs.

### FLUIDICS NOZZLE: REFERENCE DIAGRAM (INDICATIVE ONLY)

| DIMENSIONS | FLOW RATE kg/h |     | Indicative pressure on return (bar) |
|------------|----------------|-----|-------------------------------------|
|            | Min            | Max |                                     |
| 40         | 13             | 40  | 19                                  |
| 50         | 16             | 50  | 22                                  |
| 60         | 20             | 60  | 20                                  |
| 70         | 23             | 70  | 23                                  |
| 80         | 26             | 80  | 23                                  |
| 90         | 30             | 90  | 22                                  |
| 100        | 33             | 100 | 22                                  |
| 115        | 38             | 115 | 21                                  |
| 130        | 43             | 130 | 22                                  |
| 145        | 48             | 145 | 21                                  |
| 160        | 53             | 160 | 21                                  |
| 180        | 59             | 180 | 22                                  |
| 200        | 66             | 200 | 21                                  |
| 225        | 74             | 225 | 22                                  |
| 250        | 82             | 250 | 22                                  |
| 275        | 91             | 275 | 22                                  |
| 300        | 99             | 300 | 23                                  |
| 330        | 109            | 330 | 23                                  |
| 360        | 119            | 360 | 22                                  |
| 400        | 132            | 400 | 22                                  |
| 450        | 148            | 450 | 22                                  |
| 500        | 165            | 500 | 22                                  |
| 550        | 181            | 550 | 22                                  |
| 600        | 198            | 600 | 23                                  |
| 650        | 214            | 650 | 23                                  |
| 700        | 231            | 700 | 23                                  |
| 750        | 250            | 750 | 23                                  |
| 800        | 267            | 800 | 22                                  |


Tab. 1

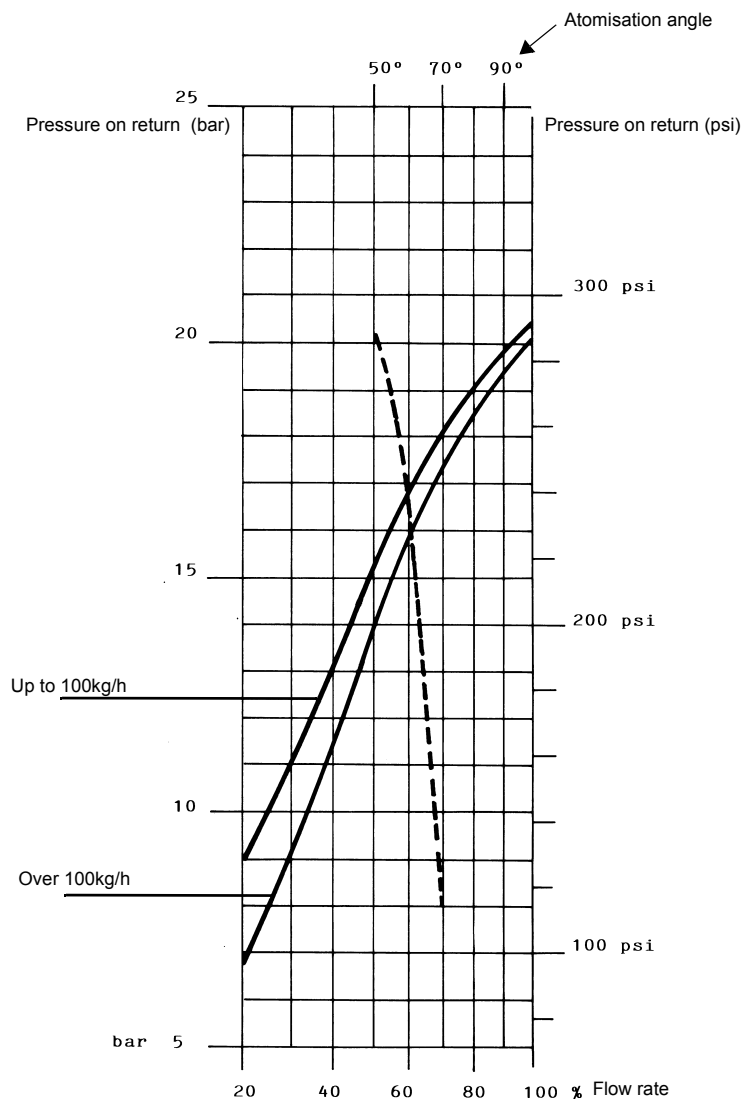


**NOZZLE SUPPLY PRESSURE = 25 bar**

----- Atomisation angle according to the return pressure  
 ————— % Flow rate  
 viscosity at nozzle = 5 cSt



**ATTENTION! To achieve the maximum flow rate close completely the return line.**

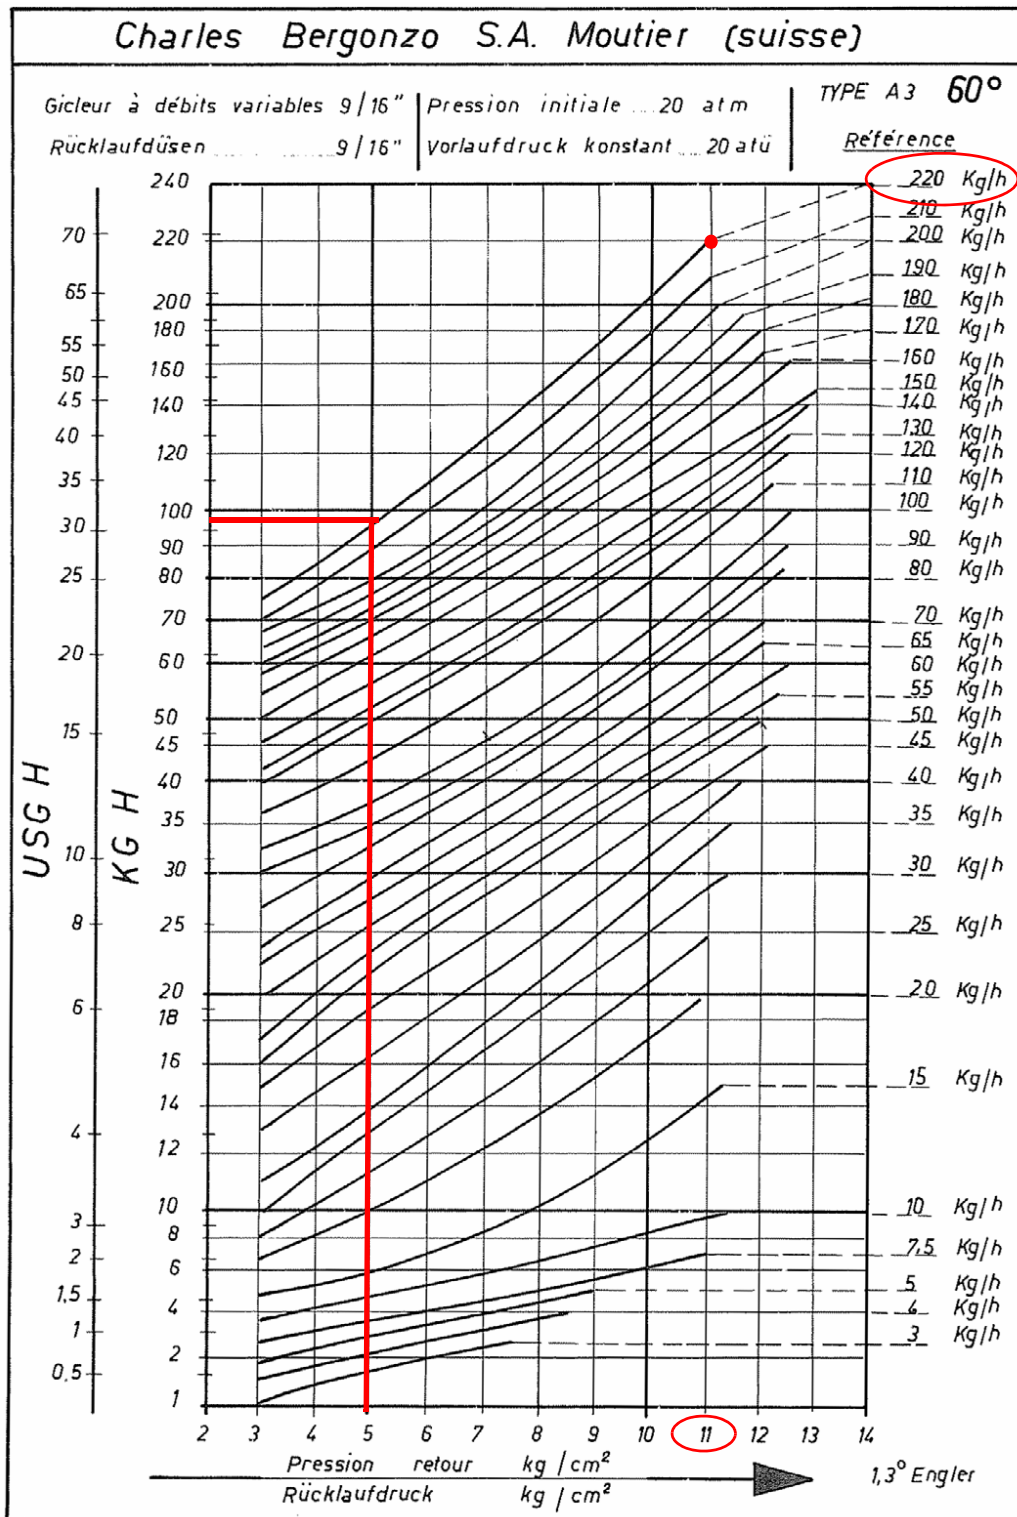




**Example (Bergonzo):** if a 220kg/h flow rate BERGONZO nozzle is provided, set the return pressure at 11bar, supply at 20bar on the delivery to get a 220kg/h flow rate. If the return pressure needed is 5bar, instead, act on the **V** adjusting screw on the pressure governor. The flow rate will then be about 95kg/h (see the example showed on the Bergonzo diagram).

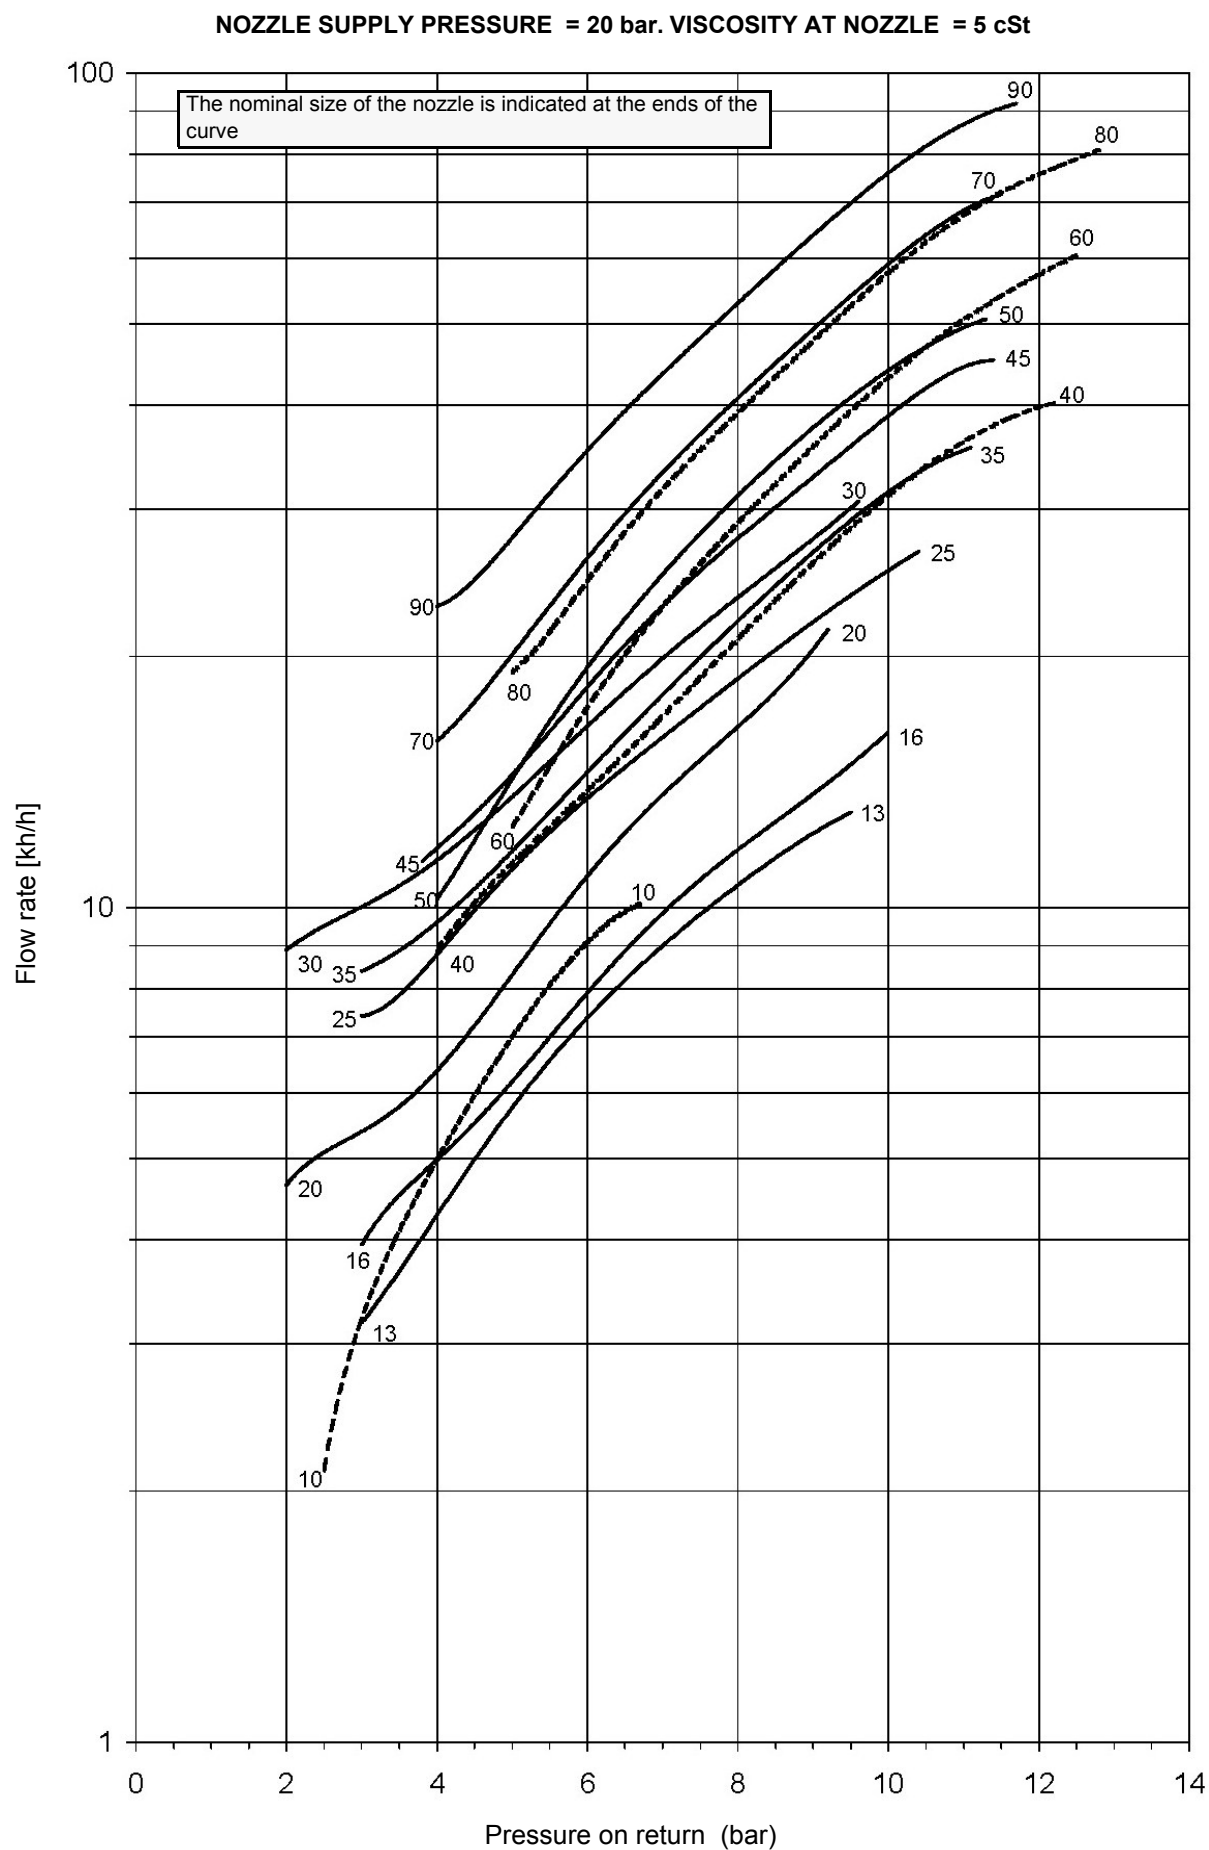

NOZZLE SUPPLY PRESSURE = 20 bar. VISCOSITY AT NOZZLE = 5 cSt

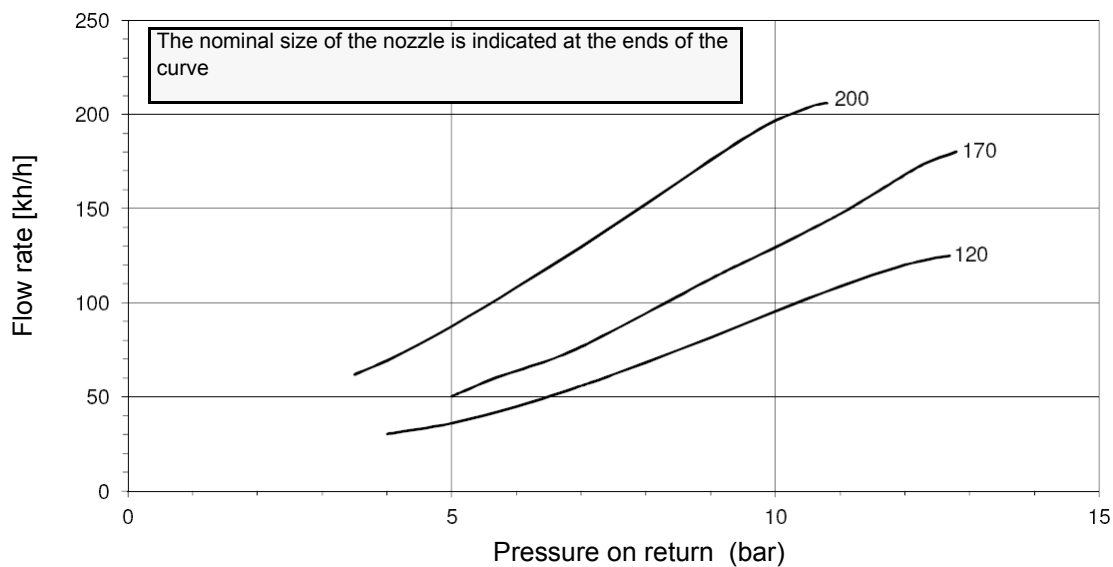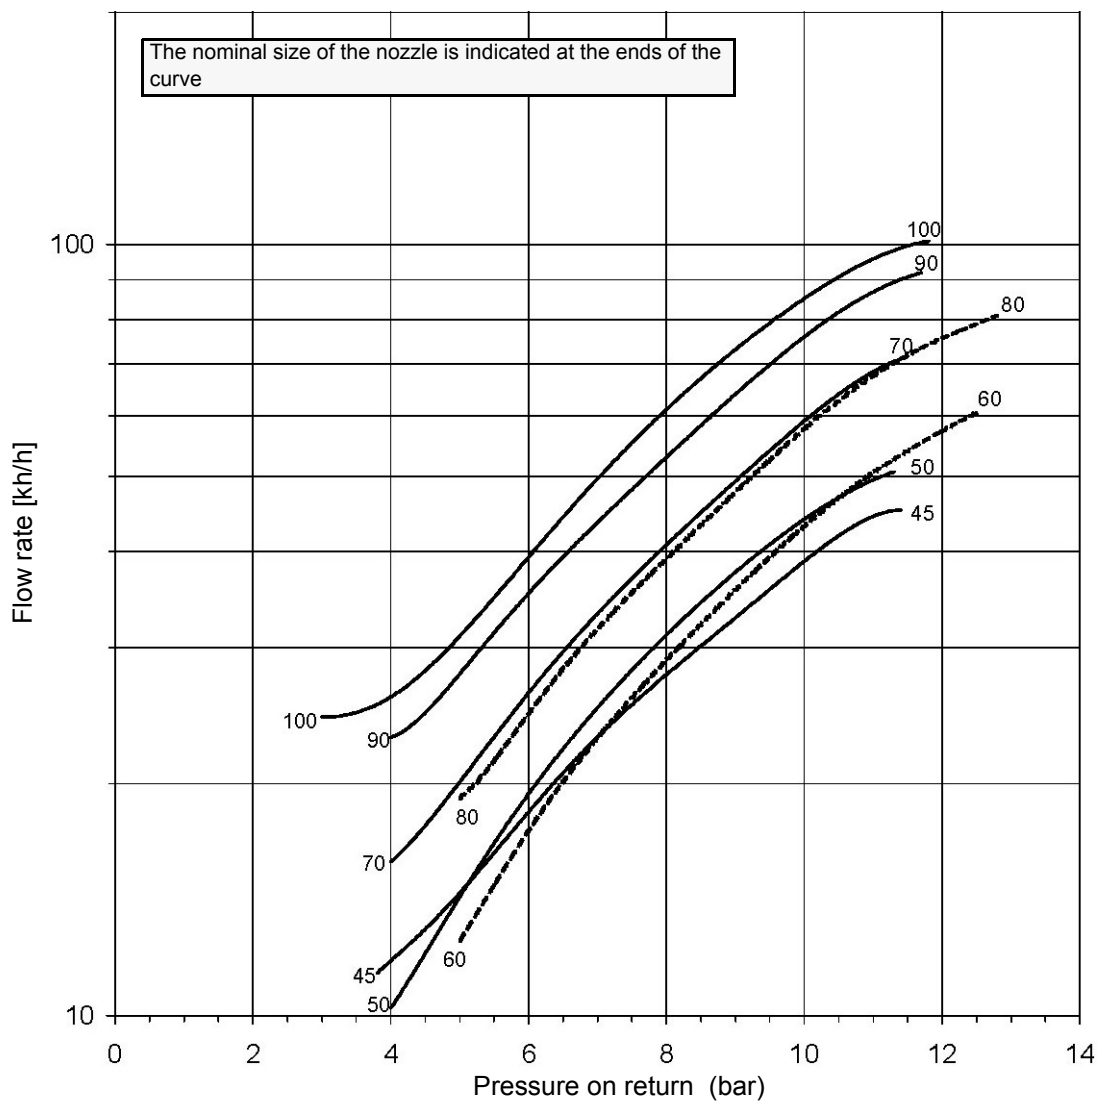

NOZZLE SUPPLY PRESSURE = 20 bar. VISCOSITY AT NOZZLE = 5 cSt

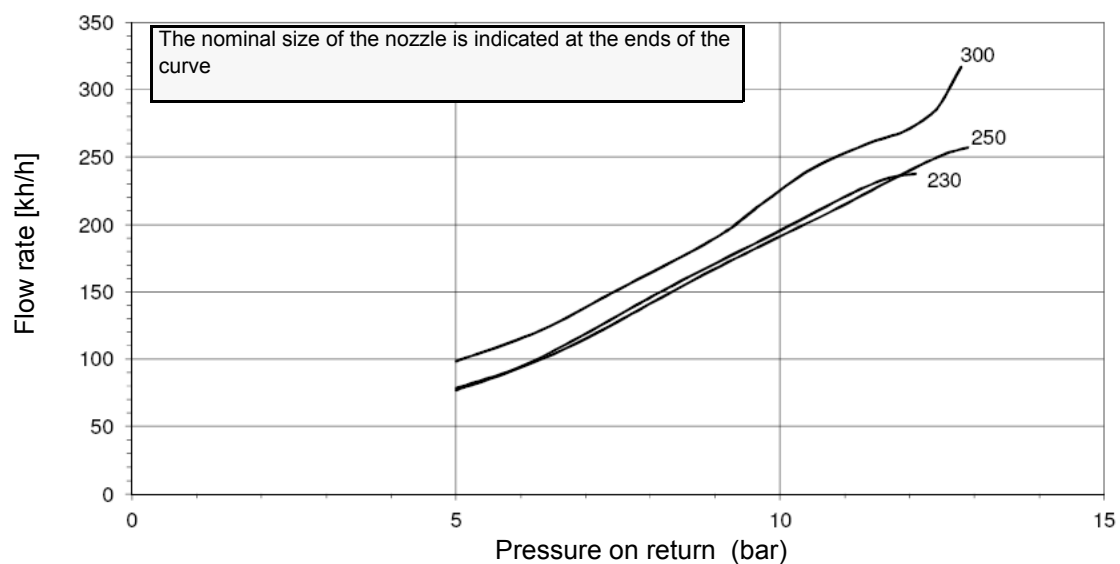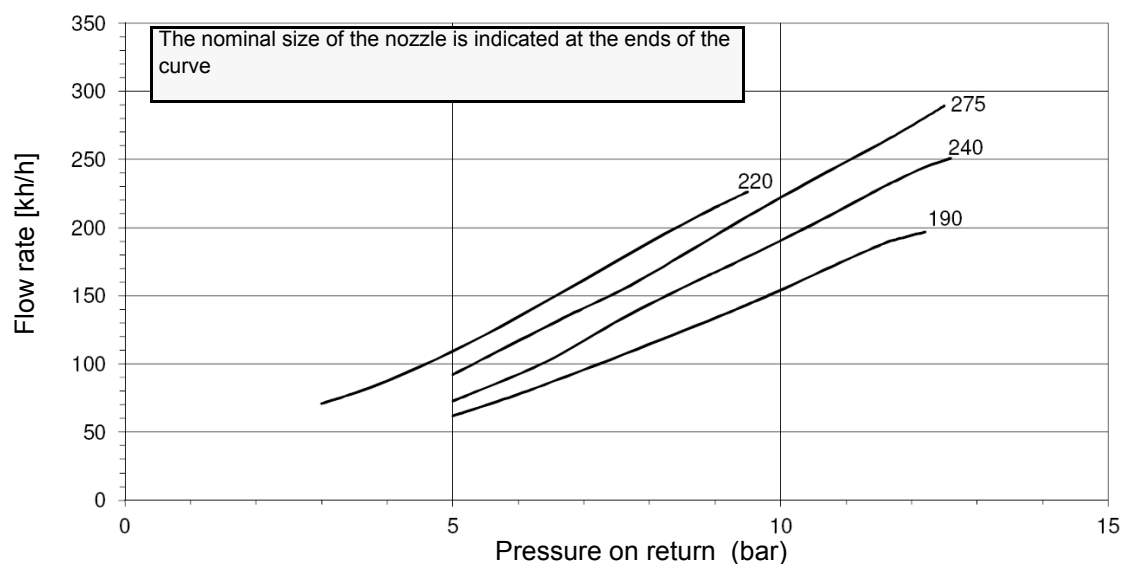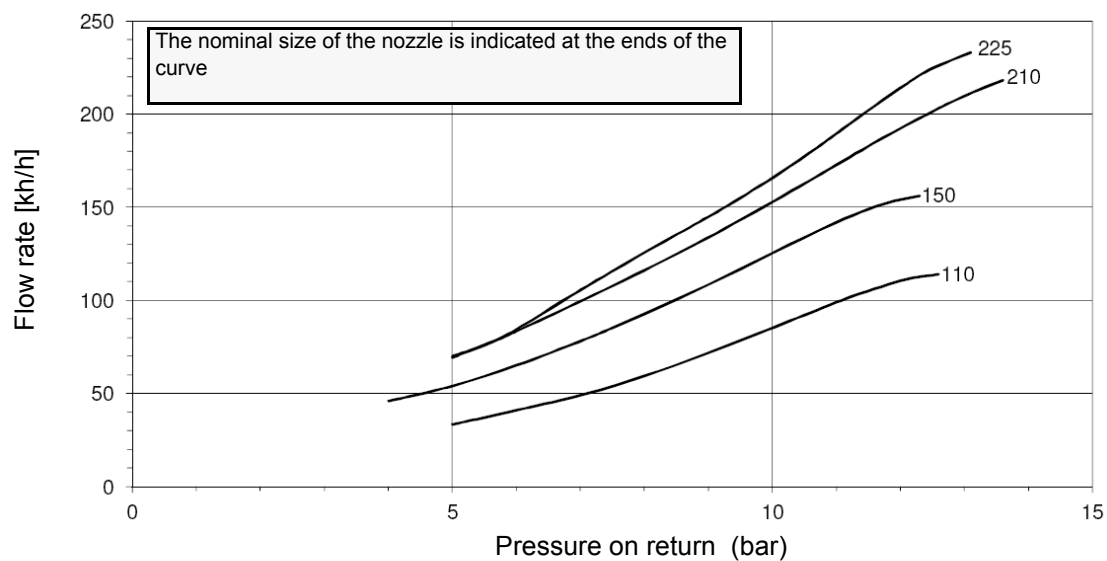



## Adjustments - brief description

|                                                                                  |                                                                                                                                                                                                                                                                |
|----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>ATTENTION:</b> before starting the burner up, be sure that the manual cutoff valves are open and check that the pressure upstream the gas train complies the value quoted on paragraph "Technical specifications". Be sure that the mains switch is closed. |
|                                                                                  | Before starting up the burner, make sure that the return pipe to the tank is not obstructed. Any obstruction would cause the pump seal to break.                                                                                                               |
|                                                                                  | <b>ATTENTION:</b> During commissioning operations, do not let the burner operate with insufficient air flow (danger of formation of carbon monoxide); if this should happen, make the fuel decrease slowly until the normal combustion values are achieved.    |

|                                                                                   |                                                                                                       |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
|  | <b>IMPORTANT!</b> the combustion air excess must be adjusted according to the in the following chart: |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|

| Recommended combustion parameters |                                 |                                |
|-----------------------------------|---------------------------------|--------------------------------|
| Fuel                              | Recommended (%) CO <sub>2</sub> | Recommended (%) O <sub>2</sub> |
| Light oil                         | 11.5 ÷ 13                       | 2.9 ÷ 4.9                      |

Adjust the air and fuel flow rates at the maximum output ("high flame") first, by means of the air damper and the adjusting cam respectively.


- Check that the combustion parameters are in the suggested limits.
- Check the flow rate measuring it on the counter.
- Then, adjust the combustion values corresponding to the points between maximum and minimum: set the shape of the adjusting cam foil. The adjusting cam sets the air/fuel ratio in those points, regulating the opening-closing of the fuel governor.
- Set, now, the low flame output, acting on the low flame microswitch of the actuator in order to avoid the low flame output increasing too much or that the flues temperature gets too low to cause condensation in the chimney.

### Adjustment procedure

To change the burner setting during the testing in the plant, follow the next procedure, according to the actuator model provided (mod. Berger STM30.. or mod. Siemens SQL..).

#### Oil Flow Rate Settings by means of Siemens SQM40../Berger STM30.. actuator

- 1 Check the fan motor rotation.
- 2 With the electrical panel open, prime the oil pump acting on the related **CP** contactor (see next picture): check the pump motor rotation and keep pressed for some seconds until the oil circuit is charged;

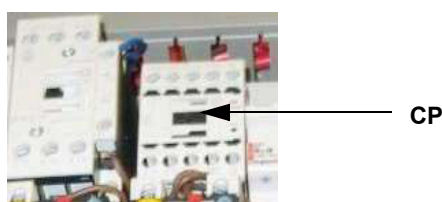

- 3 bleed the air from the **M** pressure gauge port (Fig. 13) by loosening the cap without removing it, then release the contactor.


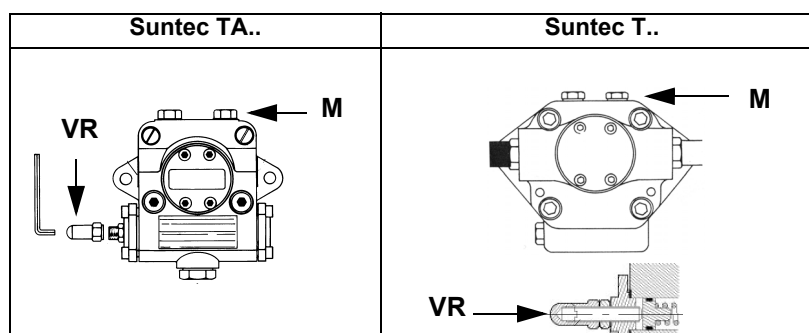


Fig. 13


- 4 Before starting the burner up, drive the high flame actuator microswitch matching the low flame one (in order to let the burner operate at the lowest output) to achieve safely the high flame stage .
- 5 Turn the burner on by means of its main switch: if the burner locks (LED on in the control panel) press the RESET button on the

control panel - see chapter "OPERATION" on page 28.

- 6 be sure that the actuator cam for the "Startup enabling signal" (when used) is about 5° more than the ignition cam;
- 7 start the burner up by means of the thermostat series and wait until the pre-purge time comes to an end;
- 8 drive the burner to high flame stage, by means of the thermostat **TAB**.
- 9 Then move progressively the microswitch to higher values until it reaches the high flame position; always check the combustion values and eventually adjusting the oil pressure (see next step).

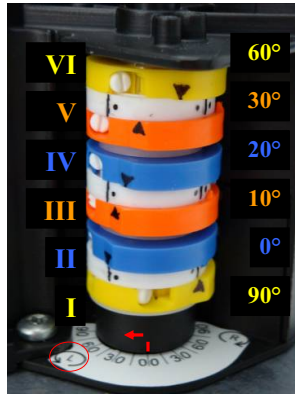

MAN-AUTO

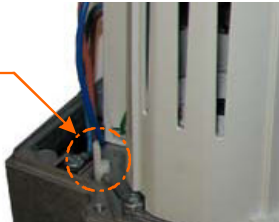

**Actuator cams**

- I High flame
- II Stand-by and Ignition
- III Low flame

Siemens SQM40

- 10 the nozzle supply pressure is already factory-set and must not be changed. Only if necessary, adjust the supply pressure as follows (see related paragraph); insert a pressure gauge into the port showed on Fig. 14 and act on on the pump adjusting screw **VR** (see Fig. 13) as to get the nozzle pressure at 20bar or 25bar (according to the nozzle model: Bergonzo or Fluidics nozzle - see page 24).

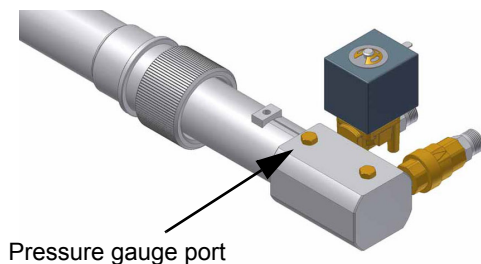


Fig. 14


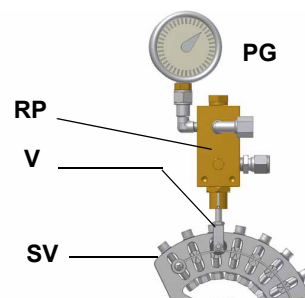



Fig. 15

- 11 in order to get the maximum oil flow rate, adjust the pressure (reading its value on the **PG** pressure gauge) without changing the air flow rate set during the gas operation adjustments (see previous paragraph): checking always the combustion parameters, the adjustment is to be performed by means of the **SV** adjusting cam screw (see picture) when the cam has reached the high flame position.
- 12 To adjust the **air flow rate in the high flame stage**, loose the **RA** nut and screw **VRA** as to get the desired air flow rate: moving the rod **TR** towards the air damper shaft, the air damper opens and consequently the air flow rate increases, moving it far from the shaft the air damper closes and the air flow rate decreases.

**Note:** once the procedure is performed, be sure that the blocking nut **RA** is fasten. Do not change the position of the air damper rods.

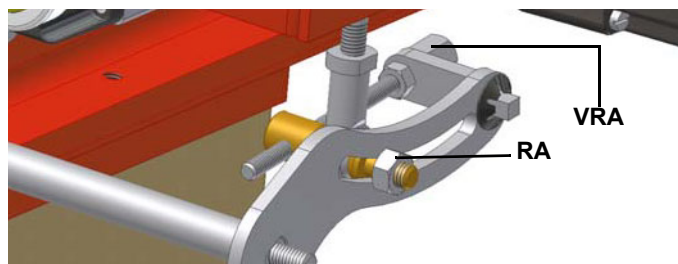


- 13 Only if necessary, change the combustion head position: to let the burner operate at a lower output, loose the **VB** screw and move progressively back the combustion head towards the MIN position, by turning clockwise the **VRT** ring nut. Fasten **VB** screw when the adjustment is accomplished.

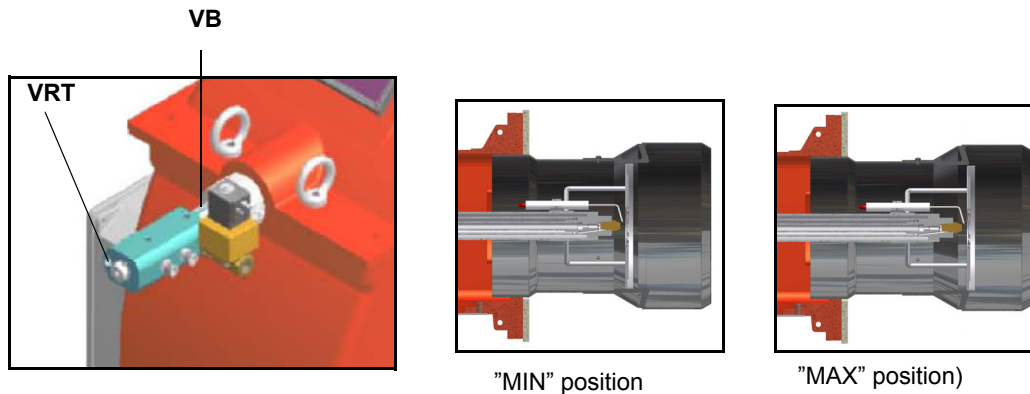

**Attention!** if it is necessary to change the head position, repeat the air and gas adjustments described above.

- 14 the air and oil rate are now adjusted at the maximum power stage, go on with the point to point adjustment on the **SV** adjusting cam as to reach the minimum output point.

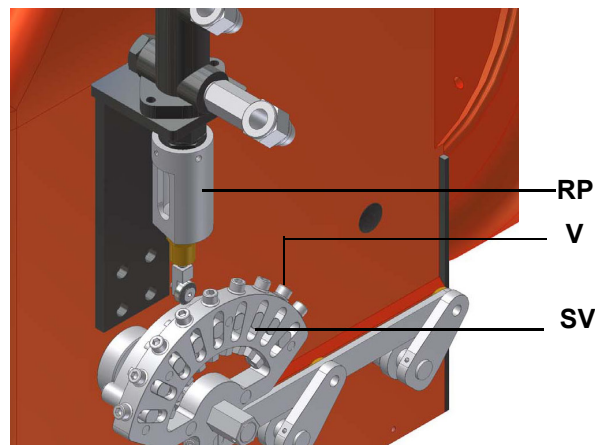

- 15 as for the point-to-point regulation in order to set the cam foil shape, move the low flame microswitch (cam III) a little lower than the maximum position (90°);
- 16 set the **TAB** thermostat to the minimum in order that the actuator moves progressively towards the low flame position;
- 17 move cam III (low flame) towards the minimum to move the actuator towards the low flame until the two bearings find the adjusting screw that refers to a lower position: screw **V** to increase the rate, unscrew to decrease, in order to get the pressure as shown on diagram, according to the requested rate.
- 18 Move again cam III towards the minimum to meet the next screw on the adjusting cam and repeat the previous step; go on this way as to reach the desired low flame point.
- 19 The low flame position must never match the ignition position that is why cam III must be set 20°- 30° more than the ignition position.

Turn the burner off; then start it up again. If the adjustment is not correct, repeat the previous steps.

### Fully modulating burners

To adjust the fully-modulating burners, use the **CMF** switch on the burner control panel (see next picture), instead of the **TAB** thermostat as described on the previous paragraphs about the progressive burners. Go on adjusting the burner as described before, paying attention to use the **CMF** switch instead of **TAB**.

The **CMF** position sets the operating stages: to drive the burner to the high-flame stage, set **CMF=1**; to drive it to the low-flame stage, set **CMF=2**.

To move the adjusting cam set **CMF=1** or **CMF=2** and then **CMF=0**.

- CMF = 0 stop
- CMF = 1 high flame operation
- CMF = 2 high flame operation flame operation
- CMF = 3 automatic operation

### Maximum oil pressure switch

The oil pressure switch on the return line, checks that the pressure does not exceed a default value. This value must not be higher than the maximum acceptable pressure on the return line (this value is reported on the specification table). A pressure change on the return line could affect the combustion parameters: for this reason, the pressure switch must be set, say, at 20% over the pressure recorded during the combustion adjustment. The factory setting is 4 bar.

It is recommended to verify that the combustion parameters are within the range of acceptable values even against a pressure variation that gets close to the limit of the pressure switch.

This check should be carried out along the whole range of the burner output.



In case of unacceptable values, reduce from 20% to 15% the overpressure; later on, repeat the adjustments described above.

### Minimum oil pressure switch (when provided)

The minimum oil pressure switch on the inlet line, checks that the pressure does not drop below a default value. The pressure switch must be set, say, at 10% under the pressure at the nozzle.

### Oil pressure switch adjustment

Follow the below instruction, according to the pressure switch installed.
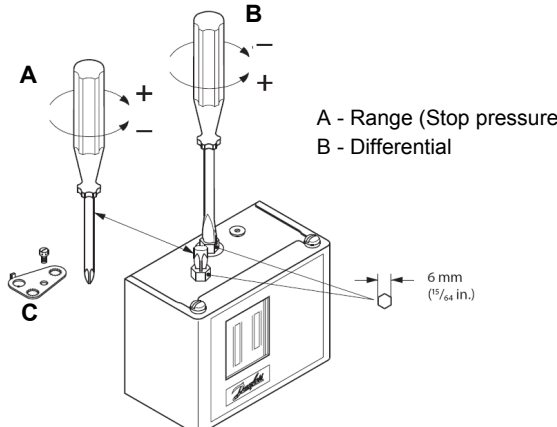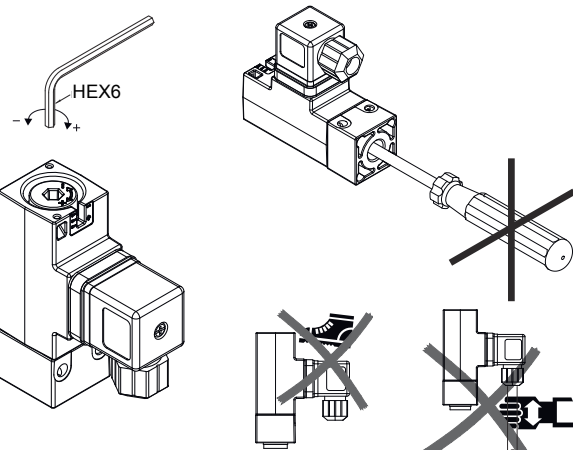
|                                                                                                                                                                                                                                                 |                                                                                                                                     |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|
|  <p>A - Range (Stop pressure)<br/>B - Differential</p> <p>6 mm<br/>(1/4 in.)</p> <p>NB: Remove lockplate (C) before adjustment</p> <p><b>Danfoss KP..</b></p> |  <p>HEX6</p> <p><b>Trafag Picostat 9B4..</b></p> |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------|

### Calibration of air pressure switch

To calibrate the air pressure switch, proceed as follows:

- Remove the transparent plastic cap.
- Once air and gas setting have been accomplished, startup the burner.
- During the pre-purge phase of the operation, turn slowly the adjusting ring nut **VR** in the clockwise direction until the burner lockout, then read the value on the pressure switch scale and set it to a value reduced by 15%.
- Repeat the ignition cycle of the burner and check it runs properly.
- Refit the transparent plastic cover on the pressure switch.

**LIMITATIONS OF USE**

THE BURNER IS AN APPLIANCE DESIGNED AND CONSTRUCTED TO OPERATE ONLY AFTER BEING CORRECTLY CONNECTED TO A HEAT GENERATOR (E.G. BOILER, HOT AIR GENERATOR, FURNACE, ETC.), ANY OTHER USE IS TO BE CONSIDERED IMPROPER AND THEREFORE DANGEROUS.

THE USER MUST GUARANTEE THE CORRECT FITTING OF THE APPLIANCE, ENTRUSTING THE INSTALLATION OF IT TO QUALIFIED PERSONNEL AND HAVING THE FIRST COMMISSIONING OF IT CARRIED OUT BY A SERVICE CENTRE AUTHORIZED BY THE COMPANY MANUFACTURING THE BURNER.

A FUNDAMENTAL FACTOR IN THIS RESPECT IS THE ELECTRICAL CONNECTION TO THE GENERATOR'S CONTROL AND SAFETY UNITS (CONTROL THERMOSTAT, SAFETY, ETC.) WHICH GUARANTEES CORRECT AND SAFE FUNCTIONING OF THE BURNER.

THEREFORE, ANY OPERATION OF THE APPLIANCE MUST BE PREVENTED WHICH DEPARTS FROM THE INSTALLATION OPERATIONS OR WHICH HAPPENS AFTER TOTAL OR PARTIAL TAMPERING WITH THESE (E.G. DISCONNECTION, EVEN PARTIAL, OF THE ELECTRICAL LEADS, OPENING THE GENERATOR DOOR, DISMANTLING OF PART OF THE BURNER).

NEVER OPEN OR DISMANTLE ANY COMPONENT OF THE MACHINE.

OPERATE ONLY THE MAIN SWITCH, WHICH THROUGH ITS EASY ACCESSIBILITY AND RAPIDITY OF OPERATION ALSO FUNCTIONS AS AN EMERGENCY SWITCH, AND ON THE RESET BUTTON.

IN THE EVENT OF REPEATED LOCKOUTS, DO NOT PERSIST WITH THE RESET BUTTON AND CONTACT QUALIFIED PERSONNEL WHO WILL PROCEED TO ELIMINATE THE MALFUNCTION.

**WARNING:** DURING NORMAL OPERATION THE PARTS OF THE BURNER NEAREST TO THE GENERATOR (COUPLING FLANGE) CAN BECOME VERY HOT, AVOID TOUCHING THEM SO AS NOT TO GET BURNT.

**OPERATION**

**ATTENTION:** before starting the burner up, be sure that the manual cutoff valves are open . Be sure that the mains switch is closed.

- 1 Set to the ON position the switch on the control panel of the burner.
- 2 Check the control box is not in the lockout position; in such a case reset it by the reset pushbutton.
- 3 Check the series of thermostats (or pressure switches) sends the burner the signal to operate.
- 4 The startup sequence begins: the control box ignites the fan/pump motor and energises the ignition transformer as well.
- 5 At the end of the pre-purge stage, the light oil solenoid valve EVG is energised and the burner is on.
- 6 The ignition transformer is energized for few seconds after the ignition of the flame (post-ignition time) and at the end of this time is de-energised.
- 7 After the ignition the actuator moves to the high flame position for some seconds, then the operation begins and the burner switches to high flame or to low flame, according to the plant demand.

At least once a year carry out the maintenance operations listed below. In the case of seasonal servicing, it is recommended to carry out the maintenance at the end of each heating season; in the case of continuous operation the maintenance is carried out every 6 months.

**WARNING: ALL OPERATIONS ON THE BURNER MUST BE CARRIED OUT WITH THE MAINS DISCONNECTED AND THE FUEL MANUAL CUTOFF VALVES CLOSED!**

**ATTENTION: READ CAREFULLY THE "WARNINGS" CHAPTER AT THE BEGINNING OF THIS MANUAL.**

### ROUTINE MAINTENANCE

- Check and clean the cartridge of the fuel filter, replace it if necessary (see next paragraph);
- carefully check for leaks, the fuel flexible hoses;
- check and clean the filter on the fuel pump: filter must be thoroughly cleaned at least once in a season to ensure correct working of the fuel unit. To remove the filter, unscrew the four screws on the cover. When reassemble, make sure that the filter is mounted with the feet toward the pump body. If the gasket between cover and pump housing should be damaged, it must be replaced;
- remove, check and clean the combustion head (page 30); when reassembling, carefully observe the measures on page 31;
- check the ignition electrodes and their ceramic insulators, clean, adjust and replace if necessary (page 31);
- remove and clean the oil nozzles (IMPORTANT: do not clean the nozzles using metallic or sharp utensils, use only solvents or steam); at the end of maintenance operations, refit the burner, turn it on and check the combustion. If in doubt, replace the defective nozzle/s. In case of intensive use of the burner, the nozzles must be replaced at the end of the working season;
- check and carefully clean the flame detection photoresistor (page 31), if necessary replace it and, if in doubt, check the detection current;
- clean and grease leverages and rotating parts.

### Light oil filter maintenance

For correct and proper servicing, proceed as follows:


- 1 shut off fuel in the line section being serviced;
- 2 unscrew the tray;
- 3 remove the filter cartridge from its support and wash it with petrol or replace if necessary; check seal O-Ring, replace if necessary;
- 4 reassemble the tray and restore fuel flow.



## Removing the combustion head

- 1 Remove the top cover **C**;
- 2 remove the photoresistor from its seat;
- 3 unscrew the revolving connectors (**E** in figure) on the fuel pipes (use 2 spanners to avoid loosening the connections attached to the distributor block);
- 4 loosen **VRT** screw to free the threaded rod **AR**, then screw out the 2 screws **V** holding the washer **R** and the screw **VRT** again;
- 5 remove the whole assembly as shown in figure;
- 6 clean the combustion head by means of a vacuum cleaner; to scrape off the scale use a metallic brush.

Note: to replace the combustion head reverse the procedure described above.

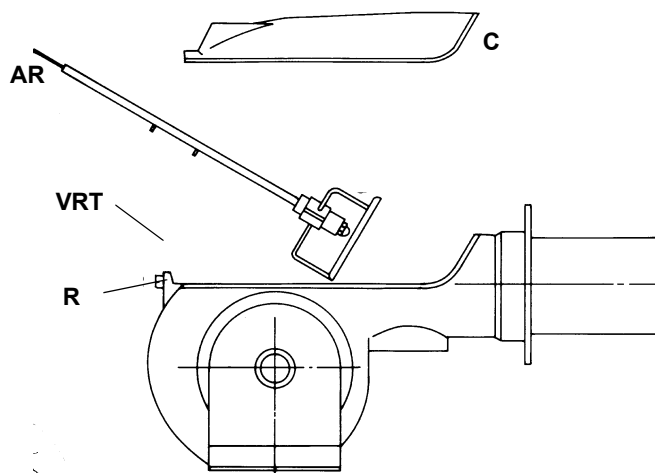


## Removing the oil gun

Once the combustion head is removed, as described before, remove the oil gun as follows:

- 1 unscrew the connectors from the 2 oil pipes (**E** in figure) using 2 spanners to avoid loosening the connections attached to the distributor block);
- 2 loosen the screw **VB**
- 3 remove the gun with the light oil nozzle holder.
- 4 clean the oil gun by means of a vacuum cleaner; to scrape off the scale use a metallic brush
- 5 replace the oil gun, if necessary.

**Note:** To re-assemble, follow the procedure above in reversed order.

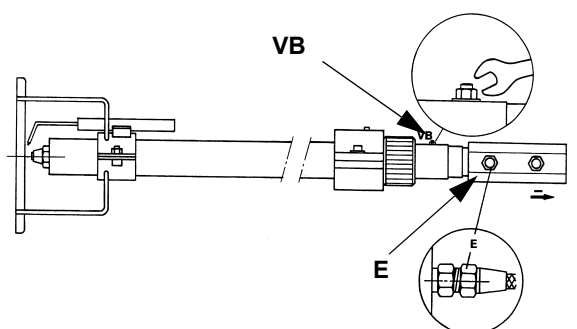

## Correct position of electrodes and nozzle

|                                                                                  |                                                                                                                                                                                                                                                   |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>ATTENTION:</b> avoid the ignition electrodes to get in touch with metallic parts (blast tube, head, etc.), otherwise the boiler's operation would be compromised. Check the electrodes position after any intervention on the combustion head. |
|----------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

To guarantee a good ignition the measures shown on the next picture Fig. 16 must be observed.  
Be sure to tighten the screw on the electrodes group before reassembling the combustion head.

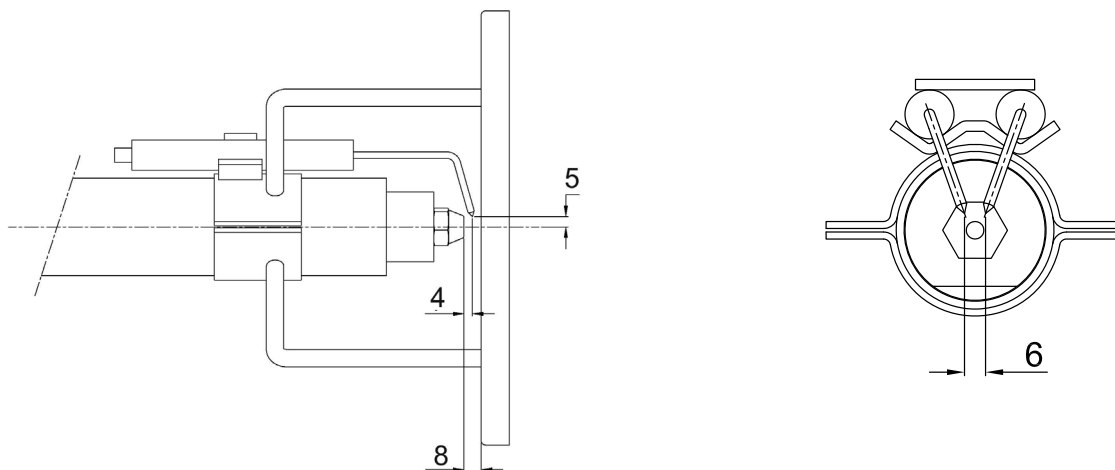


Fig. 16

## Replacing the ignition electrodes

|                                                                                    |                                                                                                                                                                                                                                                   |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <b>ATTENTION:</b> avoid the ignition electrodes to get in touch with metallic parts (blast tube, head, etc.), otherwise the boiler's operation would be compromised. Check the electrodes position after any intervention on the combustion head. |
|------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

To replace the ignition electrodes, proceed as follows:

- 1 remove the burner cover;
- 2 disconnect the electrodes cables;
- 3 remove the combustion head (see par. "Removing the combustion head");
- 4 loose screw (B) that fasten the ignition electrodes;
- 5 remove the electrodes and replace them, referring to the values quoted on Fig. 16.

## Cleaning and replacing the detection photoresistor

When cleaning the photoresistive detector, always use a clean cloth. If necessary, remove it from its slot to replace it.



### Checking the detection current

To measure the detection signal follow the diagram in Fig. 26. If the signal is not in the advised range, check the electrical contacts, the cleaning of the combustion head, the position of the photoresistor and if necessary replace it.

**series 9x:** LMO

**series 5xx:** LAL25

Minimum current intensity with flame

LMO: 45 $\mu$ A

LAL25: 8 $\mu$ A

Maximum current intensity without flame:

LMO: 5.5 $\mu$ A

LAL25: 0.8 $\mu$ A

Maximum possible current intensity with flame:

LMO: 100 $\mu$ A

LAL25: 30 $\mu$ A

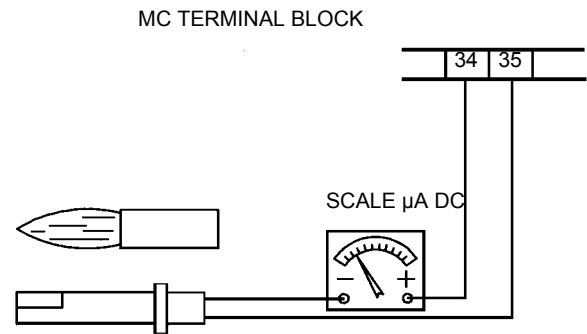


Fig. 17

### Seasonal stop

To stop the burner in the seasonal stop, proceed as follows:

- 1 turn the burner's main switch to 0 (Off position)
- 2 disconnect the power mains
- 3 close the fuel cock of the supply line

### Burner disposal

In case of disposal, follow the instructions according to the laws in force in your country about the "Disposal of materials".

## TROUBLESHOOTING

|                                                 | THE BURNER<br>DOESN'T START | THE BURNER<br>REPEATS PRE-<br>PURGE | NOISY FUEL PUMP | THE BURNER<br>DOESN'T START<br>AND STOPS | THE BURNER<br>STARTS AND<br>STOPS | THE BURNER<br>DOESN'T SWITCH<br>TO HIGH FLAME | THE BURNER<br>STOPS DURING<br>OPERATION | THE BURNER STOPS<br>AND REPEATS THE<br>CYCLE DURING OPE-<br>RATION |
|-------------------------------------------------|-----------------------------|-------------------------------------|-----------------|------------------------------------------|-----------------------------------|-----------------------------------------------|-----------------------------------------|--------------------------------------------------------------------|
| MAIN SWITCH OPEN                                | ●                           |                                     |                 |                                          |                                   |                                               |                                         |                                                                    |
| LINE FUSE INTERVENTION                          | ●                           |                                     |                 |                                          |                                   |                                               |                                         |                                                                    |
| MAX. PRESSURE SWITCH FAULT                      | ●                           |                                     |                 |                                          |                                   |                                               |                                         | ●                                                                  |
| FAN THERMAL CUTOUT INTERVENTION                 | ●                           |                                     |                 |                                          |                                   |                                               |                                         |                                                                    |
| AUXILIARY RELAIS FUSES INTERVENTION             | ●                           |                                     |                 |                                          |                                   |                                               |                                         |                                                                    |
| CONTROL BOX FAULT                               | ●                           | ●                                   |                 | ●                                        | ●                                 |                                               | ●                                       |                                                                    |
| SERVOCONTROL FAULT                              |                             |                                     |                 |                                          |                                   | ●                                             |                                         |                                                                    |
| SMOKEY FLAME                                    |                             |                                     |                 |                                          | ●                                 |                                               | ●                                       |                                                                    |
| IGNITION TRANSFORMER FAULT                      |                             |                                     |                 | ●                                        |                                   |                                               |                                         |                                                                    |
| IGNITION ELECTRODE DIRTY OR WRONG<br>POSITIONED |                             |                                     |                 | ●                                        |                                   |                                               |                                         |                                                                    |
| DIRTY NOZZLE                                    |                             |                                     |                 | ●                                        |                                   |                                               | ●                                       |                                                                    |
| FUEL SOLENOID VALVE DEFECTIVE                   |                             |                                     |                 | ●                                        |                                   |                                               | ●                                       |                                                                    |
| PHOTORESISTOR DIRTY OR DEFECTIVE                |                             |                                     |                 |                                          | ●                                 |                                               | ●                                       |                                                                    |
| HI-LO FLAME THERMOSTAT DEFECTIVE                |                             |                                     |                 |                                          |                                   | ●                                             |                                         |                                                                    |
| WRONG POSITION OF SERVOCONTROL<br>CAMS          |                             |                                     |                 |                                          |                                   | ●                                             |                                         |                                                                    |
| FUEL PRESSURE TOO LOW                           |                             |                                     |                 | ●                                        |                                   |                                               |                                         |                                                                    |
| DIRTY FUEL FILTERS                              |                             |                                     | ●               | ●                                        |                                   |                                               | ●                                       |                                                                    |

## SIEMENS LAL... CONTROL BOX

### Use

- Control and supervision of oil atomization burners
- For burners of medium to high capacity
- For intermittent operation (at least one controlled shutdown every 24 hours)
- Universally applicable for multistage or modulating burners

### Housing and plug-in base

- Made of impact-proof and heat-resistance black plastic
- Lockout reset button with viewing window; located behind it:
- Lockout warning lamp
- Lockout indicator coupled to the spindle of the sequence switch and visible in the transparent lockout reset button
- uses easy-to-remember symbols to indicate the type of fault and the point in time lockout occurred

Base and plug-in section of the LAL... are designed such that only burner controls of the LAL... family can be plugged in.

- 24 connection terminals
- Auxiliary terminals «31» and «32»
- 3 earth terminals terminating in a lug for earthing the burner
- 3 neutral conductor terminals prewired to terminal 2
- 14 knockout holes for cable entry by means of cable glands
- 8 at the side
- 6 in the bottom of the base
- 6 lateral threaded knockout holes for cable entry glands Pg11 or M20

### Operation

Flame detector and flame simulation test are made automatically during burner off times and the prepurge time «t1». If loss of flame occurs during operation, the burner control will initiate lockout. If automatic repetition of the startup sequence is required, the clearly marked wire link on the plug-in section of the LAL... must be cut away.

### Pre-conditions for burner startup

- Burner control is not in the lockout position
- Sequence switch is in its start position (with LAL2 voltage is present at terminals 11 and 12).
- Air damper is closed; end switch «z» for the CLOSED position must feed power from terminal 11 to terminal 8.
- Contact of the limit thermostat or pressure switch «W» and the contacts of any other switching devices in the control loop between terminals 4 and 5 must be closed e.g. a control contact for the oil preheater's temperature
- Normally closed contact of the air pressure switch must be closed.

### Startup sequence

Start command by «R»:

- «R» closes the start control loop between terminals 4 and 5
- The sequence switch starts to run
- Only prepurging, fan motor at terminal 6 receives power
- Pre- and postpurging, fan motor or flue gas fan at terminal 7 receives power on completion of «t7»
- On completion of «t16», the control command for opening the air damper is delivered via terminal 9
- Terminal 8 receives no power during the positioning time
- The sequence switch continues to run only after the air damper has fully closed.

t1 Prepurge time with air damper fully open:

- The correct functioning of the flame supervision circuit is checked during «t1»
- The burner control will initiate lockout if correct functioning is not ensured.

With LAL2:

Shortly after the beginning of «t1», the air pressure switch must change over from terminal 13 to terminal 14 otherwise, the burner control will initiate lockout start of the air pressure check.

t3 Short preignition time:

«Z» must be connected to terminal 16, release of fuel via terminal 18.

t3' Long preignition time: «Z» connected to terminal 15.

t3n Postignition time:

- «Z» must be connected to terminal 15

- With short preignition, «Z» remains on until «TSA» has elapsed connection to terminal 16.

t4 Interval «BV1 – BV2» or «BV1 - LR»: On completion of «t4», voltage is present at terminal 19. The voltage is required to power «BV2» connected to auxiliary switch «v» in the actuator.

t5 Interval: On completion of «t5», terminal 20 receives power. At the same time, control outputs 9 to 11 and input 8 are galvanically separated from the LAL... control section.

LAL... is now protected against reverse voltages from the load control circuit. With the release of «LR» at terminal 20, the startup sequence of the LAL... ends. After a few idle steps (steps with no contact position changes), the sequence switch switches itself off.

B Operating position of the burner

B-C Burner operation: during burner operation, «LR» drives the air damper to the nominal load or low-fire position, depending on heat demand; the release of the nominal load takes place via auxiliary switch «v» in the actuator and in the event of loss of flame during operation, the LAL... will initiate lockout. For automatic start repetition, the clearly marked wire link «B» on the plugin section of the LAL... must be cut away.

C Controlled shutdown: in the case of controlled shutdown, «BV...» will immediately be closed. At the same time, the sequence switch is started to program «t6»

C-D Sequence switch travels to start position «A»

t6 Postpurge time: fan «M2» connected to terminal 7. Shortly after the start of «t6», terminal 10 receives power and the air damper is driven to the MIN position. Full closing of the air damper starts only shortly before «t6» has elapsed initiated by the control signal at terminal 11. During the following burner off time, terminal 11 is live.

t13 Permissible afterburn time: during «t13», the flame signal input may still receive a flame signal.

D-A End of control program: start position

As soon as the sequence switch has reached the start position – having thereby switched itself off – the flame detector and flame simulation test will start again.

During burner off times, the flame supervision circuit is live.

### Lockout and indication of the stop position

Whenever a fault occurs, the sequence switch stops and with it the lockout indicator. The symbol appearing above the reading mark indicates the type of fault:

◀ No start. One of the contacts is not closed (also refer to «Preconditions for burner startup»):

Extraneous light:

Lockout during or after completion of the control program

Examples: nonextinguished flame, leaking fuel valves faulty flame supervision circuit.

▲ Interruption of startup. No OPEN signal at terminal 8 from the changeover end switch «a». Terminals 6, 7 and 15 are live until fault has been corrected

P Lockout. No air pressure indication at the beginning of the air pressure check. Air pressure failure after the air pressure check.

■ Defect in the flame supervision circuit.

▼ Interruption of the startup sequence. No positioning signal at terminal 8 from the auxiliary switch «m» for the low-fire position. Terminals 6, 7 and 15 are live until fault has been corrected.

1 Lockout. No flame signal at the end of the safety time.

| Flame signal has been lost during operation.

A Consenso all'avviamento (ad esempio tramite il termostato o il pressostato R dell'impianto)

B Operating position of the burner


B-C Burner operation: during burner operation, «LR» drives the air damper to the nominal load or low-fire position, depending on heat demand; the release of the nominal load takes place via auxiliary switch «v» in the actuator and in the event of loss of flame during operation, the LAL... will initiate lockout. For automatic start repetition, the clearly marked wire link «B» on the plugin section of the LAL... must be cut away.

C Controlled shutdown: in the case of controlled shutdown, «BV...» will immediately be closed. At the same time, the sequence switch is started to program «t6»

C-D Sequence switch travels to start position «A».

During burner off times, the flame supervision circuit is live.

## Lockout indication

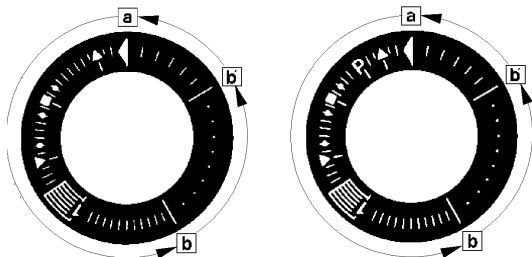

- a-b Startup sequence
- b-b' Idle step (with no contact confirmation)
- b(b')-a Postpurge program


Burner control can immediately be reset after lockout:  
 Do not press the lockout reset button for more than 10 seconds  
 The sequence switch always travels to the start position first  
 After resetting  
 After rectification of a fault that led to shutdown  
 After each power failure  
 During this period of time, power is only fed to terminals 7 and 9...11.  
 Then, the LAL.... will program a new burner startup sequence

## Specifications

Power supply AC 230 V -15 / +10 %  
 for LAL2... on request AC 100 V -15 %...AC 110 V +10 %  
 Frequency 50 Hz -6 %...60 Hz +6 %  
 Absorption AC 3.5 VA  
 Mounting position optional  
 Protection IP 40  
 Perm. input current at terminal 1 AC 5 A max., 20 A peak  
 Perm. current rating of control terminals 3, 6, 7, 9...11, 15...20


Internal fuse  
 External fuse  
 Weight

4 A max., 20 A peak  
 T6,3H250V according to IEC 127  
 max. 10 A  
 Device 1000 g  
 Plug-in base 165 g

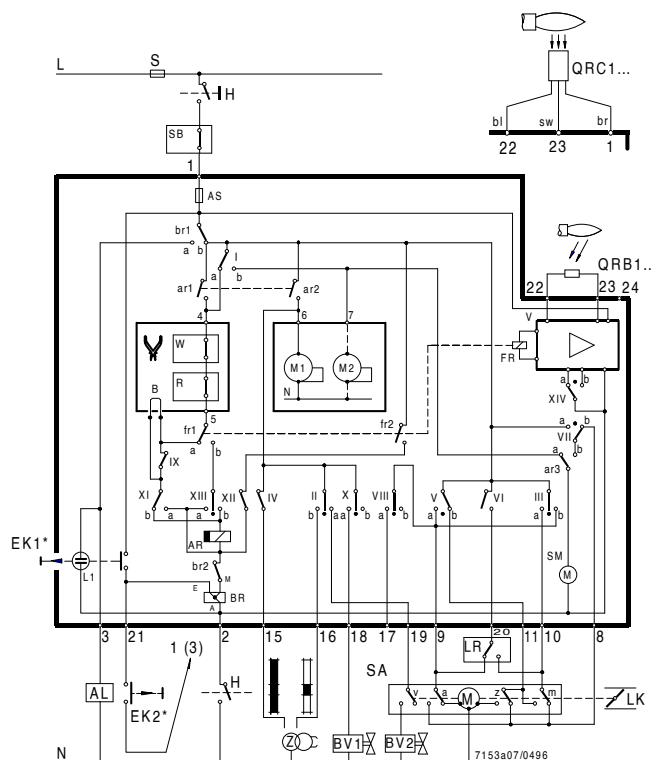

Sequence diagram

## Control output at terminal

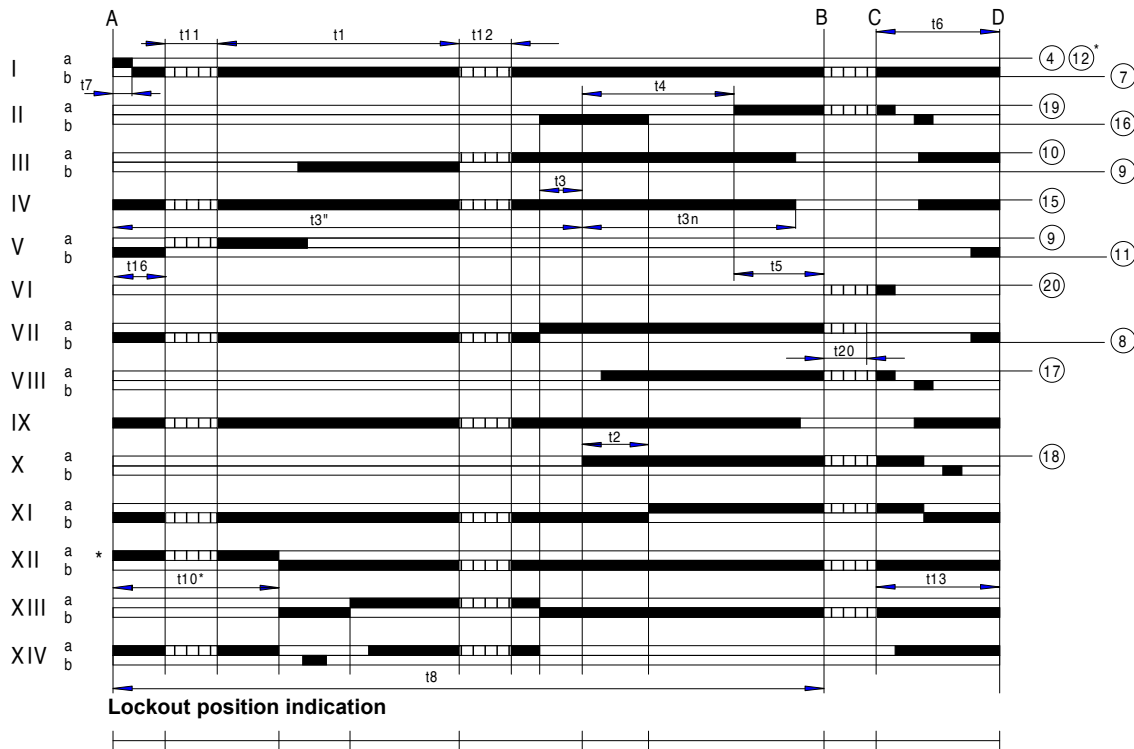

## Key

- t1 Prepurge time with air damper fully open
- t2 Safety time
- t3 Preignition time, short («Z» connected to terminal 16)

- T3' Preignition time, long («Z» connected to terminal 15)
- t3n Postignition time («Z» connected to terminal 15)
- t4 Interval between voltage at terminals 18 and 19 («BV1-BV2»)
- t5 Interval between voltage at terminals 19 and 20 («BV2» load controller)

|     |                                                                                      |
|-----|--------------------------------------------------------------------------------------|
| t6  | Postpurge time (with «M2»)                                                           |
| t7  | Interval between start command and voltage at terminal 7 (start delay time for «M2») |
| t8  | Duration of startup sequence (excluding «t11» and «t12»)                             |
| t10 | Interval from startup to the beginning of the air pressure check                     |
| t11 | Air damper running time to the OPEN position                                         |
| t12 | Air damper running time to the low-fire position (MIN)                               |
| t13 | Permissible afterburn time                                                           |
| t16 | Interval to the OPEN command for the air damper                                      |
| t20 | For self-shutdown of the sequence switch                                             |

#### SIEMENS OIL BURNERS AUTOMATIC CONTROLLER SIEMENS LMO14 - LMO24 - LMO44

The LMO... burner controls are designed for the start-up and supervision of single- or 2-stage forced draught oil burners in intermittent operation. Yellow-burning flames are supervised with photoresistive detectors QRB..., blue-burning flames with blue-flame detectors QRC...

In terms of housing dimensions, electrical connections and flame detectors, the LMO... are identical to the LOA... oil burner controls.

##### Preconditions for startup

- Burner control is reset
- All contacts in the line are closed
- No undervoltage
- Flame detector is darkened, no extraneous light

##### Undervoltage

- Safety shut-down in the operating position takes place should the mains voltage drop below about AC 165 V
- Restart is initiated when the mains voltage exceeds about AC 175 V

##### Time supervision oil pre-heater

If the oil pre-heater's release contact does not close within 10 minutes, the burner control will initiate lock-out.

##### Controlled intermittent operation

After no more than 24 hours of continuous operation, the burner control will initiate an automatic safety shut-down followed by a restart.

##### Control sequence in the event of fault

If lock-out occurs, the outputs for the fuel valves and the ignition will immediately be deactivated (< 1 second).

| Cause                                                          | Response                                                       |
|----------------------------------------------------------------|----------------------------------------------------------------|
| After a mains failure                                          | Restart                                                        |
| After voltage has fallen below the undervoltage threshold      | Restart                                                        |
| In the event of a premature, faulty flame signal during «t1»   | Lock-out at the end of «t1»                                    |
| In the event of a premature, faulty flame signal during «tw»   | Prevention of start-up, lock-out after no more than 40 seconds |
| If the burner does not ignite during «TSA»                     | Lock-out at the end of TSA                                     |
| In the event the flame is lost during operation                | Max. 3 repetitions, followed by lock-out                       |
| Oil pre-heater's release contact does not close within 10 min. | Lock-out                                                       |

##### Lock-out

In the event of lock-out, the LMO... remains locked (lock-out cannot be changed), and the red signal lamp will light up. This status is also maintained in the case of a mains failure.

##### Resetting the burner

Whenever lock-out occurs, the burner control can immediately be reset. To do this, keep control the lock-out reset button depressed for about 1 second (< 3 seconds).

##### Limitation of repetitions

If the flame is lost during operation, a maximum of 3 repetitions can be made. If the flame is lost for the 4th time during operation, the burner will initiate lock-out. The repetition count is restarted each time controlled switching on by «R-W-SB» takes place.

##### Operation



Lock-out reset button «EK...» is the key operating element for resetting the burner control and for activating / deactivating the diagnostic functions.



The multicolour «LED» is the key indicating element for both visual diagnosis and interface diagnosis.

- s Red  
l Yellow  
o Green

| Colour code table                                |             |                   |
|--------------------------------------------------|-------------|-------------------|
| Status                                           | Colour code | Colour            |
| Oil pre-heater heats, waiting time «tw»          |             | Yellow            |
| Ignition phase, ignition controlled              | lmlmlmlml   | Yellow-off        |
| Operation, flame o.k.                            | oooooooo    | Green             |
| Operation, flame not o.k.                        | omomomomo   | Green-off         |
| Undervoltage                                     | lslslsls    | Yellow-red        |
| Fault, alarm                                     | ssssssss    | Red               |
| Output of fault code (refer to Fault code table) | smsmsmsm    | Red-off           |
| Extraneous light prior to burner start-up        | ososososo   | Green-red         |
| Interface diagnosis                              | ssssssssss  | Red flicker light |

##### Key

- m Off  
l Yellow  
o Green  
s Red

##### Diagnosis of cause of fault

After lock-out, the red fault signal lamp remains steady on.

In that condition, the visual diagnosis of the cause of fault according to the error code table can be activated by pressing the lock-out reset button for more than 3 seconds.

| Error code table |                                                                                                                                                                                                                                                      |
|------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Blink code       | Possible cause                                                                                                                                                                                                                                       |
| 2 blinks **      | No establishment of flame at the end of TSA <ul style="list-style-type: none"> <li>● Faulty or soiled fuel valves</li> <li>● Faulty or soiled flame detector</li> <li>● Poor adjustment of burner, no fuel</li> <li>● Faulty ignition</li> </ul>     |
| 3 blinks ***     | Free                                                                                                                                                                                                                                                 |
| 4 blinks ****    | Extraneous light on burner startup                                                                                                                                                                                                                   |
| 5 blinks *****   | Free                                                                                                                                                                                                                                                 |
| 6 blinks ****    | Free                                                                                                                                                                                                                                                 |
| 7 blinks *****   | Too many losses of flame during operation (limitation of the number of repetitions) <ul style="list-style-type: none"> <li>● Faulty or soiled fuel valves</li> <li>● Faulty or soiled flame detector</li> <li>● Poor adjustment of burner</li> </ul> |
| 8 blinks *****   | Time supervision oil pre-heater                                                                                                                                                                                                                      |
| 9 blinks *****   | Free                                                                                                                                                                                                                                                 |
| 10 blinks *****  | Wiring error or internal error, output contacts                                                                                                                                                                                                      |


During the time the cause of fault is diagnosed, the control outputs are deactivated.

- Burner remains shut down
- Fault status signal «AL» at terminal 10 is activated


The diagnosis of the cause of fault is quit and the burner switched on again by resetting the burner control.

Press lock-out reset button for about 1 second (< 3 seconds).


**Connection diagram and internal diagram**  
**LMO14**

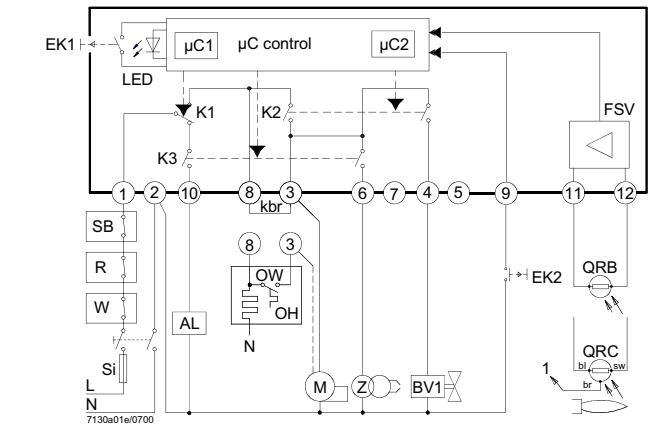


**LMO24 - LMO44**

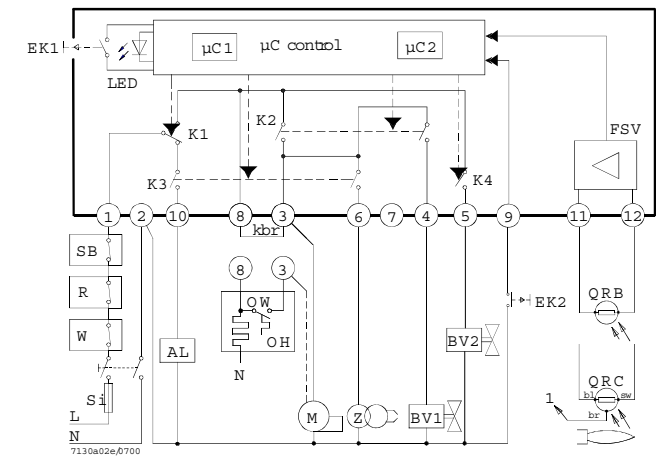

**Control sequence**  
**LMO14**

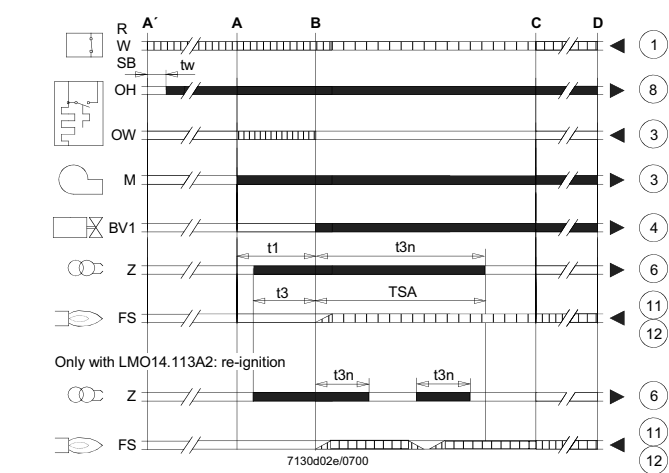

**LMO24 - LMO44**

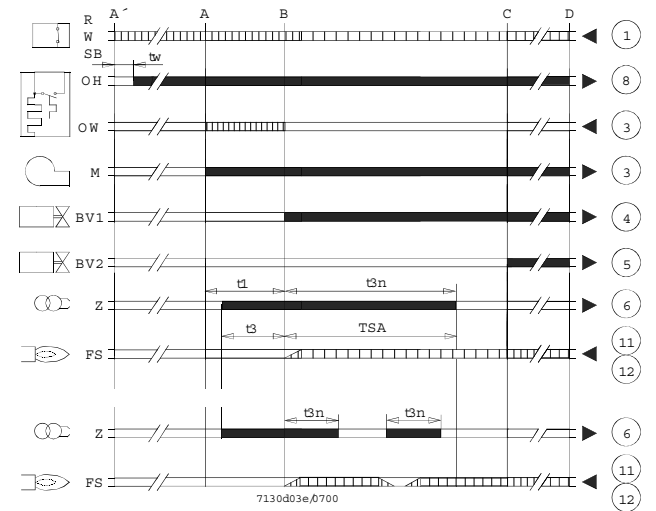

**Key**

- AL Alarm device  
 kbr... Cable link (required only when no oil pre-heater is used)  
 BV... Fuel valve  
 EK1 Lock-out reset button  
 EK2 Remote lock-out reset button  
 FS Flame signal  
 FSV Flame signal amplifier  
 K... Contacts of control relay  
 LED 3-colour signal lamps  
 M Burner motor  
 OW Release contact of oil pre-heater  
 t1 Pre-purge time  
 t3 Pre-ignition time  
 t3n Post-ignition time  
 A' Beginning of start-up sequence with burners using an oil pre-heater  
 A Beginning of start-up sequence with burners using no oil pre-heater  
 Controller output signals  
 Required input signals  
 OH Oil pre-heater  
 QRB Photoresistive detector  
 QRC Blue-flame detector  
 bl = blue  
 br = brown  
 sw = black  
 R Control thermostat or pressurestat  
 SB Safety limit thermostat  
 Si External primary fuse  
 W Limit thermostat or pressure switch  
 Z Ignition transformer  
 t4 Interval from flame signal to release «BV2»  
 TSA Ignition safety time  
 tw Waiting time for oil pre-heating  
 B Time of flame establishment  
 C Operating position  
 D Controlled shut-down by «R»  
 μC1 Microcontroller 1  
 μC2 Microcontroller 2

General unit data


|                                |                                         |
|--------------------------------|-----------------------------------------|
| Mains voltage                  | AC 230 V +10 % / -15 %                  |
|                                | AC 120 V +10 % / -15 %                  |
| Mains frequency                | 50...60 Hz ±6 %                         |
| External primary fuse (Si)     | 6.3A (slow)                             |
| Power consumption              | 12 VA                                   |
| Mounting orientation           | optional                                |
| Weight                         | approx. 200 g                           |
| Degree of protection           | IP40 (to be ensured through mounting)   |
| Perm. cable lengths            | max. 3m at line capacitance of 100 pF/m |
| Detector cable laid separately | 10 m                                    |
| Remote reset laid separately   | 20m                                     |

|                       |       |       |       |
|-----------------------|-------|-------|-------|
|                       | LMO14 | LMO24 | LMO44 |
| Terminal 1            | 5 A   | 5 A   | 5 A   |
| Terminals 3 and 8     | 3 A   | 5 A   | 5 A   |
| Terminals 4, 5 and 10 | 1 A   | 1 A   | 1A    |
| Terminals 6           | 1 A   | 1 A   | 2A    |

Flame supervision with QRB and QRC

|                                                |            |            |
|------------------------------------------------|------------|------------|
|                                                | <b>QRB</b> | <b>QRC</b> |
| Min. detector current required (with flame)    | 45 µA      | 70 µA      |
| Min detector current permitted (without flame) | 5.5 µA     | 5.5 µA     |
| Max. possible with flame (typically)           | 100 µA     | 100 µA     |

Measurement circuit for detector current

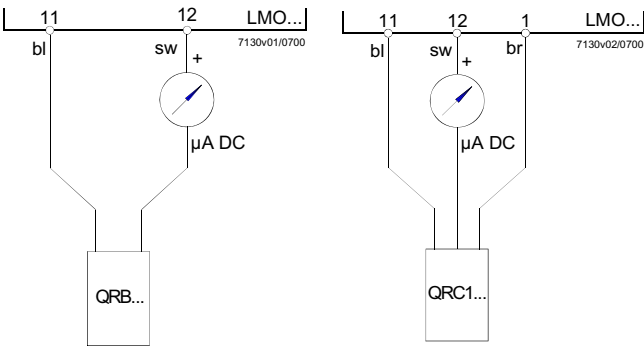

|            |                                                              |
|------------|--------------------------------------------------------------|
| <b>Key</b> |                                                              |
| µA DC      | DC microamperometer with an internal resistance of 5 kW max. |
| bl         | Blue                                                         |
| sw         | Black                                                        |
| br         | Brown                                                        |







C.I.B. UNIGAS S.p.A.  
Via L.Galvani, 9 - 35011 Campodarsego (PD) - ITALY  
Tel. +39 049 9200944 - Fax +39 049 9200945/9201269  
web site: [www.cibunigas.it](http://www.cibunigas.it) - e-mail: [cibunigas@cibunigas.it](mailto:cibunigas@cibunigas.it)

Note: specifications and data subject to change. Errors and omissions excepted.

# LME73.000Ax + PME73.831AxBC

## LME73.831AxBC



***Service instruction manual***

M12921CB Rel.1.2 02/2016

## GENERAL FEATURES

LME/ is suitable for gas, light and heavy oil burners

LME7 series has two devices: LME73.000 (hardware) and PME73.831AxB (programmable unit). The LME73.831AxB is also available: it has a built in software and it is not programmable.

LME7 is inside the control panel. If supplied, PME73.831BC is inside the LME7;

The display AZL23.. or AZL21.. is available for Service and hardware setup.

LME7... are used for the startup and supervision of 2-stage/progressive, modulating forced draft gas burners in intermittent operation.

The flame is supervised with an ionization probe, optionally with UV flame detector QRA2..., QRA4.U or QRA10....


Integrated in the LME7... basic unit are:

- Burner control
- BCI
- Control for one actuator
- Lockout reset button (info button)
- 3 multicolor signal lamp LED for operations and fault notifications
- 3 x 7-segment display for service, fault and operating state information
- Interface for program module (no function)

Passwords protect the different parameter levels against unauthorized access. Basic settings that the plant operator can make on site require no password.


Functions:


- Undervoltage detection
- Electrical remote reset facility
- Accurate control times thanks to digital signal handling
- Multicolor indication of fault status and operating state messages
- Air pressure supervision with function check of air pressure switch during start and operation (gas)
- Repetition limitation
- Controlled intermittent operation after 24 hours of continuous operation\*
- BCI
- Indication of program sequence

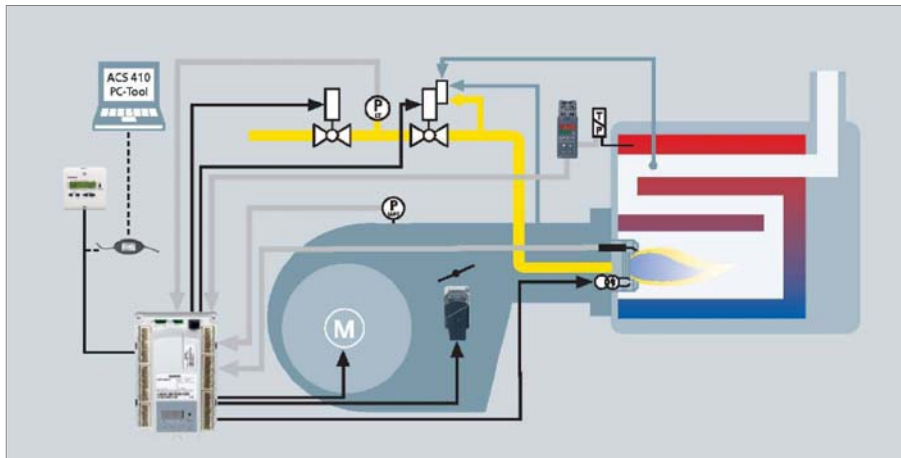

\* after no more than 24 hours of continuous operation, the burner control initiates automatic controlled shutdown followed by a restart.

## User interface :

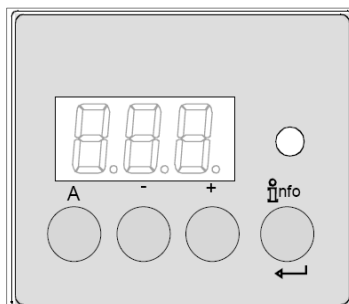
 
|                                                                                     |                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Button A</b> <ul style="list-style-type: none"> <li>- Display preset output</li> <li>- In lockout position: Power value to the time of fault</li> </ul>                                                                                             |
|    | <b>Info and Enter button</b> <ul style="list-style-type: none"> <li>- Reset in the event of fault, changeover visual diagnostic of the cause of fault (refer to chapter Diagnostics of cause of fault )</li> </ul>                                     |
|    | <b>- button</b> <ul style="list-style-type: none"> <li>- Display flame signal current 2 or phases display</li> <li>- In lockout position: MMI phase to the time of fault</li> </ul>                                                                    |
|    | <b>+ button</b> <ul style="list-style-type: none"> <li>- Display flame signal current 1 or phases display</li> <li>- In lockout position: MMI phase to the time of fault</li> </ul>                                                                    |
|  | <b>3 multicolor signal lamp</b> <ul style="list-style-type: none"> <li>- Refer to chapter "Blink code table"</li> </ul>                                                                                                                                |
|  | <b>+ and - button: Escape function</b><br>(press + and - simultaneously) <ul style="list-style-type: none"> <li>- No adoption of value</li> <li>- One menu level up</li> <li>- Keep depressed for &gt;1second for backup / restore function</li> </ul> |

## First startup when PME is supplied or PME replacement:

### First startup:

- 1) insert a new PME
- 2) turn the power on; The display shows "rst" and "PrC" one after the other.
- 3) keep pushing the INFO  button more than 3 seconds; "run" appears; PME parameters will be transferred to LME
- 4) at the end, "End" and "rst" appears one after the other; Later (2'), the control box locks out "Loc 138"
- 5) reset the control box by pressing the INFO  button (for less than 3 seconds)  
Now the display shows "OFF"; the burner is ready to be started.

### Replacement:

- 1) Turn off the burner, replace the existing PME with a new one
- 2) For the first startup, repeat the above procedure, from step 2.

**List of phase display on board LME :**

| Phase number of 7-segment display        | LED                   | Function                                                                                                               |
|------------------------------------------|-----------------------|------------------------------------------------------------------------------------------------------------------------|
| Standby                                  |                       |                                                                                                                        |
| OFF                                      | Off                   | Standby, waiting for heat demand                                                                                       |
| P08                                      | Off                   | Mains ON / test phase (e.g. detector test)                                                                             |
| <b>Startup</b>                           |                       |                                                                                                                        |
| P21                                      | Yellow                | Safety valve ON, air pressure switch test / POC test (timeout / locking                                                |
| P22                                      | Yellow                | Fan motor ON / air pressure switch test / settling time                                                                |
| P24                                      | Yellow                | Actuator opens in prepurging position                                                                                  |
| P30                                      | Yellow                | Prepurging                                                                                                             |
| P36                                      | Yellow                | Actuator closes in ignition load / low-fire position                                                                   |
| P38                                      | Yellow blinking       | Preignition time                                                                                                       |
| P40                                      | Yellow blinking       | 1st safety time (TSA1) / ignition transformer ON                                                                       |
| P42                                      | Green                 | Safety time (ignition transformer OFF), flame check                                                                    |
| P44                                      | Green                 | Interval: End of safety time and fuel valve 1 (V1) ON<br>Interval: End of safety time and load controller (LR) release |
| P50 Green                                | P50 Green             | 2nd safety time (TSA2)                                                                                                 |
| P54 Green                                | P54 Green             | P259.01: Actuator opens in > low-fire                                                                                  |
| P54 Green                                | P54 Green             | P260: Actuator closes in low-fire                                                                                      |
| oP1 Green                                | oP1 Green             | Interval until release of load controller target (analog or 3-position step input)                                     |
| <b>Operation</b>                         |                       |                                                                                                                        |
| oP                                       | Green                 | Operation, modulating operation                                                                                        |
| <b>Shutdown</b>                          |                       |                                                                                                                        |
| P10                                      | Yellow                | Shutdown, actuator opens in CLOSE position (home run)                                                                  |
| P72                                      | Yellow                | Actuator opens in high-fire position / end of operation                                                                |
| P74                                      | Yellow                | Postpurging                                                                                                            |
| <b>Valve proving</b>                     |                       |                                                                                                                        |
| P80                                      | Yellow                | Test space evacuating                                                                                                  |
| P81                                      | Yellow                | Checking time fuel valve 1                                                                                             |
| P82                                      | Yellow                | Test space filling                                                                                                     |
| P83                                      | Yellow                | Checking time fuel valve 2                                                                                             |
| <b>Waiting phases (start prevention)</b> |                       |                                                                                                                        |
| P01                                      | Red / yellow blinking | Undervoltage                                                                                                           |
| P02                                      | Yellow                | Safety loop open                                                                                                       |
| P04                                      | Red / green blinking  | Extraneous light on burner startup (timeout / locking after 30 s)                                                      |
| P90                                      | Yellow                | Pressure switch-min open                                                                                               |
| <b>Lockout</b>                           |                       |                                                                                                                        |
| LOC                                      | Red                   | Lockout phase                                                                                                          |

## Operation :

|                                                                                   |                                                                                                                                                                        |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The lockout reset button (info button) (EK) is the key operating element for resetting the burner control and for activating / deactivating the diagnostics functions. |
|  | The multicolor signal lamp (LED) is the key indicating element for visual diagnostics.                                                                                 |

Both lockout reset button (EK) and signal lamp (LED) are located in the control panel.

There are 2 diagnostics choices:

1. Visual diagnostics: Indication of operating state or diagnostics of cause of fault
2. Diagnostics: Via internal display or to AZL2.. display and operating unit

Visual diagnostics:

In normal operation, the different operating states are indicated in the form of color codes according to the color code table given below.

### Color code table for multicolor signal lamp (LED) :

| State                                           | Color code                    | Color             |
|-------------------------------------------------|-------------------------------|-------------------|
| Waiting time (tw), other waiting states         | ○ .....                       | OFF               |
| Ignition phase, ignition controlled             | ● ○ ● ○ ● ○ ● ○ ● ○ ● ○       | Blinking yellow   |
| Operation, flame o.k.                           | □ .....                       | Green             |
| Operation, flame not o.k.                       | □ ○ □ ○ □ ○ □ ○ □ ○ □ ○       | Blinking green    |
| Extraneous light on burner startup              | □ ▲ □ ▲ □ ▲ □ ▲ □ ▲ □ ▲       | Green-red         |
| Undervoltage                                    | ● ▲ ● ▲ ● ▲ ● ▲ ● ▲ ● ▲       | Yellow-red        |
| Fault, alarm                                    | ▲ .....                       | Red               |
| Error code output (refer to «Error code table») | ▲ ○ ▲ ○ ▲ ○ ▲ ○ ▲ ○ ▲ ○       | Blinking red      |
| Interface diagnostics                           | ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲       | Red flicker light |
| Heating request                                 | ● .....                       | Yellow            |
| Heating request                                 | ● ● ▲ ● ● ▲ ● ● ▲ ● ● ▲ ● ● ▲ | Yellow            |


### Key

|       |            |
|-------|------------|
| ..... | Steady on  |
| ○     | Led off    |
| ▲     | Led red    |
| ●     | Led yellow |
| □     | Led green  |

## Program sequence :

Version 1:

- Ignition load < low-fire
- Prepurging in high-fire
- Parameter 515 = 1 (condition parameter 259.01 > 0 seconds)

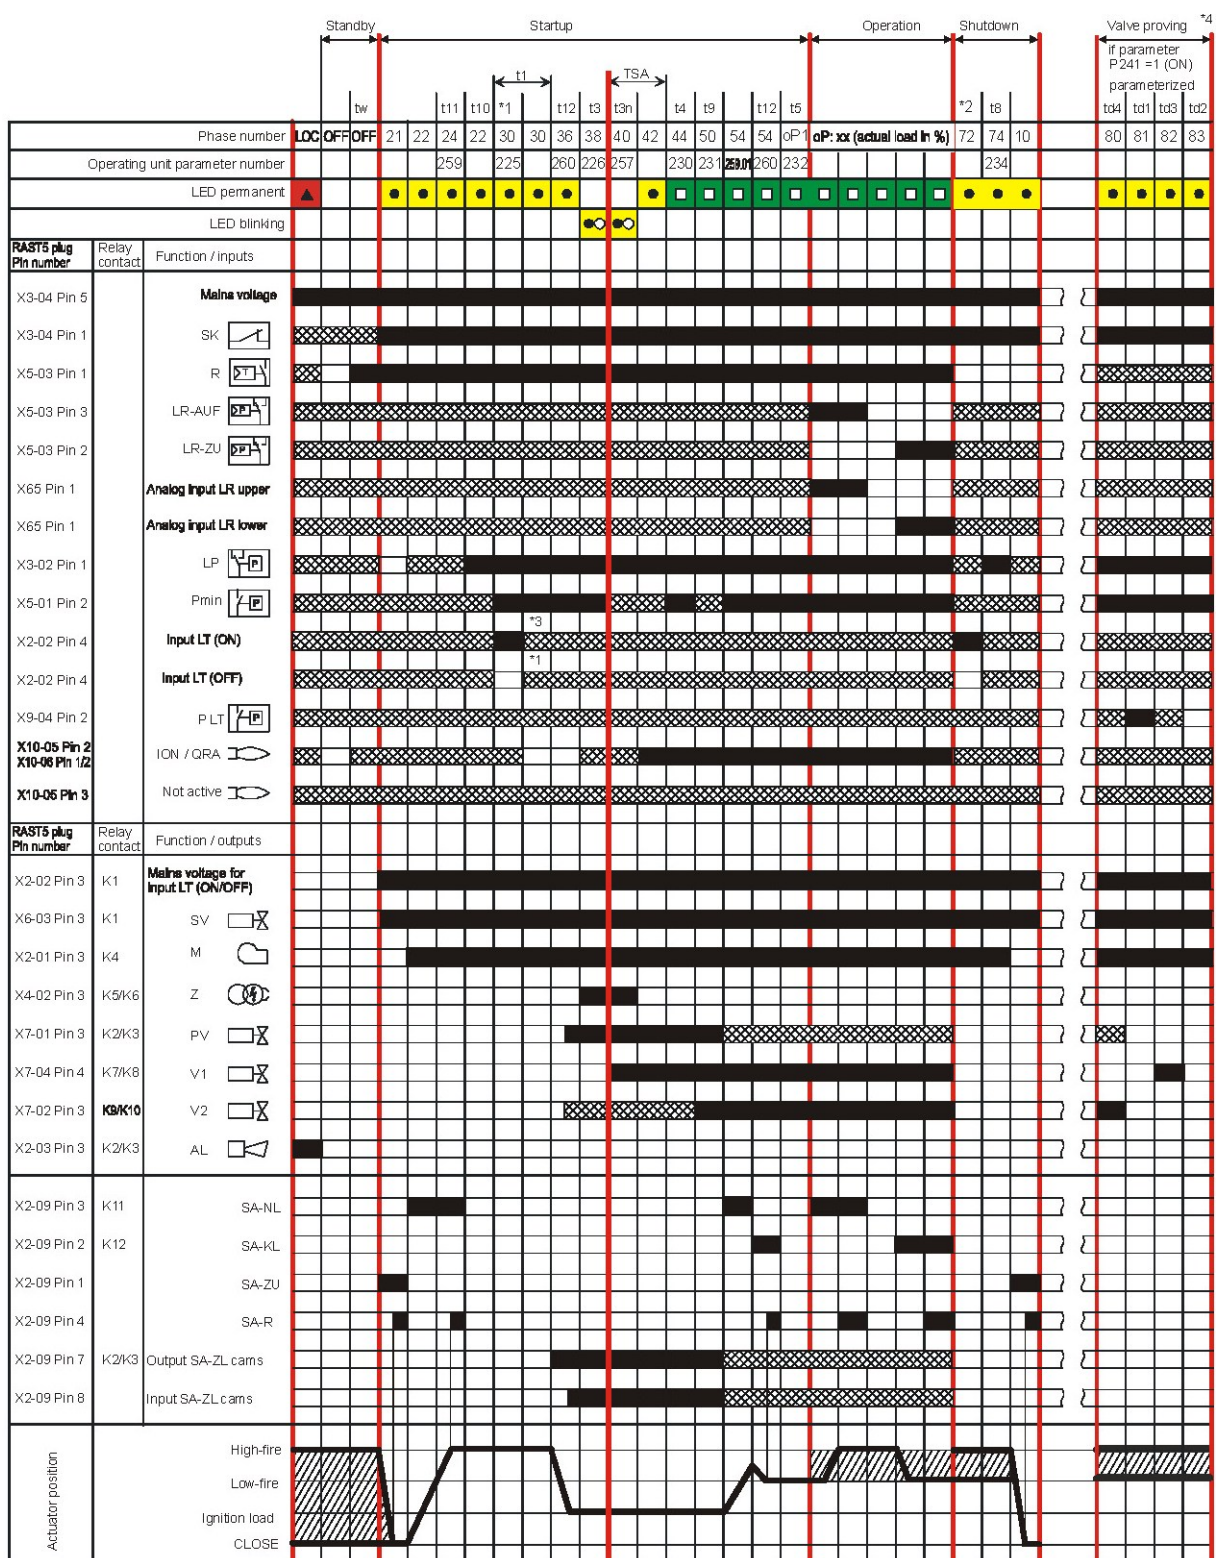


7114d05e/0112



## Program sequence :

Version 2:

- Ignition load > low-fire
- Prepurging in high-fire
- Parameter 515 = 1 (condition parameter 259.01 = 0 seconds)

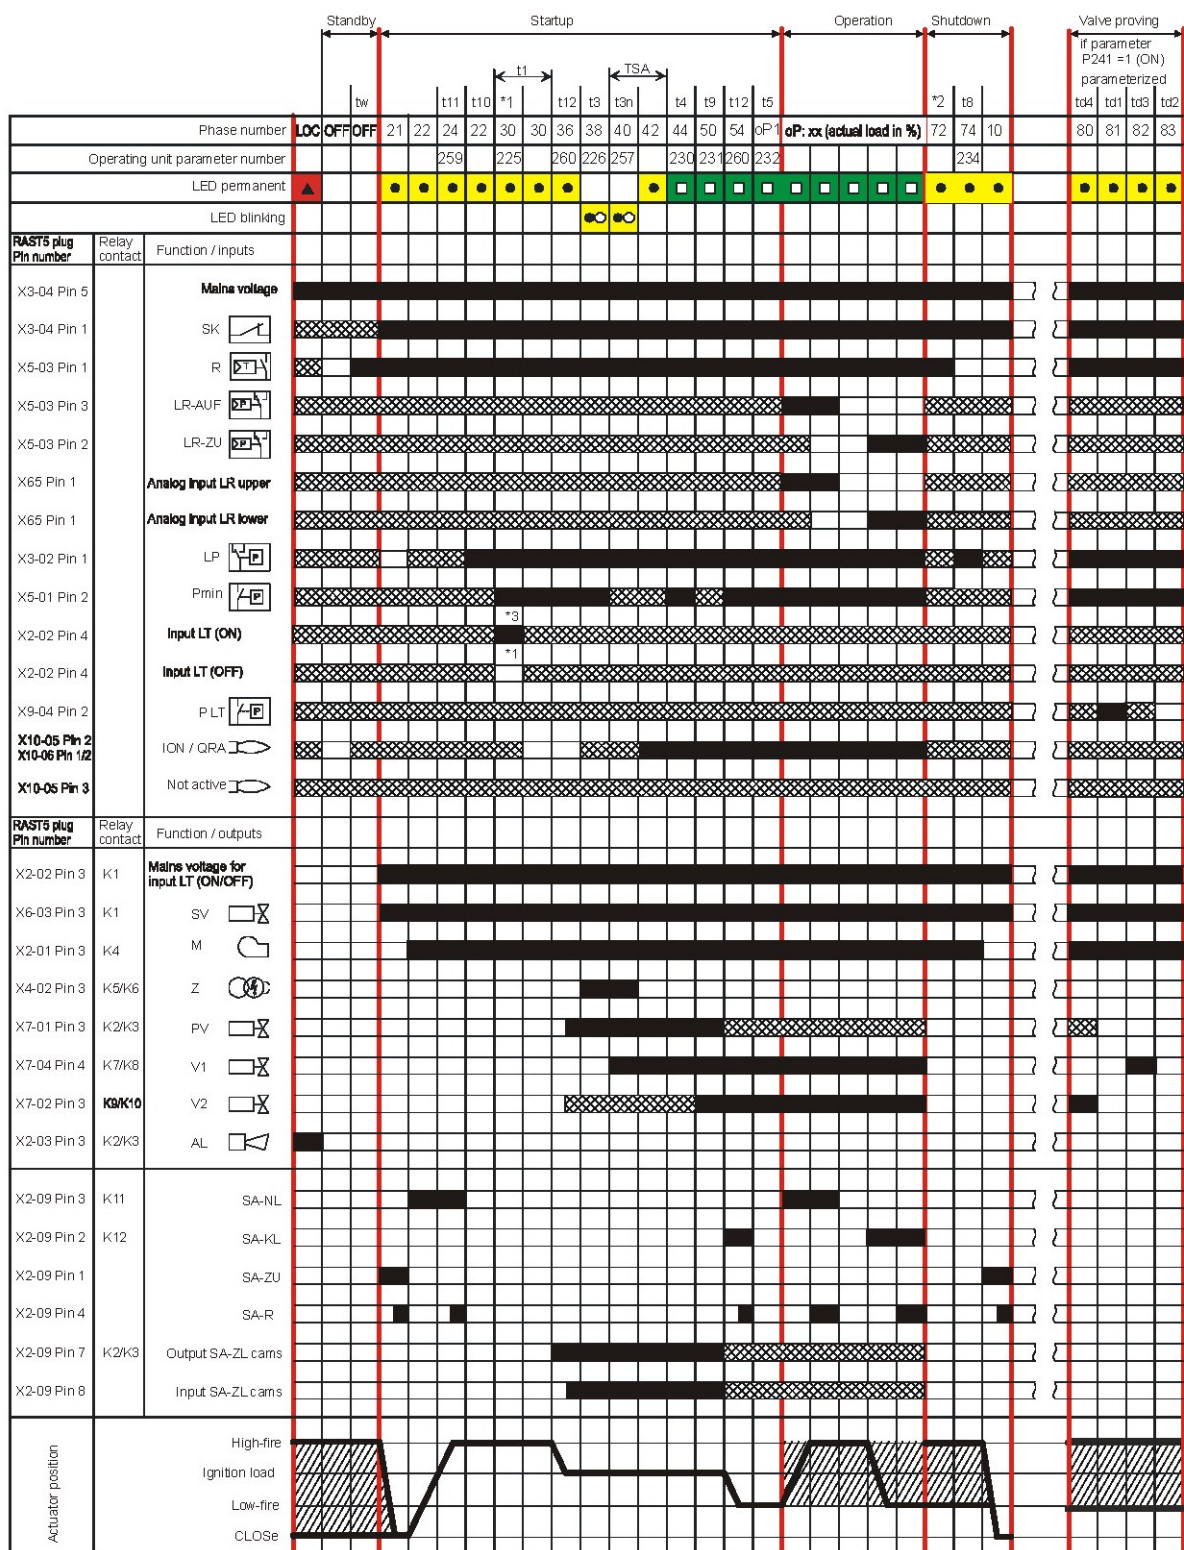

7114d04e/0112



| Phase number | Function                                                                           |
|--------------|------------------------------------------------------------------------------------|
| LOC          | Lockout phase                                                                      |
| OFF          | Standby, waiting for heat demand                                                   |
| oP           | Operation, modulating operation                                                    |
| oP1          | Interval until release of load controller target (analog or 3-position step input) |
| 01           | Under voltage                                                                      |
| 02           | Safety loop open                                                                   |
| 04           | Extraneous light on burner startup (timeout/locking after 30 seconds)              |
| 08           | Mains ON/test phase (e.g. detector test)                                           |
| 10           | Shutdown, actuator opens in CLOSE position (homerun)                               |
| 21           | Safety valve ON, air pressure switch OFF, actuator opens in CLOSE position         |
| 22           | Part 1: Fan motor ON                                                               |
|              | Part 2: Specified time (t10) air pressure switch (LP)                              |
|              | Message (timeout) stabilization air pressure switch                                |
| 24           | Actuator opens in prepurge position                                                |
| 30           | Part 1: Prepurge time (t1) without extraneous light test                           |
|              | Valve proving after mains ON, lockout                                              |
|              | Part 2: Prepurge time (t1) with extraneous light test                              |
| 36           | Actuator closes in ignition load                                                   |
| 38           | Preignition (t3)                                                                   |
| 40           | Postignition time (t3n), parameter 257 + 0.3 seconds                               |
| 42           | Flame detection                                                                    |
| 44           | Interval (t4): End of safety time (TSA) and burner valve 2 ON                      |
| 50           | 2nd safety time (t9)                                                               |
| 54           | Parameter 259.01: Actuator opens in > low-fire                                     |
|              | Parameter 260: Actuator closes in low-fire                                         |
| 72           | End of operation, checking if valve proving (LT) shall be performed                |
| 74           | Postpurging (t8)                                                                   |
| 80           | Test space evacuation (td4)                                                        |
| 81           | Test time (td1) fuel valve 1 (V1)                                                  |
| 82           | Test space filling (td3)                                                           |
| 83           | Test time (td2) fuel valve 2 (V2)                                                  |
| 90           | Pressure switch-min open safety shutdown                                           |
| *1           | Valve proving is conducted when...                                                 |
|              | - parameter 241.00 = 1 and parameter 241.02 = 1, or                                |
|              | - parameter 241.00 = 1 and parameter 241.01 = 0                                    |
| *2           | Valve proving is conducted when...                                                 |
|              | - parameter 241.00 = 1 and parameter 241.02 = 1, or                                |
|              | - parameter 241.00 = 1 and parameter 241.01 = 1                                    |
| *3           | Valve proving (LT) will not be performed                                           |

**Error code table :**

| <b>Red blink code of fault signal lamp (LED)</b> | <b>Possible cause</b>                                                                                                                                                                                                                  |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 x blinks                                       | No establishment of flame at the end of the safety time (TSA)                                                                                                                                                                          |
|                                                  | <ul style="list-style-type: none"> <li>- Faulty or soiled flame detector</li> <li>- Faulty or soiled fuel valves</li> <li>- Poor adjustment of burner, no fuel</li> <li>- Faulty ignition equipment</li> </ul>                         |
| 3 x blinks                                       | Air pressure switch (LP) faulty <ul style="list-style-type: none"> <li>- Loss of air pressure after specified time (t10)</li> <li>- Air pressure switch (LP) welded in no-load position</li> </ul>                                     |
| 4 x blinks                                       | Extraneous light on burner startup                                                                                                                                                                                                     |
| 5 x blinks                                       | Time supervision air pressure switch (LP) <ul style="list-style-type: none"> <li>- Air pressure switch (LP) welded in working position</li> </ul>                                                                                      |
| 6 x blinks                                       | Actuator position not reached <ul style="list-style-type: none"> <li>- Actuator faulty</li> <li>- Wrong adjustment of cam</li> <li>- Actuator defective or blocked</li> <li>- False connection</li> <li>- Misadjustment</li> </ul>     |
| 7 x blinks                                       | Too many losses of flame during operation (limitation of repetitions) <ul style="list-style-type: none"> <li>- Faulty or soiled flame detector</li> <li>- Faulty or soiled fuel valves</li> <li>- Poor adjustment of burner</li> </ul> |
| 8 x blinks                                       | Free                                                                                                                                                                                                                                   |
| 9 x blinks                                       | Free                                                                                                                                                                                                                                   |
| 10 x blinks                                      | Wiring error or internal error, output contacts, other faults                                                                                                                                                                          |
| 12 x blinks                                      | Valve proving (LT) <ul style="list-style-type: none"> <li>- Fuel valve 1 (V1) leaking</li> </ul>                                                                                                                                       |
| 13 x blinks                                      | Valve proving (LT) <ul style="list-style-type: none"> <li>- Fuel valve 2 (V2) leaking</li> </ul>                                                                                                                                       |
| 14 x blinks                                      | Error in connection with valve closure control POC                                                                                                                                                                                     |
| 15 x blinks                                      | Error code $\geq 15$                                                                                                                                                                                                                   |
|                                                  | Error code 22: Error of safety loop (SL)                                                                                                                                                                                               |

During the time the cause of fault is diagnosed, the control outputs are deactivated:


- Burner remains shut down
- External fault indication (AL) at terminal X2-03, pin 3 steady on

Diagnostics of cause of fault is quit and the burner switched on again by resetting the burner control. Press the lockout reset button (info button) for about 1 second (<3 seconds).

## Flame detection – detection electrode :

|                                                        |                                          |
|--------------------------------------------------------|------------------------------------------|
| Short-circuit current                                  | Max. AC 1 mA                             |
| Required detector current                              | Min. DC 2 $\mu$ A, display approx. 45 %  |
| Possible detector current                              | Max. DC 3 $\mu$ A, display approx. 100 % |
| Permissible length of detector cable (laid separately) | 30 m (core-earth 100 pF/m)               |

### Measuring circuit

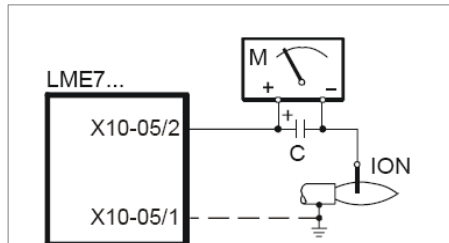

### Keys


- C - Electrolytic condenser 100...470  $\mu$ F; DC 10...25 V
- ION - Ionization probe
- M - Microammeter Ri max. 5,000  $\Omega$

## Flame detection – UV probe :

Threshold values when flame is supervised by QRA...

|                                               |                                        |
|-----------------------------------------------|----------------------------------------|
| - Start prevention (extraneous light)         | Intensity (parameter 954) approx. 12 % |
| - Operation                                   | Intensity (Parameter 954) approx. 13 % |
| Operating voltage                             | AC 280 V $\pm$ 15 %                    |
| Mains frequency                               | 50...60 Hz $\pm$ 6 %                   |
| Required detector current                     | Min. 70 $\mu$ A                        |
| Possible detector current                     |                                        |
| - Operation                                   | Max. 700 $\mu$ A                       |
| Perm. length of detector cable                |                                        |
| - Normal cable, laid separately <sup>1)</sup> | Max. 100 m                             |

<sup>1)</sup> Multicore cable not permitted

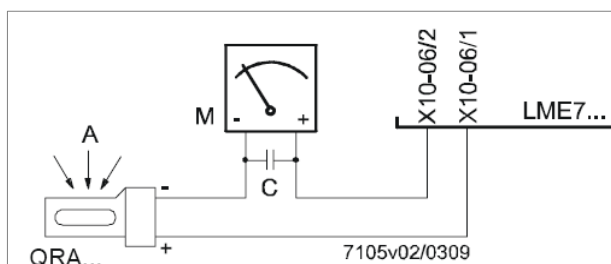

### Keys

- A - Exposure to light
- C - Electrolytic condenser 100...470  $\mu$ F; DC 10...25 V
- M - Microammeter Ri max. 5,000  $\Omega$

### Warning!

Input QRA... is not short-circuit-proof!

Short-circuits of X10-06/2 against earth can destroy the QRA... input

Simultaneous operation of flame detector QRA... and detection electrode is not permitted

To make certain the age of the UV tube can be determined, the LME7... basic unit must always be connected to mains supply.

## Gas proving system :

Valve proving is dependent on input valve proving ON / OFF (X2-02). When a leak is detected, the gas valve proving function ensures that the gas valves will not be opened and that ignition will not be switched on. Lockout will be initiated.

### Valve proving with separate pressure switch (P LT)

Step 1: td4 – Evacuation of test space

Gas valve on the burner side is opened to bring the test space to atmospheric pressure.

Step 2: td1 – Test atmospheric pressure


When the gas has closed, the gas pressure in the test space must not exceed a certain level.

Step 3: td3 Filling of test space

Gas valve on the mains side opens to fill the test space.

Step 4: td2 – Test gas pressure

When the gas valve has closed, the gas pressure in the test space must not drop below a certain level.

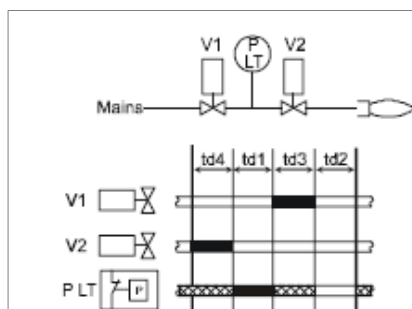

Controllo tenuta con pressostati separati

#### Keys

td1 Test atmospheric pressure

td2 Test gas pressure

td3 Filling of test space

td4 Evacuation of test space

V... Fuel valve

PLT Pressure switch valve proving

■ Input / output signal 1 (ON)


□ Input / output signal 0 (OFF)

▨ Input permissible signal 1 (ON) or 0 (OFF)




| No. | Parameter                                    |
|-----|----------------------------------------------|
| 242 | Valve proving evacuation of test space       |
| 243 | Valve proving time test atmospheric pressure |
| 244 | Valve proving filling of test space          |
| 245 | Valve proving time test gas pressure         |

## Instruction, control and modify via AZL2x :


The AZL2x.. display/programming unit is shown below:

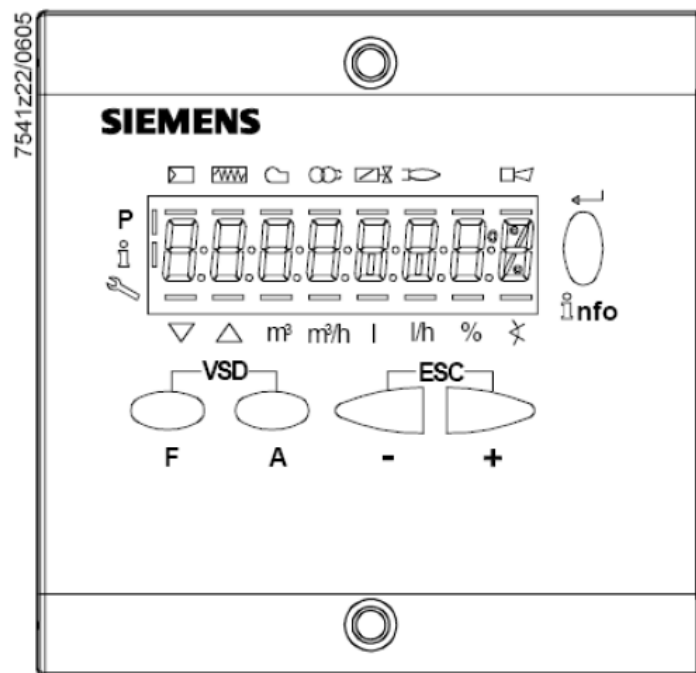


The keys functions are the following:

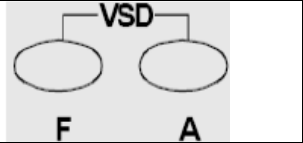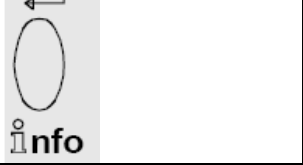 
|                                                                                    |                                                                                                                                                                                                    |
|------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Key F + A<br/>While pressing the two keys contemporarily, the code message will appear: by entering the proper password it is possible to access the Service mode.</p>                          |
|  | <p>Info and Enter keys<br/>Used for Info and Service menues<br/>Used as Enter key in the setting modes<br/>Used as Reset key in the burner operation mode<br/>Used to enter a lower level menu</p> |
|  | <p>Key -<br/>Used for one menu level down<br/>Used to decrease a value</p>                                                                                                                         |
|  | <p>Key +<br/>Used for one menu level up<br/>Used to increase a value</p>                                                                                                                           |
|  | <p>Keys (+ &amp; -) = ESC<br/>By pressing + and - at the same time, the ESCAPE function is performed<br/>No adoption of value<br/>One menu level down</p>                                          |
|                                                                                    |                                                                                                                                                                                                    |

The display will show these data:

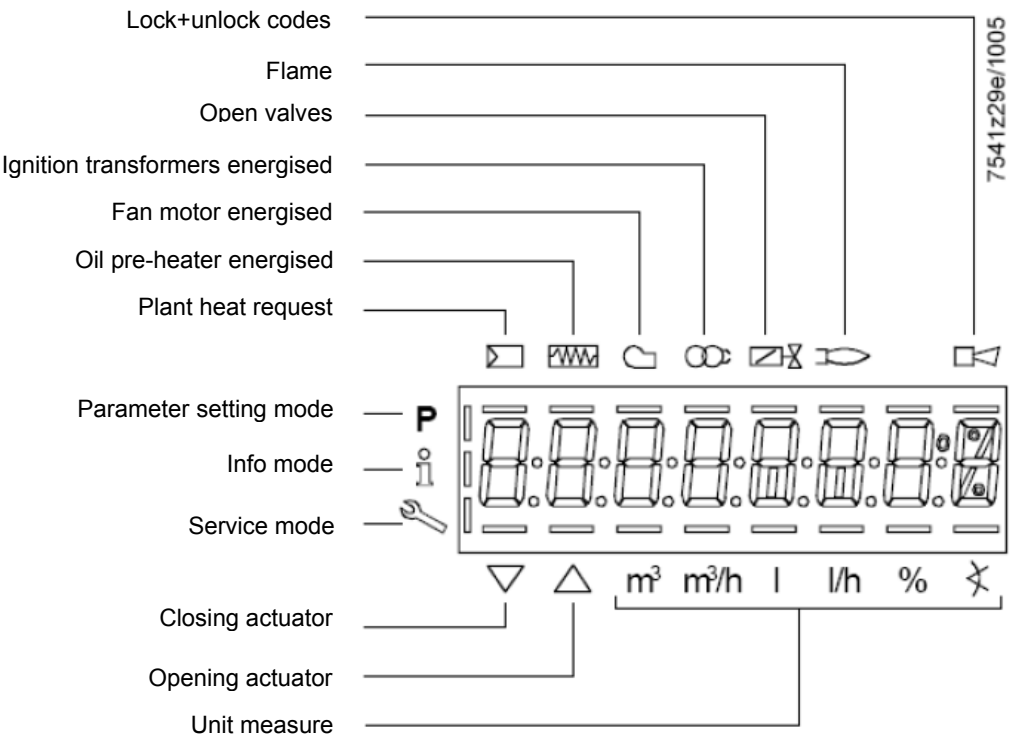

While pushing the  button together with whatever else button, LME73 locks out; the display shows

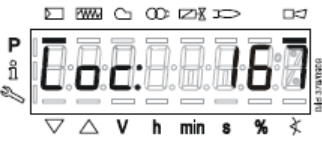

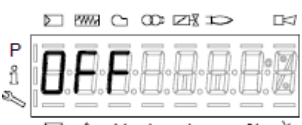On stand-by position,  appears

On operation, all the phases appears with their number.



List of phase with display AZL2x :

| Phase number                                 | Function                                                                                                                                       |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Standby                                      |                                                                                                                                                |
| OFF                                          | Standby, waiting for heat request                                                                                                              |
| Ph08                                         | Power ON / test phase (e.g. detector test)                                                                                                     |
| <b>Startup</b>                               |                                                                                                                                                |
| Ph21                                         | Safety valve ON, air pressure switch test / POC test (timeout / locking after 5 seconds), actuator opens in low-fire position / CLOSE position |
| Ph22                                         | Fan motor ON or air pressure switch test / settling time                                                                                       |
| Ph24                                         | Actuator travels to the prepurge position                                                                                                      |
| Ph30                                         | Prepurging                                                                                                                                     |
| Ph36                                         | Actuator closes until ignition load / low-fire is reached, and parameter 259.02: Actuator opens to a position > ignition load                  |
| Ph38                                         | Preignition                                                                                                                                    |
| Ph40                                         | 1st safety time (TSA1) / ignition transformer ON                                                                                               |
| Ph42                                         | Safety time (ignition transformer OFF), flame check                                                                                            |
| Ph44                                         | Interval: End of safety time and fuel valve 1 (V1) ON                                                                                          |
| Ph50                                         | 2nd safety time (TSA2)                                                                                                                         |
| Ph54                                         | P259.01: Actuator opens in > low-fire                                                                                                          |
| Ph54                                         | P260: Actuator closes in low-fire                                                                                                              |
| oP1                                          | Interval until release of load controller target (analog or 3-position step input)                                                             |
| <b>Operation</b>                             |                                                                                                                                                |
| oP                                           | Operation, modulating operation                                                                                                                |
| <b>Shutdown</b>                              |                                                                                                                                                |
| Ph10                                         | Shutdown, actuator opens in CLOSE position (home run)                                                                                          |
| Ph72                                         | Actuator opens in high-fire position / end of operation                                                                                        |
| Ph74                                         | Postpurging                                                                                                                                    |
| <b>Valve proving</b>                         |                                                                                                                                                |
| Ph80                                         | Test space evacuating                                                                                                                          |
| Ph81                                         | Checking time fuel valve 1                                                                                                                     |
| Ph82                                         | Test space filling                                                                                                                             |
| Ph83                                         | Checking time fuel valve 2                                                                                                                     |
| <b>Waiting phases<br/>(start prevention)</b> |                                                                                                                                                |
| Ph01                                         | Undervoltage                                                                                                                                   |
| Ph02                                         | Safety loop open                                                                                                                               |
| Ph04                                         | Extraneous light at burner startup (timeout / locking after 30 seconds)                                                                        |
| Ph90                                         | Pressure switch-min open → safety shutdown                                                                                                     |
| <b>Lockout</b>                               |                                                                                                                                                |
| LOC                                          | Lockout phase                                                                                                                                  |

**Error code list with operation via internal AZL :**

| <b>Error code</b> | <b>Clear text</b>                                                                                                                                   | <b>Possible cause</b>                                                                                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Loc 2             | No establishment of flame at the end of the safety time (TSA)                                                                                       | <ul style="list-style-type: none"> <li>- Faulty or soiled fuel valves</li> <li>- Faulty or soiled flame detector</li> <li>- Poor adjustment of burner, no fuel</li> <li>- Faulty ignition equipment</li> </ul>                            |
| Loc 3             | Air pressure faulty (air pressure switch (LP) welded in no-load position, decrease to specified time (t10) (air pressure switch (LP) response time) | Air pressure switch (LP) faulty<br><ul style="list-style-type: none"> <li>- Loss of air pressure signal after specified time (t10)</li> <li>- Air pressure switch (LP) is welded in no-load position</li> </ul>                           |
| Loc 4             | Extraneous light                                                                                                                                    | Extraneous light when burner startup                                                                                                                                                                                                      |
| Loc 5             | Air pressure faulty, air pressure switch welded in working position                                                                                 | Time out air pressure switch (LP)<br><ul style="list-style-type: none"> <li>- Air pressure switch (LP) is welded in working position</li> </ul>                                                                                           |
| Loc 6             | Fault of actuator                                                                                                                                   | <ul style="list-style-type: none"> <li>- Actuator faulty or blocked</li> <li>- Faulty connection</li> <li>- Wrong adjustment</li> </ul>                                                                                                   |
| Loc 7             | Loss of flame                                                                                                                                       | Too many losses of flame during operation (limitation of repetitions)<br><ul style="list-style-type: none"> <li>- Faulty or soiled fuel valves</li> <li>- Faulty or soiled flame detector</li> <li>- Poor adjustment of burner</li> </ul> |
| Loc 8             | ---                                                                                                                                                 | Free                                                                                                                                                                                                                                      |
| Loc 9             | ---                                                                                                                                                 | Free                                                                                                                                                                                                                                      |
| Loc 10            | Error not relatable (application), internal error                                                                                                   | Wiring error or internal error, output contacts, other faults                                                                                                                                                                             |
| Loc 12            | Valve proving                                                                                                                                       | Fuel valve 1 (V1) leak                                                                                                                                                                                                                    |
| Loc 13            | Valve proving                                                                                                                                       | Fuel valve 2 (V2) leak                                                                                                                                                                                                                    |
| Loc 22            | Safety loop open                                                                                                                                    | <ul style="list-style-type: none"> <li>- Gas pressure switch-max open</li> <li>- Safety limit thermostat cut out</li> </ul>                                                                                                               |
| Loc 138           | Restore process successful                                                                                                                          | Restore process successful                                                                                                                                                                                                                |
| Loc 167           | Manual locking                                                                                                                                      | Manual locking                                                                                                                                                                                                                            |
| Loc: 206          | AZL2... incompatible                                                                                                                                | Use the latest version                                                                                                                                                                                                                    |



y means of a proper use of the keys, it is possible to enter the various level parameters, as shown in the following flow chart :



## Info level :



Keep pushing the **info** button until



appears. Use + or - for scrolling the parameter list. If on the right side a dash-dot appears, it means the display doesn't show the

full description. Push **info** again for 1 to 3 s in order to show the full description.

Below the visible **Info** parameters:

| Parameter number | Parameter list<br>PME73.000Ax + PME73.831AxBC<br>LME73.831AxBC | Edit       | Value range |         | Resolution | Factory setting | Password level reading from level | Password level writing from level |
|------------------|----------------------------------------------------------------|------------|-------------|---------|------------|-----------------|-----------------------------------|-----------------------------------|
|                  |                                                                |            | Min.        | Max.    |            |                 |                                   |                                   |
| 100              | General                                                        |            |             |         |            |                 |                                   |                                   |
| 102              | Identification date                                            | Read only  | ---         | ---     | ---        |                 | Info                              | ---                               |
| 103              | Identification number                                          | Read only  | 0           | 9999    | 1          |                 | Info                              | ---                               |
| 113              | Burner identification                                          | Read only  | x           | xxxxxxx | 1          |                 | Info                              | ---                               |
| 164              | Numbers of startups resettable                                 | Resettable | 0           | 999999  | 1          |                 | Info                              | Info                              |
| 166              | Total number of startups                                       | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.00           | Switching cycles actuator relay K12                            | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.01           | Switching cycles actuator relay K11                            | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.02           | Switching cycles actuator relay K2                             | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.03           | Switching cycles actuator relay K1                             | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 171              | Max. switching cycles actuator relay                           | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |

## Service level :

Keep pushing the  button until  appears. Use + or - for scrolling the parameter list. . If on the right side a dash-dot appears, it means the display doesn't show the full description. Push  again for 1 to 3 s in order to show the full description.

Below the visible **Info** parameters:

| Parameter number | Parameter list<br>PME73.000Ax + PME73.831AxBC<br>LME73.831AxBC                                              | Edit      | Value range         |                              | Resolution         | Factory setting | Password level reading from level | Password level writing from level |
|------------------|-------------------------------------------------------------------------------------------------------------|-----------|---------------------|------------------------------|--------------------|-----------------|-----------------------------------|-----------------------------------|
|                  |                                                                                                             |           | Min.                | Max.                         |                    |                 |                                   |                                   |
| <b>700</b>       | <b>Error history</b>                                                                                        |           |                     |                              |                    |                 |                                   |                                   |
| 701              | Current error:<br>00: Error code<br>01: Startup meter reading<br>02: MMI phase<br>03: Power value           | Read only | 2<br>0<br>---<br>0% | 255<br>999999<br>---<br>100% | 1<br>1<br>---<br>1 |                 | Service                           | ---                               |
| 702              | Error history former 1:<br>00: Error code<br>01: Startup meter reading<br>02: MMI phase<br>03: Power value  | Read only | 2<br>0<br>---<br>0% | 255<br>999999<br>---<br>100% | 1<br>1<br>---<br>1 |                 | Service                           | ---                               |
| •                |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |
| •                |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |
| •                |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |
| 711              | Error history former 10:<br>00: Error code<br>01: Startup meter reading<br>02: MMI phase<br>03: Power value | Read only | 2<br>0<br>---<br>0% | 255<br>999999<br>---<br>100% | 1<br>1<br>---<br>1 |                 | Service                           | ---                               |
|                  |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |

|     |                  |           |     |                                                |        |  |         |     |
|-----|------------------|-----------|-----|------------------------------------------------|--------|--|---------|-----|
| 900 | Process data     |           |     |                                                |        |  |         |     |
| 936 | Normalized speed | Read only | 0%  | 100%                                           | 0.01 % |  | Service | --- |
| 951 | Mains voltage    | Read only | 0 V | LME73.000A1:<br>175 V<br>LME73.000A2:<br>350 V | 1 V    |  | Service | --- |
| 954 | Flame intensity  | Read only | 0%  | 100%                                           | 1%     |  | Service | --- |

## Parameter level (Heating engineering) :

This level lets the engineer to modify some burner parameters. It is protect with a 4 digit password (SO level) and a 5 digit password (OEM level)

Password input : push **F** and **A** buttons together until the display shows "**code**" and 7 underlines. The left one flashes. By **+** or **-** move the flashing underline until it is on the desired position and push "enter". The underline becomes a dash. By means of **+** or **-**, choose the right character and push "enter". Input the whole password and the **PArA** appears and later on **000 Int**.

Scroll the parameters using **+** or **-**: **000Int, 100, 200, 500, 600 are on the display**. Choose the proper parameter group with the **enter** button and scroll the options with **+** e poi **-** (below the full par set: the two columns on the right give the level access). Choose the parameter to be modified with "enter" is writing is allowed. The parameter now flashes: **+** or **-** modifies the parameter and **enter** confirms. **+** and **-** pushed together move the menu one step back. Push **+** and **-** several times in order to get the home position..

| Parameter number | Parameter list<br>PME73.000Ax + PME73.831AxBC<br>LME73.831AxBC                                                                                                                      | Edit | Value range |          | Resolution | Factory setting | Password level reading from level | Password level writing from level |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-------------|----------|------------|-----------------|-----------------------------------|-----------------------------------|
|                  |                                                                                                                                                                                     |      | Min.        | Max.     |            |                 |                                   |                                   |
| <b>0</b>         | <b>Internal parameter</b>                                                                                                                                                           |      |             |          |            |                 |                                   |                                   |
| 41               | Heating engineers password (4 characters)                                                                                                                                           | Edit | xxxx        | xxxx     | ---        |                 | ---                               | OEM                               |
| 42               | OEM's password (5 characters)                                                                                                                                                       | Edit | xxxxx       | xxxxx    | ---        |                 | ---                               | OEM                               |
| 60               | Backup / restore                                                                                                                                                                    | Edit | Restore     | Backup   | ---        |                 | ---                               | SO                                |
| <b>100</b>       | <b>General</b>                                                                                                                                                                      |      |             |          |            |                 |                                   |                                   |
| 123              | Min. power control step                                                                                                                                                             | Edit | 1%          | 10%      | 0.1        |                 | SO                                | SO                                |
| 140              | Mode display of Display and operating unit AZL2...<br>1 = Standard (program phase)<br>2 = Flame 1 (QRA... / ION)<br>3 = Flame 2 (QRB... / QRC...)<br>4 = Active power (power value) | Edit | 1           | 4        | 4          |                 | SO                                | SO                                |
| <b>200</b>       | <b>Burner control</b>                                                                                                                                                               |      |             |          |            |                 |                                   |                                   |
| 224              | Specified time (t10) air pressure switch (LP)                                                                                                                                       | Edit | 0 s         | 13.818 s | 0.294 s    | 12,054          | SO                                | OEM                               |
| 225              | Gas: Prepurge time (t1)                                                                                                                                                             | Edit | 0 s         | 1237 s   | 4.851 s    | 29,106          | SO                                | OEM                               |
| 226              | Gas: Preignition time (t3)                                                                                                                                                          | Edit | 1.029 s     | 37.485 s | 0.147 s    | 2,058           | SO                                | OEM                               |
| 230              | Interval (t4): End of safety time (TSA) - fuel valve 1 (V1) ON                                                                                                                      | Edit | 3.234 s     | 74.97 s  | 0.294 s    | 3,234           | SO                                | OEM                               |
| 231              | Interval (t9): Fuel valve 1 (V1) ON - pilot valve (PV) OFF                                                                                                                          | Edit | 0 s         | 74.97 s  | 0.294 s    | 2,940           | SO                                | OEM                               |
| 232              | Interval (t5): Pilot valve (PV) OFF - load controller (LR) release                                                                                                                  | Edit | 2.058 s     | 74.97 s  | 0.294 s    | 8.820           | SO                                | OEM                               |
| 234              | Gas: Postpurge time (t8)                                                                                                                                                            | Edit | 0 s         | 1237 s   | 4.851 s    | 0               | SO                                | OEM                               |
| 239              | Gas: Intermittent operation after 24 hours of continuous operation<br>0=OFF<br>1=ON                                                                                                 | Edit | 0           | 1        | 1          | 1               | SO                                | OEM                               |

|        |                                                                                                                                                                                 |      |         |          |         |        |    |     |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|---------|----------|---------|--------|----|-----|
| 240    | Repetition in the event of loss of flame during operation<br>0 = None<br>1 = None<br>2 = 1 x Repetition                                                                         | Edit | 0       | 2        | 1       | 0      | SO | OEM |
| 241.00 | Valve proving<br>0 = Off<br>1 = On                                                                                                                                              | Edit | 0       | 1        | 1       | 1      | SO | OEM |
| 241.01 | Valve proving<br>0 = During prepurge time (t1)<br>1 = During postpurge time (t8)                                                                                                | Edit | 0       | 1        | 1       | 0      | SO | OEM |
| 241.02 | Valve proving<br>0 = According to P241.01<br>1 = During prepurge time (t1) and postpurge time (t8)                                                                              | Edit | 0       | 1        | 1       | 0      | SO | OEM |
| 242    | Valve proving test space evacuating                                                                                                                                             | Edit | 0 s     | 2.648 s  | 0.147 s | 2,646  | SO | OEM |
| 243    | Valve proving time test atmospheric pressure                                                                                                                                    | Edit | 1.029 s | 37.485 s | 0.147 s | 10,290 | SO | OEM |
| 244    | Valve proving test space filling                                                                                                                                                | Edit | 0 s     | 2.648 s  | 0.147 s | 2,646  | SO | OEM |
| 245    | Valve proving time test gas pressure                                                                                                                                            | Edit | 1.029 s | 37.485 s | 0.147 s | 10,290 | SO | OEM |
| 254    | Response time detector error<br>0 = 1 s<br>1 = 3 s                                                                                                                              | Edit | 0       | 1        | 1       | 0      | SO | OEM |
| 257    | Gas: Postignition time (t3n – 0.3 seconds)                                                                                                                                      | Edit | 0 s     | 13.23 s  | 0.147 s | 2,205  | SO | OEM |
| 259.00 | Opening time of actuator (t11) (timeout for lockout)                                                                                                                            | Edit | 0 s     | 1237 s   | 4.851 s | 67,914 | SO | OEM |
| 259.01 | Opening time of actuator from ignition load to low-fire position                                                                                                                | Edit | 0 s     | 37.485 s | 0.147 s | 14,994 | SO | OEM |
| 259.02 | Opening time of actuator from low-fire to ignition load position                                                                                                                | Edit | 0 s     | 37.485 s | 0.147 s | 14,994 |    |     |
| 260    | Closing time of actuator (t12) (timeout for lockout)                                                                                                                            | Edit | 0 s     | 1237 s   | 4.851 s | 67,914 | SO | OEM |
| 500    | <b>Ratio control</b>                                                                                                                                                            |      |         |          |         |        |    |     |
| 515    | Actuator position during prepurge time (t1) and postpurge time (t8)<br>0: Purging in low-fire<br>1: Purging in high-fire                                                        | Edit | 0       | 1        | 1       | 1      | SO | OEM |
| 560    | Pneumatic combustion control<br>0 = off / 3-step modulation<br>1 = PWM fan / analog modulation<br>2 = air damper / analog modulation (feedback potentiometer ASZxx.3x required) | Edit | 0       | 2        | 1       | 1      | SO | SO  |
|        |                                                                                                                                                                                 |      |         |          |         |        |    |     |
|        |                                                                                                                                                                                 |      |         |          |         |        |    |     |

| 600 | Power setting                                                                                                                                                                                            |      |   |   |   |   |    |    |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|---|---|---|---|----|----|
| 654 | Analog input (feedback potentiometer ASZxx.3x required)<br>0 = 3-position step input<br>1 = 0...10 V<br>2 = 0...135 $\Omega$<br>3 = 0...20 mA<br>4 = 4...20 mA with lockout at I < 4 mA<br>5 = 4...20 mA | Edit | 0 | 5 | 1 | 0 | SO | SO |

| WARNING                                                                                |                                                                  |
|----------------------------------------------------------------------------------------|------------------------------------------------------------------|
| Parameter Num. :<br>41<br>42<br>60<br>123<br>140<br>242<br>243<br>244<br>245<br>259.01 | Adjustable parameters from SO or OEM levels for<br>LME73.831AxBC |





Note: Specifications and data subject to change. Errors and omissions excepted.




## USER'S MANUAL

COD. M12925CA Rel 1.2 08/2014

SOFTWARE VERSION 1.0x T73  
code 80379 / Edition 01 - 06/2012

## 1 • INSTALLATION

### • Dimensions and cut-out; panel mounting

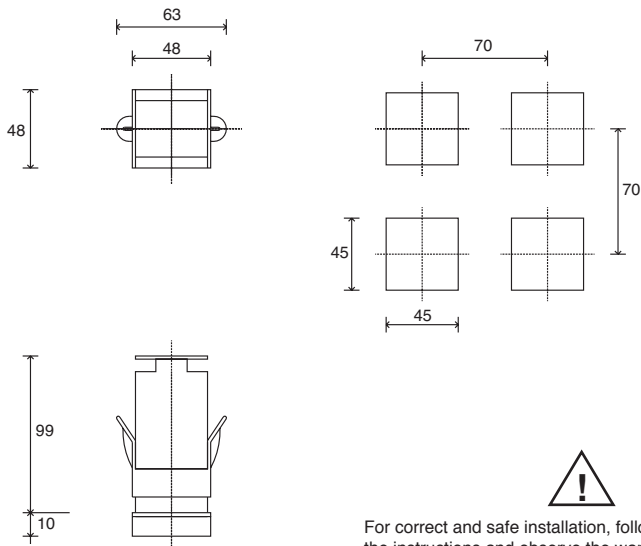

For correct and safe installation, follow the instructions and observe the warnings contained in this manual.

#### Panel mounting:

To fix the unit, insert the brackets provided into the seats on either side of the case.  
To mount two or more units side by side, respect the cut-out dimensions shown in the drawing.

**CE MARKING:** The instrument conforms to the European Directives 2004/108/CE and 2006/95/CE with reference to the generic standards: **EN 61000-6-2** (immunity in industrial environment) **EN 61000-6-3** (emission in residential environment) **EN 61010-1** (safety).

**MAINTENANCE:** Repairs must be done only by trained and specialized personnel.

Cut power to the device before accessing internal parts.

Do not clean the case with hydrocarbon-based solvents (Petrol, Trichlorethylene, etc.). Use of these solvents can reduce the mechanical reliability of the device. Use a cloth dampened in ethyl alcohol or water to clean the external plastic case.

**SERVICE:** GEFRAN has a service department. The warranty excludes defects caused by any use not conforming to these instructions.

EMC conformity has been tested with the following connections

| FUNCTION           | CABLE TYPE                      | LENGTH |
|--------------------|---------------------------------|--------|
| Power supply cable | 1 mm <sup>2</sup>               | 1 m    |
| Relay output cable | 1 mm <sup>2</sup>               | 3,5 m  |
| TC input           | 0,8 mm <sup>2</sup> compensated | 5 m    |
| Pt100 input        | 1 mm <sup>2</sup>               | 3 m    |

## 2 • TECHNICAL SPECIFICATIONS

|                                                                                                                            |                                                                                                                                                                                          |
|----------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Display                                                                                                                    | 2x4 digit green, high display 10 and 7mm                                                                                                                                                 |
| Keys                                                                                                                       | 4 of mechanical type (Man/Aut, INC, DEC, F)                                                                                                                                              |
| Accuracy                                                                                                                   | 0.2% f.s. $\pm 1$ digit ambient temperature 25°C                                                                                                                                         |
| Main input (settable digital filter)                                                                                       | TC, RTD, PTC, NTC<br>60mV, 1V Ri $\geq$ 1M $\Omega$ ; 5V, 10V Ri $\geq$ 10K $\Omega$ ; 20mA Ri=50 $\Omega$<br>Tempo di campionamento 120 msec.                                           |
| Type TC Thermocouples (ITS90)                                                                                              | Type TC Thermocouples : J,K,R,S,T (IEC 584-1, CEI EN 60584-1, 60584-2) ; custom linearization is available / types B,E,N,L GOST,U,G,D,C are available by using the custom linearization. |
| Cold junction error                                                                                                        | 0,1° / °C                                                                                                                                                                                |
| RTD type (scale configurable within indicated range, with or without decimal point) (ITS90)<br>Max line resistance for RTD | DIN 43760 (Pt100), JPT100<br>20 $\Omega$                                                                                                                                                 |
| PTC type / NTC Type                                                                                                        | 990 $\Omega$ , 25°C / 1K $\Omega$ , 25°C                                                                                                                                                 |
| Safety                                                                                                                     | detection of short-circuit or opening of probes, LBA alarm                                                                                                                               |
| °C / °F selection                                                                                                          | configurable from faceplate                                                                                                                                                              |
| Linear scale ranges                                                                                                        | -1999 to 9999 with configurable decimal point position                                                                                                                                   |
| Controls                                                                                                                   | PID, Self-tuning, on-off                                                                                                                                                                 |
| pb - dt - it                                                                                                               | 0,0...999,9 % - 0,00...99,99 min - 0,00...99,99 min                                                                                                                                      |
| Action                                                                                                                     | Heat / Cool                                                                                                                                                                              |
| Control outputs                                                                                                            | on / off                                                                                                                                                                                 |
| Maximum power limit heat / cool                                                                                            | 0,0...100,0 %                                                                                                                                                                            |
| Cycle time                                                                                                                 | 0...200 sec                                                                                                                                                                              |
| Main output type                                                                                                           | relay, logic, continuous (0...10V Rload $\geq$ 250K $\Omega$ , 0/4...20mA Rload $\leq$ 500 $\Omega$ )                                                                                    |
| Softstart                                                                                                                  | 0,0...500,0 min                                                                                                                                                                          |
| Fault power setting                                                                                                        | -100,0...100,0 %                                                                                                                                                                         |
| Automatic blanking                                                                                                         | Displays PV value, optional exclusion                                                                                                                                                    |
| Configurable alarms                                                                                                        | Up to 3 alarm functions assignable to an output, configurable as: maximum, minimum, symmetrical, absolute/deviation, LBA                                                                 |
| Alarm masking                                                                                                              | - exclusion during warm up<br>- latching reset from faceplate or external contact                                                                                                        |
| Type of relay contact                                                                                                      | NO (NC), 5A, 250V/30Vdc cos $\phi$ =1                                                                                                                                                    |
| Logic output for static relays                                                                                             | 24V $\pm$ 10% (10V min at 20mA)                                                                                                                                                          |
| Transmitter power supply                                                                                                   | 15/24Vdc, max 30mA short-circuit protection                                                                                                                                              |
| Power supply (switching type)                                                                                              | (std) 100 ... 240Vac $\pm$ 10%<br>(opt.) 11...27Vac/dc $\pm$ 10%;<br>50/60Hz, 8VA max                                                                                                    |
| Faceplate protection                                                                                                       | IP65                                                                                                                                                                                     |
| Working / Storage temperature range                                                                                        | 0...50°C / -20...70°C                                                                                                                                                                    |
| Relative humidity                                                                                                          | 20 ... 85% non-condensing                                                                                                                                                                |
| Environmental conditions of use                                                                                            | for internal use only, altitude up to 2000m                                                                                                                                              |
| Installation                                                                                                               | Panel, plug-in from front                                                                                                                                                                |
| Weight                                                                                                                     | 160g for the complete version                                                                                                                                                            |

### 3 • DESCRIPTION OF FACEPLATE

#### Function indicators

Indicates modes of operation

- L1 MAN/AUTO = OFF (automatic control)  
ON (manual control)
- L2 PRE-HEATING = ON (running)
- L3 SELFTUNING = ON (enabled Self)  
OFF (disabled Self)

#### Automatic/Manual adjustment selection

Active only when PV display visualises the process variable (button pressed for at least 5 sec.)

#### "Inc" and "Dec" key

Press to increment (decrement) any numerical parameter • Increment (decrement) speed is proportional to time key stays pressed • The operation is not cyclic: once the maximum (minimum) value of a field is reached, the value will not change even if the key remains pressed.



#### Indication of output states

OUT 1 (AL1); OUT 2 (OPEN); OUT 3 (CLOSED)

#### PV Display: Indication of process variable

Error Indication: LO, HI, Sbr, Err  
**LO**= the value of process variable is < di LO\_S  
**HI**= the value of process variable is > di HI\_S  
**Sbr**= faulty sensor or input values higher than max. limits  
**Err**= PT100 third wire opened for PT100, PTC or input values lower than min. limits (i.e.: TC wrong connection)


#### SV display: Indication of setpoint

#### Function key


Gives access to the various configuration phases • Confirms change of set parameters and browses next or previous parameter (if Auto/Man key is pressed)

### 4 • CONNECTIONS


#### • Outputs

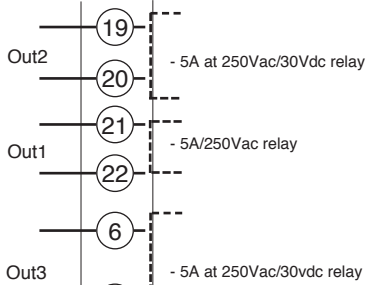

#### • Power Supply

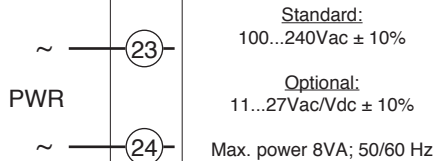


TOP

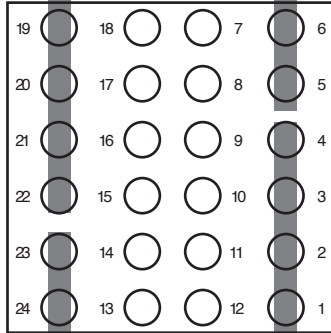


#### • Inputs

##### • TC Input


Available thermocouples:  
 J, K, R, S, T  
 (B, E, N, L, U, G, D, C custom linearization is available)  
 - Observe polarities  
 - For extensions, use the correct compensating cable for the type of TC used

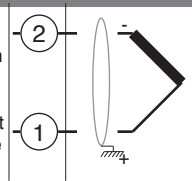


##### • Linear input with 3-wire transmitter

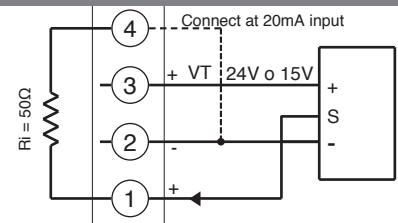

##### • Linear input (I)

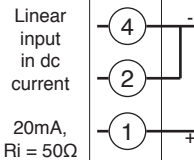


##### • Input 1 linear with transmitter 2 wires

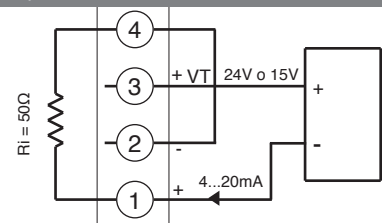

#### • Identification of boards


Power board - Solder side

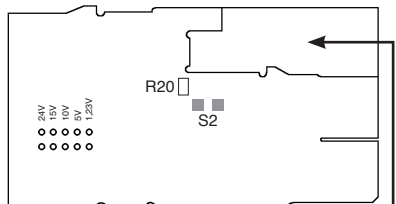

Select transmitter voltage

**N.B. :** you can keep the **OUT1** relay energized at power-up by inserting jumper **S2** and removing resistance **R20**.


CPU board - Component side

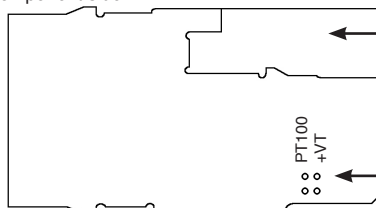

IN/OUT boards (see appendix)


Select signal at contact 3

##### • Linear input (V)

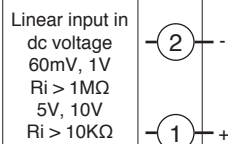


##### • Pt100 / PTC / NTC

Use wires of adequate diameter (min. 1mm²)  
 PT100, JPT100, PTC, NTC


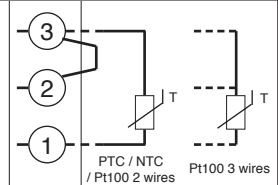


#### • Device structure

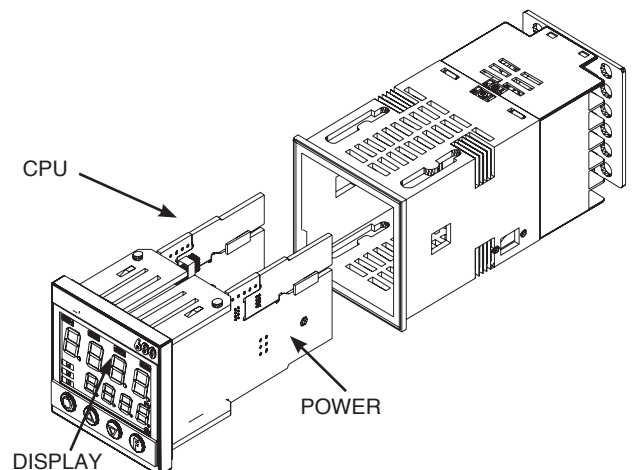


## 5 • “EASY” PROGRAMMING and CONFIGURATION


THE EASY CONFIGURATION (Pro=0...12) IS SUITABLE FOR VERSIONS WITH AL1/OPEN/CLOSED

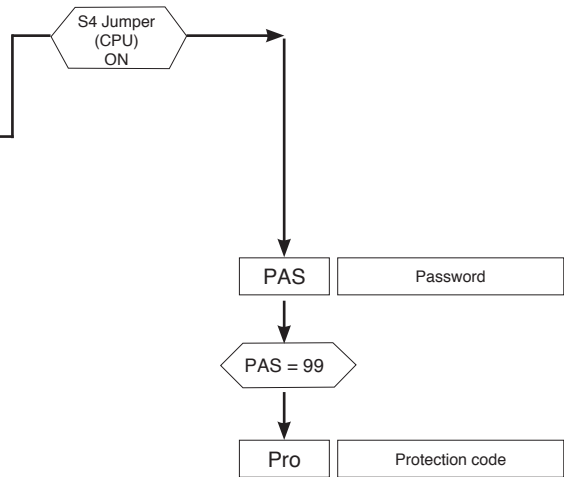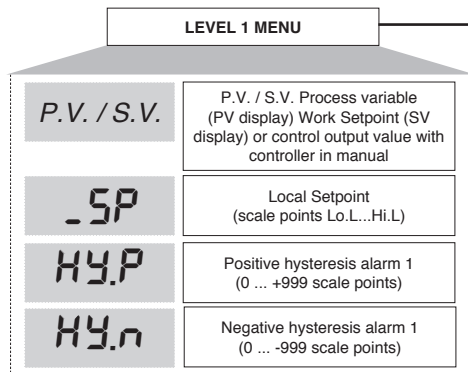



### • Prot

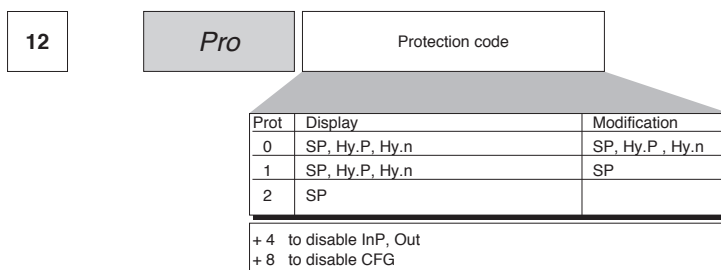



## 6 • PROGRAMMING and CONFIGURATION

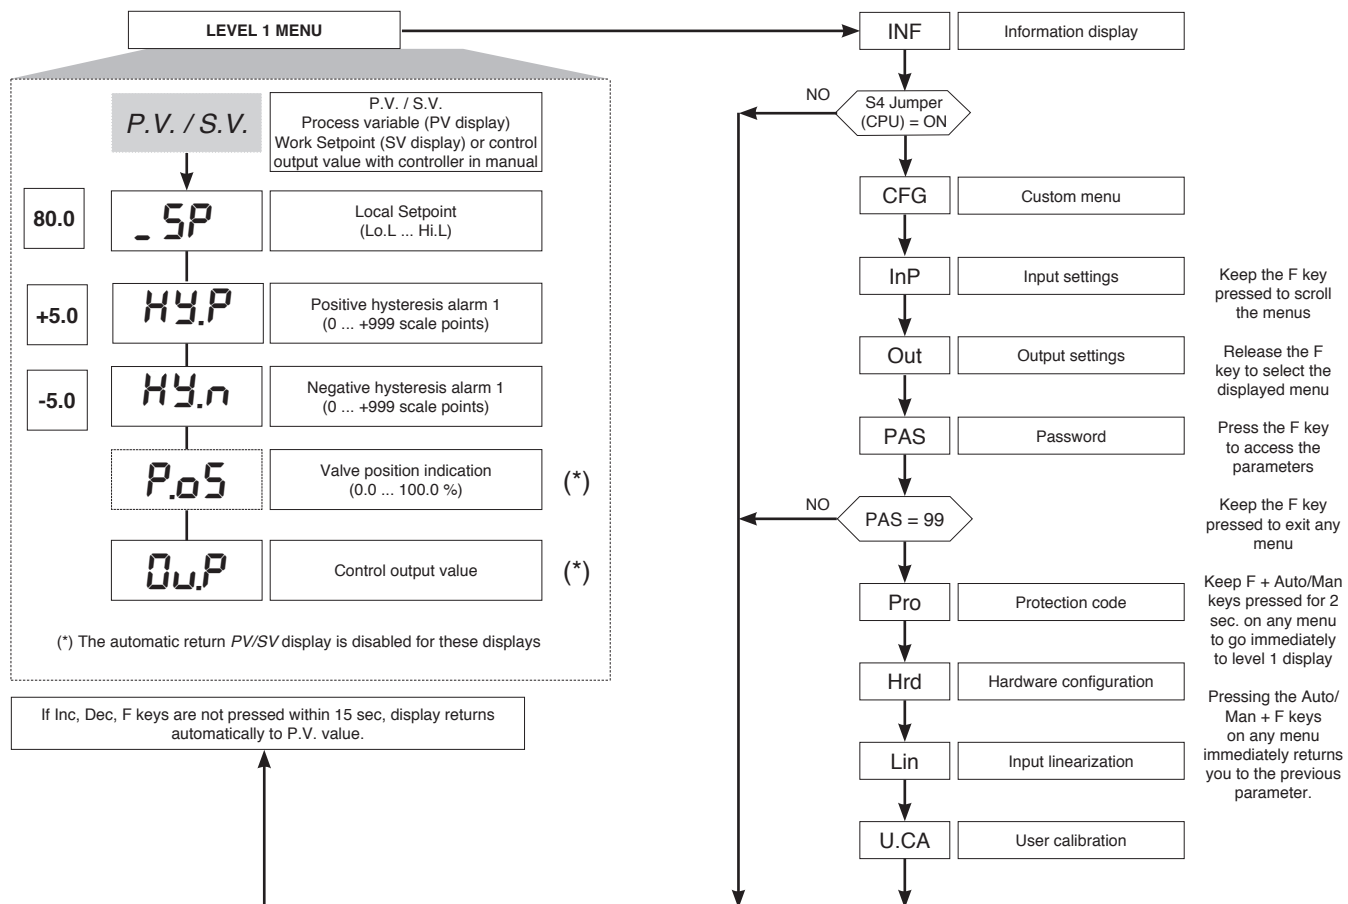



**N.B.:** Once a particular configuration is entered, all unnecessary parameters are no longer displayed

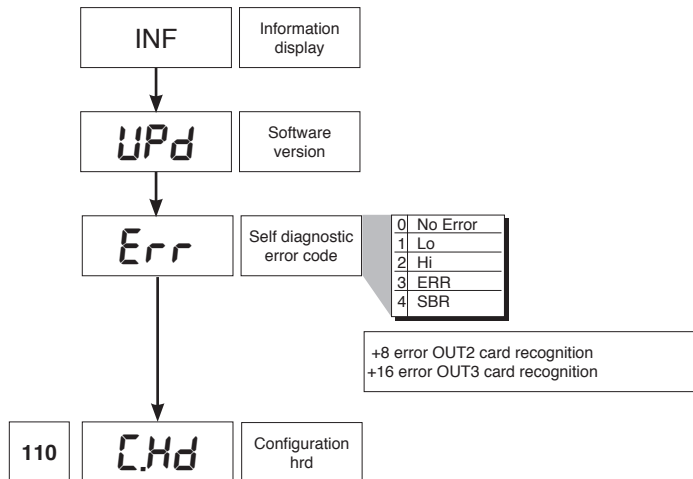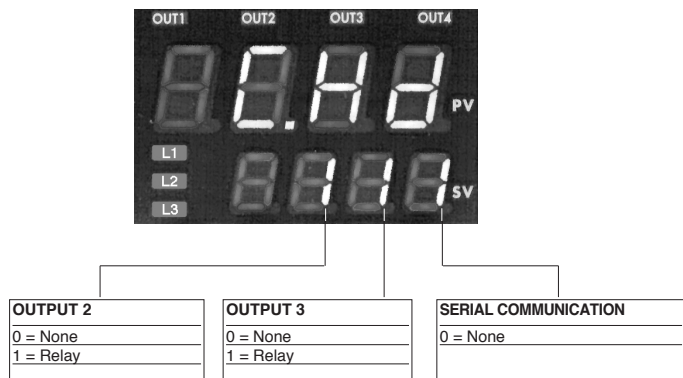

• CFG

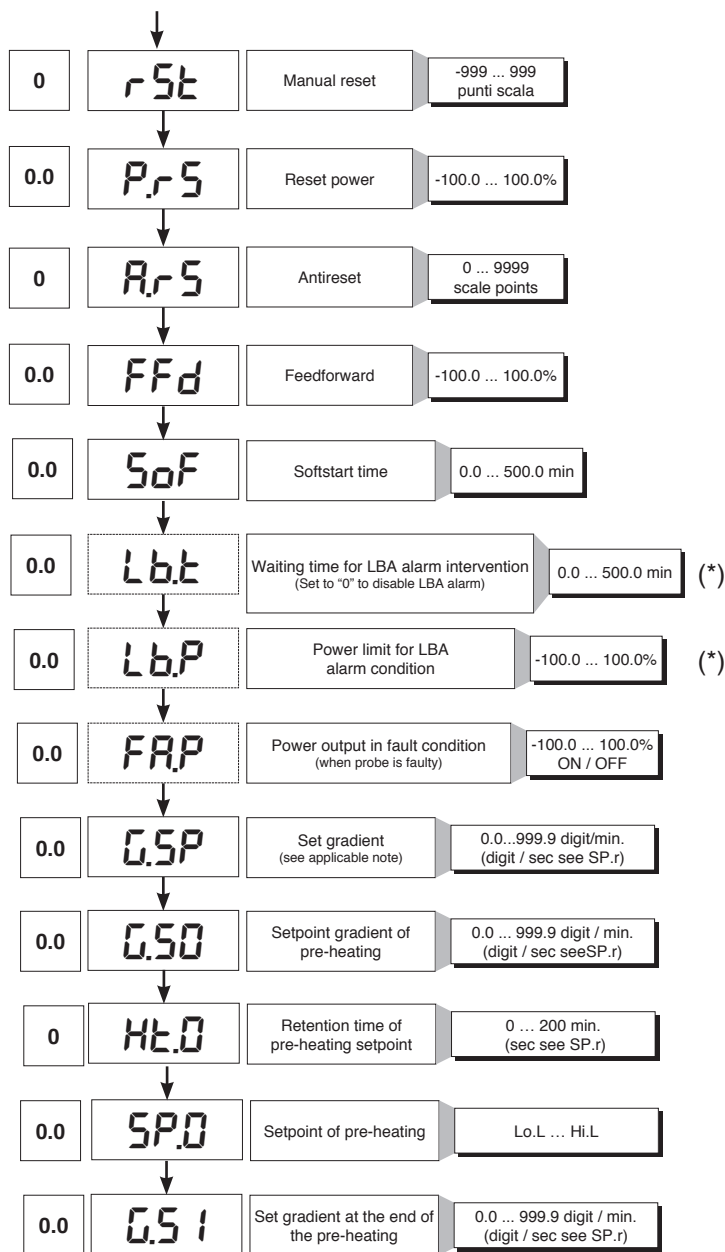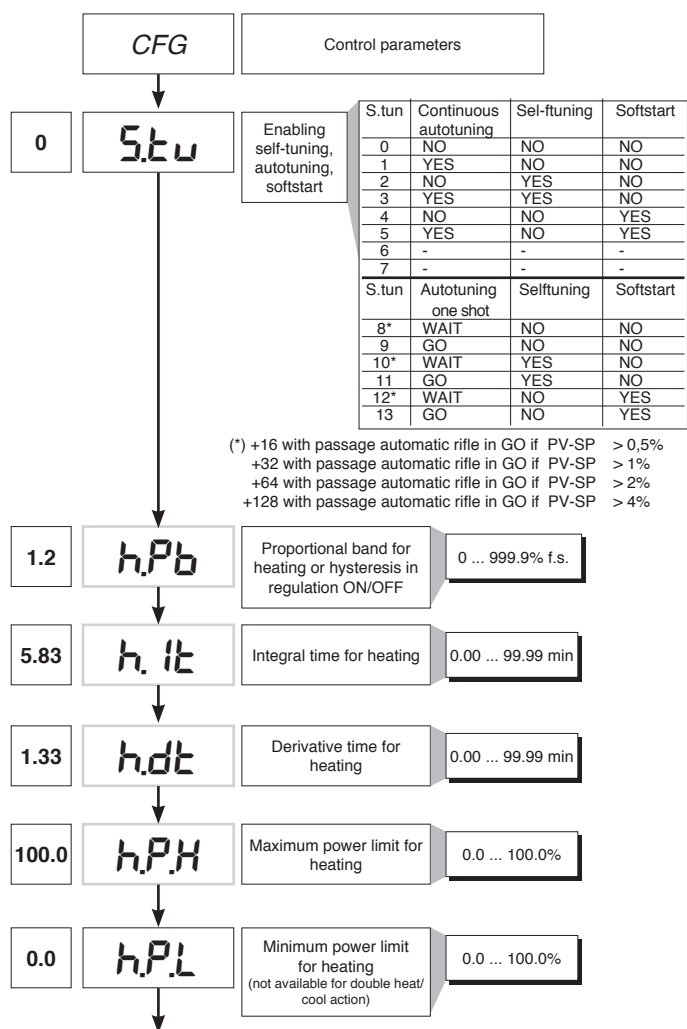

(\*) LBA alarm may be reset by simultaneously pressing  $\Delta$  +  $\nabla$  keys when OutP is displayed or by switching to Manual.

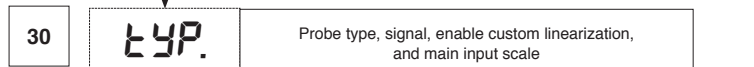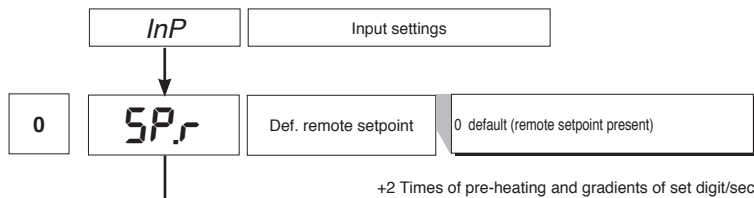


| Type | Probe type    | without decimal point | with decimal point |
|------|---------------|-----------------------|--------------------|
|      | Sensore:      | TC                    |                    |
| 0    | TC J °C       | 0/1000                | 0.0/999.9          |
| 1    | TC J °F       | 32/1832               | 32.0/999.9         |
| 2    | TC K °C       | 0/1300                | 0.0/999.9          |
| 3    | TC K °F       | 32/2372               | 32.0/999.9         |
| 4    | TC R °C       | 0/1750                | 0.0/999.9          |
| 5    | TC R °F       | 32/3182               | 32.0/999.9         |
| 6    | TC S °C       | 0/1750                | 0.0/999.9          |
| 7    | TC S °F       | 32/3182               | 32.0/999.9         |
| 8    | TC T °C       | -200/400              | -199.9/400.0       |
| 9    | TC T °F       | -328/752              | -199.9/752.0       |
| 28   | TC            | CUSTOM                | CUSTOM             |
| 29   | TC            | CUSTOM                | CUSTOM             |
| 30   | PT100 °C      | -200/850              | -199.9/850.0       |
| 31   | PT100 °F      | -328/156.2            | -199.9/999.9       |
| 32   | JPT100 °C     | -200/600              | -199.9/600.0       |
| 33   | JPT100 °F     | -328/1112             | -199.9/999.9       |
| 34   | PTC °C        | -55/120               | -55.0/120.0        |
| 35   | PTC °F        | -67/248               | -67.0/248.0        |
| 36   | NTC °C        | -10/70                | -10.0/70.0         |
| 37   | NTC °F        | 14/158                | 14.0/158.0         |
| 38   | 0...60 mV     | -1999/9999            | -199.9/999.9       |
| 39   | 0...60 mV     | Custom scale          | Custom scale       |
| 40   | 12...60 mV    | -1999/9999            | -199.9/999.9       |
| 41   | 12...60 mV    | Custom scale          | Custom scale       |
| 42   | 0...20 mA     | -1999/9999            | -199.9/999.9       |
| 43   | 0...20 mA     | Custom scale          | Custom scale       |
| 44   | 4...20 mA     | -1999/9999            | -199.9/999.9       |
| 45   | 4...20 mA     | Custom scale          | Custom scale       |
| 46   | 0...10 V      | -1999/9999            | -199.9/999.9       |
| 47   | 0...10 V      | Custom scale          | Custom scale       |
| 48   | 2...10 V      | -1999/9999            | -199.9/999.9       |
| 49   | 2...10 V      | Custom scale          | Custom scale       |
| 50   | 0...5 V       | -1999/9999            | -199.9/999.9       |
| 51   | 0...5 V       | Custom scale          | Custom scale       |
| 52   | 1...5 V       | -1999/9999            | -199.9/999.9       |
| 53   | 1...5 V       | Custom scale          | Custom scale       |
| 54   | 0...1 V       | -1999/9999            | -199.9/999.9       |
| 55   | 0...1 V       | Custom scale          | Custom scale       |
| 56   | 200mV...1V    | -1999/9999            | -199.9/999.9       |
| 57   | 200mV...1V    | Custom scale          | Custom scale       |
| 58   | Cust10 V-20mA | -1999/9999            | -199.9/999.9       |
| 59   | Cust10 V-20mA | Custom scale          | Custom scale       |
| 60   | Cust 60mV     | -1999/9999            | -199.9/999.9       |
| 61   | Cust 60mV     | Custom scale          | Custom scale       |
| 62   | PT100-JPT     | CUSTOM                | CUSTOM             |
| 63   | PTC           | CUSTOM                | CUSTOM             |
| 64   | NTC           | CUSTOM                | CUSTOM             |


For custom linearization:  
 - LO signal is generated with variable below Lo.S or at minimum calibration value  
 - HI signal is generated with variable above Lo.S or at maximum calibration value

Max. non-linearity error for thermocouples (TC), resistors (PT100) and thermistors (PTC, NTC).  
 The error is calculated as deviation from theoretical value and is expressed as percentage of full scale (in °C).

**S, R** range 0...1750°C; error < 0.2% f.s. (t > 300°C) / for other range; error < 0.5% f.s.  
**T** error < 0.2% f.s. (t > -150°C)  
**B** range 44...1800°C; error < 0.5% f.s. (t > 300°C) / range 44,0...999.9; error < 1% f.s. (t > 300°C)  
**U** range -99.9...99.9 and -99...99°C; error < 0.5% f.s. / for other range; error < 0.2% f.s. (t > -150°C)  
**G** error < 0.2% f.s. (t > 300°C)  
**D** error < 0.2% f.s. (t > 200°C)  
**C** range 0...2300; error < 0.2% f.s. / for other range; error < 0.5% f.s.

**NTC error < 0.5% f.s.**  
 Tc: J, K, E, N, L error < 0,2% f.s.  
 JPT100 and PTC error < 0,2% f.s.  
 PT100 scale -200...850°C  
 Precision better than 0,2% f.s. at 25°C  
 In range 0...50°C:  
 • Precision better than 0,2% f.s. in range -200...400°C  
 • Precision better than 0,4% f.s. in range +400...850°C (where f.s. refers to range -200... +850°C)

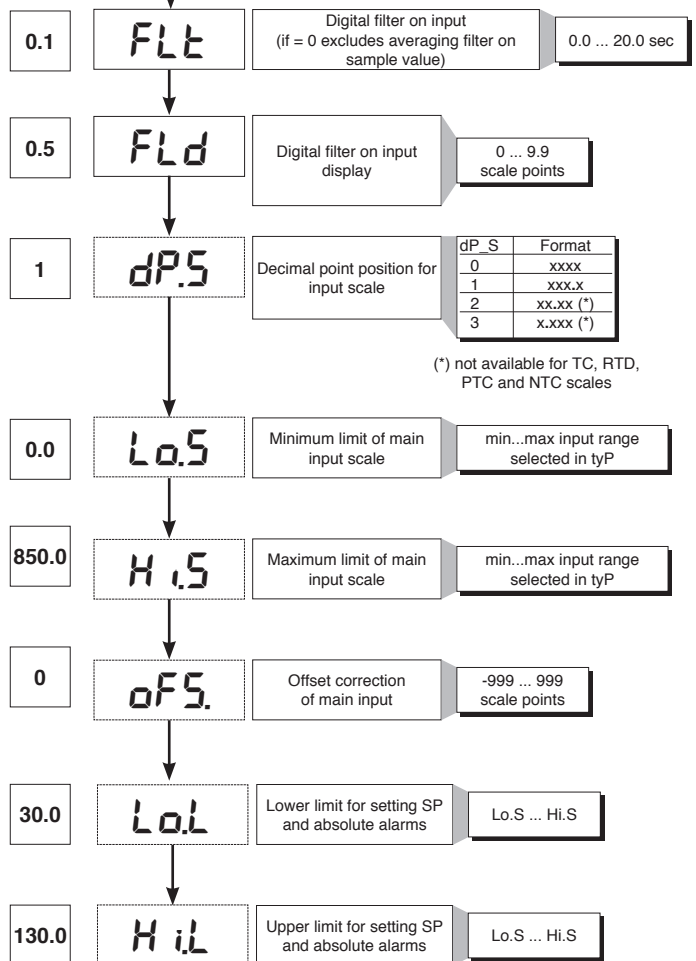

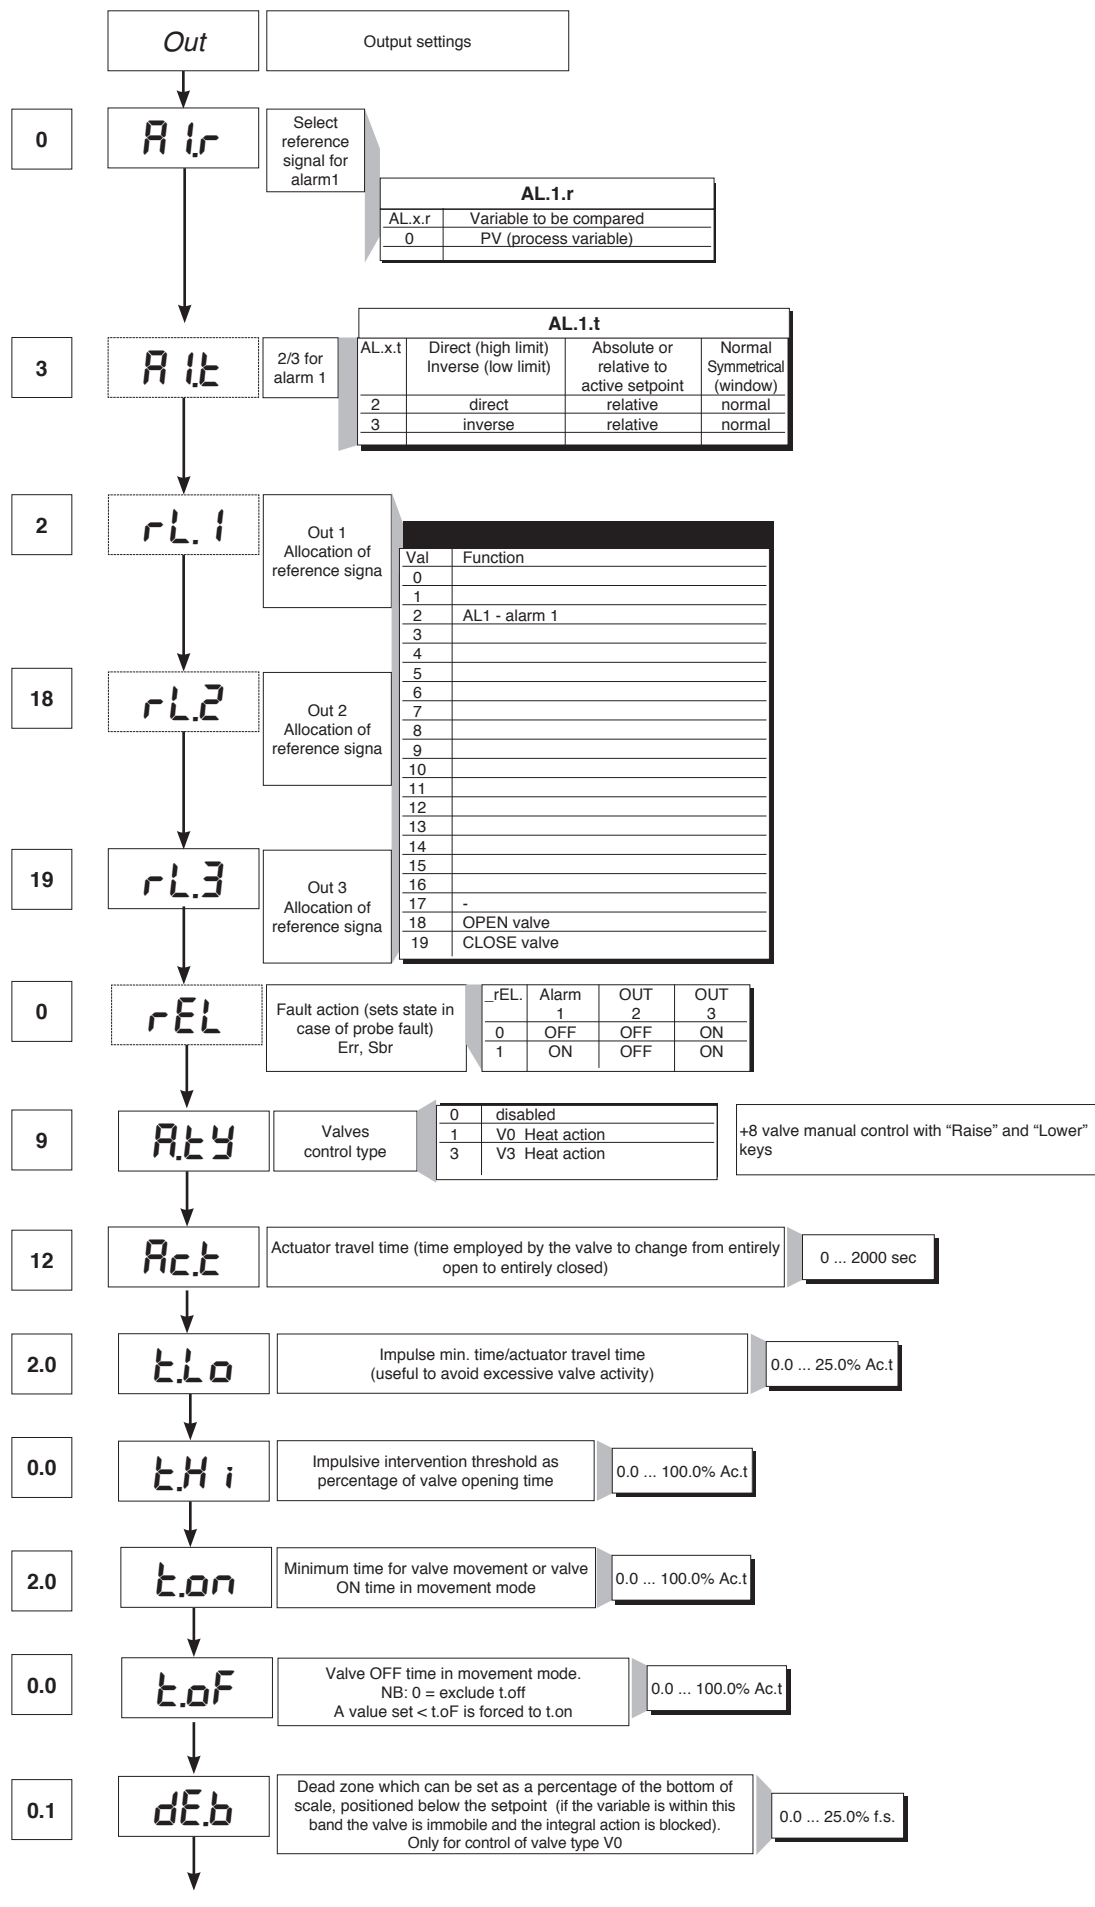

## • Prot

12

*Pro*

Protection code

| Prot | Display                                   | Modification                    |
|------|-------------------------------------------|---------------------------------|
| 0    | SP, Hy.P, Hy.n, AL.2, AL.3, PoS, OuP, INF | SP, Hy.P, Hy.n, AL.2, AL.3, PoS |
| 1    | SP, Hy.P, Hy.n, AL.2, AL.3, PoS, OuP, INF | SP                              |
| 2    | SP, OuP, INF                              |                                 |

+ 4 to disable InP, Out  
+ 8 to disable CFG  
+ 16 to disable SW "power-up - power down"  
+ 32 disable manual power latching  
+ 64 to disable manual power modification  
+128 enables full configuration

Note: OuP and INF only display configuration extended

## • Hrd

*Hrd*

Hardware configuration

0

*hd.1*

Enable multiset instrument control by serial

6

*Ctrl*

Control type

| Val | Control type |
|-----|--------------|
| 0   | P heat       |
| 1   |              |
| 2   |              |
| 3   | PI heat      |
| 4   |              |
| 5   |              |
| 6   | PID heat     |
| 7   |              |
| 8   |              |
| 9   | ON-OFF heat  |
| 10  |              |
| 11  |              |
| 12  |              |
| 13  |              |
| 14  |              |

Selection of derivative action sampling time:  
+ 0 sample 1 sec.  
+ 16 sample 4 sec.  
+ 32 sample 8 sec.  
+ 64 sample 240 msec.

Note: LbA alarm is not enabled with ON/OFF type control

1

*AL.n*

Select number of enabled alarms

| AL.nr | Alarm1  | Alarm 2  | Alarm 3  |
|-------|---------|----------|----------|
| 1     | enabled | disabled | disabled |

1

*but.*

Function of M/A keys

| b u t t |                               |
|---------|-------------------------------|
| 0       | No function (key disenabled)) |
| 1       | MAN / AUTO controller         |
| 2       |                               |
| 3       | HOLD                          |
| 4       |                               |
| 5       |                               |
| 6       | Start/Stop selftuning         |
| 7       | Start/Stop autotuning         |
| 8       |                               |

+ 16 disables the "back menu" function (Auto/Man + F keys) in the configuration menus


0

*dSP*


Defining SV display function

| diSP | Lower display (SV) function |
|------|-----------------------------|
| 0    | SSP - setpoint enabled      |
| 1    | PoS - valve position        |
| 2    | Control output value        |
| 3    | Deviation (SSP - PV)        |




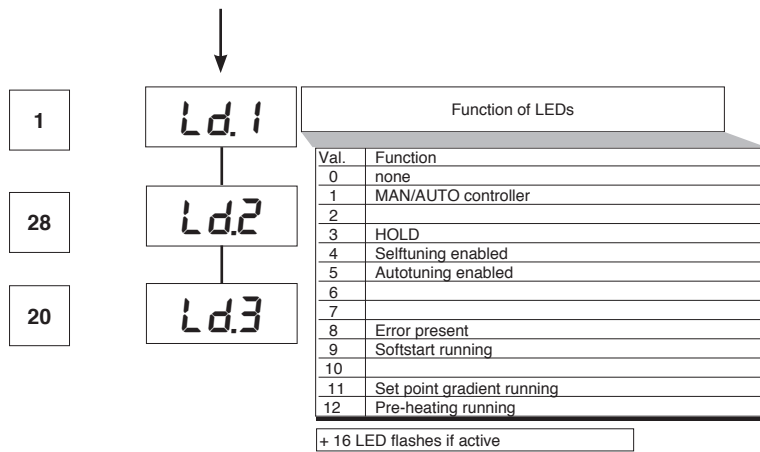


## • Lin

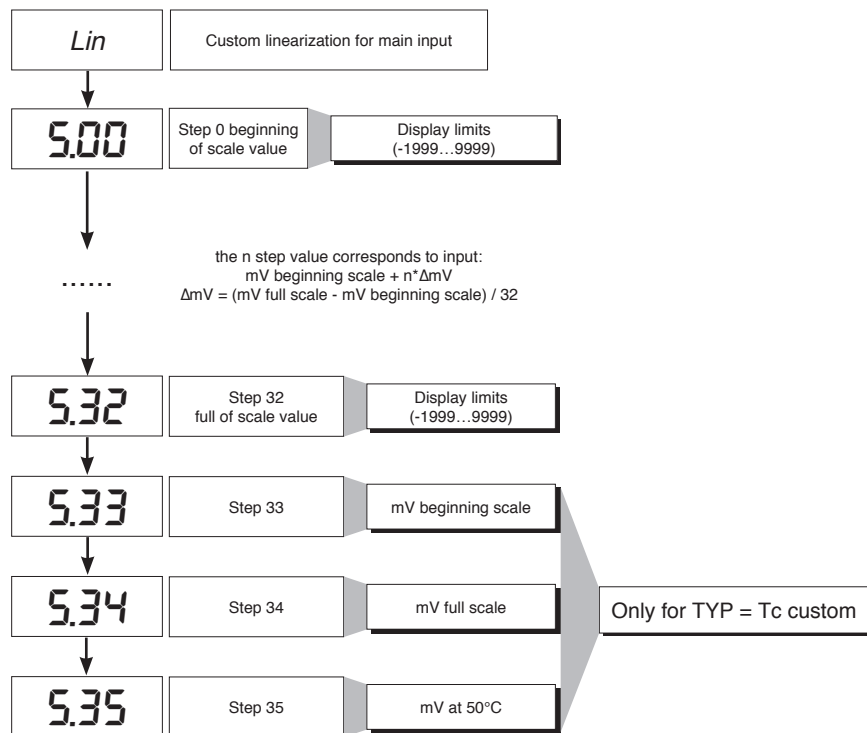

## • U.CAL

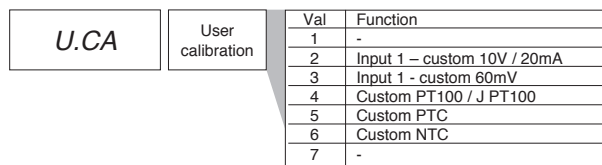

## 7 • CONSENT FOR BURNER AL1

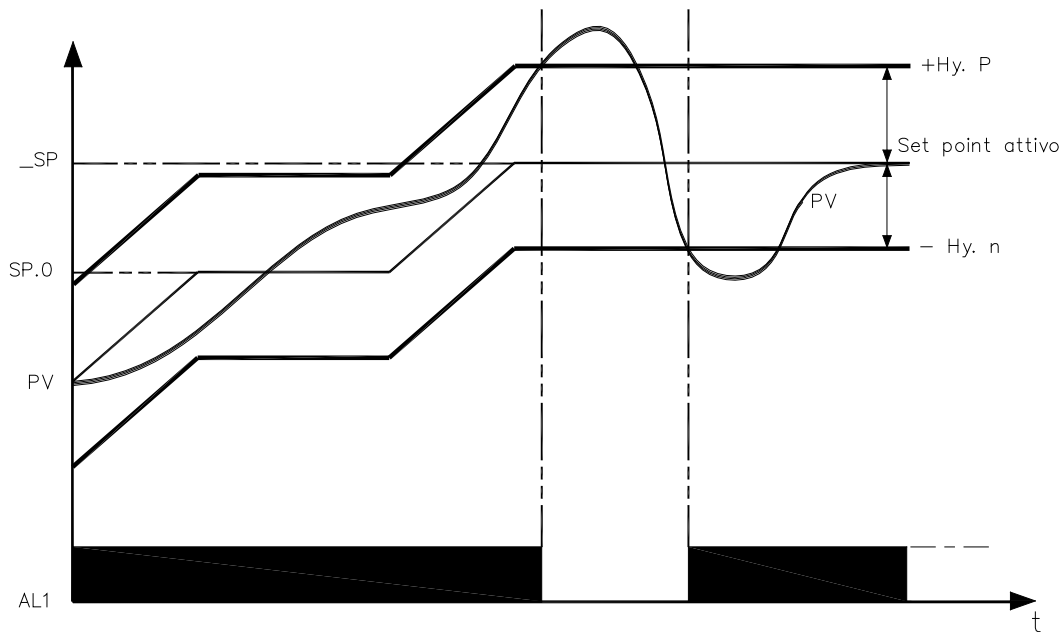

Obtain burner consent by configuring alarm 1 as inverse deviation with positive hysteresis Hy.P and negative hysteresis Hy.n

## 8 • PRE-HEATING FUNCTION

Enable the pre-heating function by setting parameters GS.0, Ht.0, GS.1 other than zero.

It consists of three phases that are activated sequentially at firing:

### - Ramp 0 phase

Enabled by setting  $GS.0 > 0$ . Starting from setpoint = PV (initial state), it reaches pre-heating set SP.0 with gradient GS.0


### - Maintenance phase

Enabled by setting  $Ht.0 > 0$ . Maintains pre-heating setpoint SP.0 for time Ht.0

### - Ramp 1 phase

Enabled by setting  $GS.1 > 0$ . Starting from pre-heating setpoint SP.0, it reaches active \_SP set with gradient GS.1

In case of selftuning, the pre-heating function is not activated

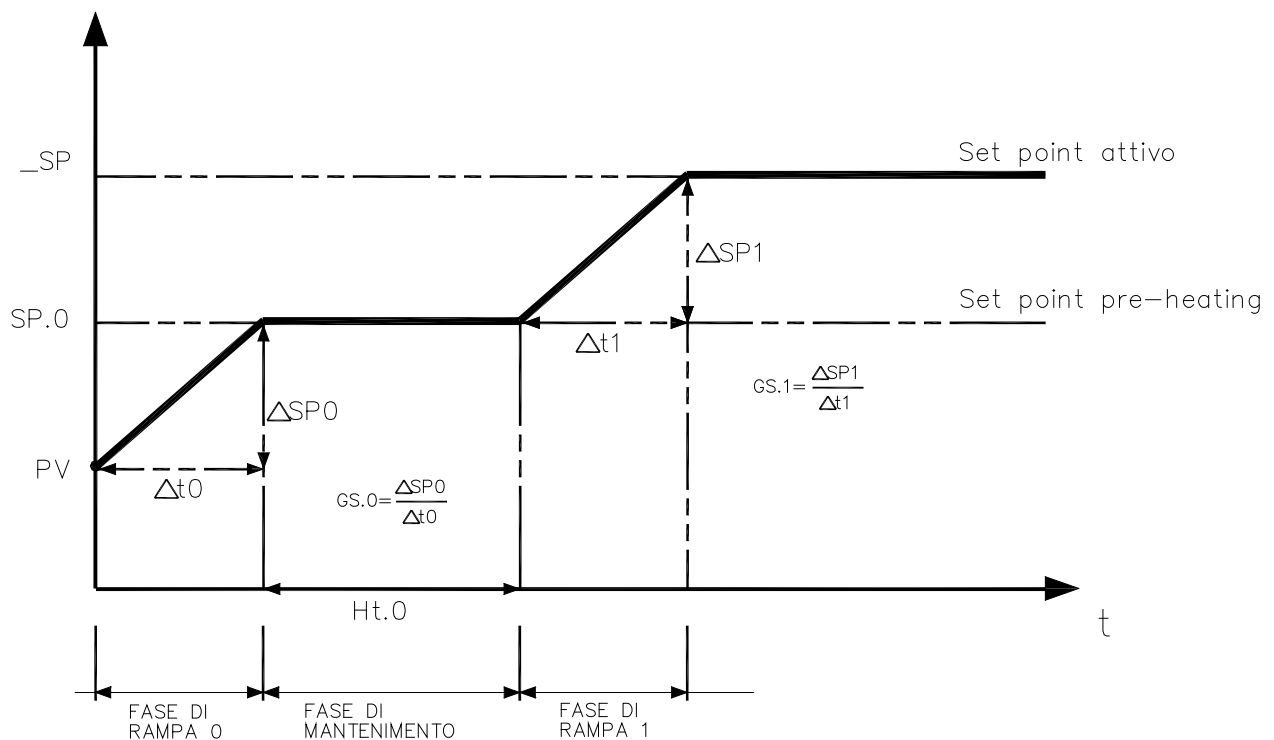


## 9 • ADJUSTMENT WITH MOTORIZED VALVE

In an adjustment process the adjustment valve has the function of varying fuel delivery (frequently corresponding to the thermal energy introduced into the process) in relation to the signal coming from the controller.

For this purpose it is provided with an actuator able to modify its opening value, overcoming the resistances produced by the fluid passing inside it.

The adjustment valves vary the delivery in a modulated manner, producing finite variations in the fluid passage inner area corresponding to finite variations of the actuator input signal, coming from the controller. The servomechanism, for example, comprises an electric motor, a reducer and a mechanical transmission system which actions the valve.

Various auxiliary components can be present such as the mechanical and electrical safety end travels, manual actioning systems.

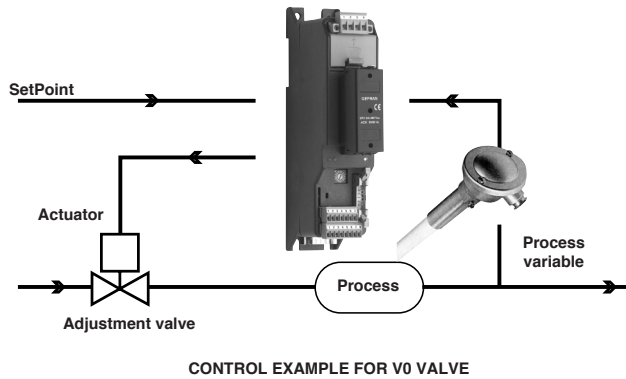

The controller determines, on the basis of the dynamics of the process, the control output for the valve corresponding to the opening of the same in such a way so as to maintain the desired value of the process variable.

### Characteristic parameters for valves control

- Actuator time ( $A_c.t$ ) is the time employed by the valve to pass from entirely open to entirely closed (or vice-versa), and can be set with a resolution of one second. It is a mechanical feature of the valve+actuator unit.

**NOTE:** if the actuator's travel is mechanically limited it is necessary to proportionally reduce the  $A_c.t$  value.

- Minimum impulse ( $t.Lo$ ) expressed as a % of the actuator time (resolution 0.1%).

Represents the minimum change in position corresponding to a minimum change in power supplied by the instrument below which the actuator will not physically respond to the command.

This represents the minimum variation in position due to which the actuator does not physically respond to the command.

The minimum duration of the movement can be set in  $t.Lo$ , expressed as a % of actuator time.

- Impulsive intervention threshold ( $t.Hi$ ) expressed as a % of the actuator time (resolution 0.1%) represents the position displacement (requested position – real position) due to which the manoeuvre request becomes impulsive.

You can choose between 2 types of control:

1) ON time of movement =  $t.on$  and OFF time proportional to shift and greater than or equal to  $t.Lo$  (we recommend setting  $t.on = t.Lo$ ) (set  $t.oF = 0$ ).

2) ON time of movement =  $t.on$  and OFF time =  $t.oF$ . A value set for  $t.oF < t.on$  is forced to  $t.on$ . To activate this type, set  $t.oF > 0$ .


The type of movement approach allows fine control of the reverse drive valve (from potentiometer or not), especially useful in cases of high mechanical inertia.

Set  $t.Hi = 0$  to exclude modulation in positioning.

This type of modulated approach allows precise control of the feedback actioned valve, by a potentiometer or not, and is especially useful in cases of high mechanical inertia. Setting  $t.Hi = 0$  excludes modulation in positioning.

- Dead zone ( $dE.b$ ) is a displacement band between the adjustment setpoint and the process variable within which the controller does not supply any command to the valve (Open = OFF; Close = OFF). It is expressed as a percentage of the bottom scale and is positioned below the setpoint.

The dead zone is useful in an operative process to avoid straining the actuator with repeated commands and an insignificant effect on the adjustment. Setting  $dE.b = 0$  the dead zone is excluded.

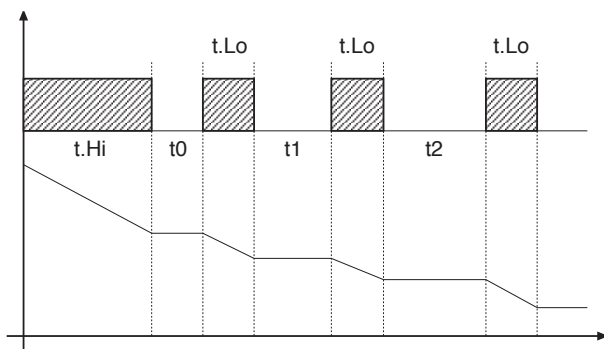

Graph of behavior inside the band with integral time  $\neq 0$ .

With integral time = 0, movement ON time is always equal to OFF time.

$t_0 = t.Lo$

## Valve control modes

With the controller in manual, the setting of parameter At.y  $\geq 8$  allows direct control of the valve open and close commands through the keyboard Increments and Decrements on the front seats.

**V0** - for floating valve without potentiometer

Model V0 have similar behaviour: every manoeuvre request greater than the minimum impulse t.Lo is sent to the actuator by means of the OPEN/CLOSE relays; every action updates the presumed position of the virtual potentiometer calculated on the basis of the actuator travel declared time. In this way there is always a presumed position of the valve which is compared with the position request of the controller. Having reached a presumed extreme position (entirely open or entirely closed determined by the "virtual potentiometer") the controller provides a command in the same direction, in this way ensuring the real extreme position is reached (minimum command time = t.on). The actuators are usually protected against the OPEN command in the entirely open position or CLOSE command in the entirely closed position.

**V3** - for floating valve, PI control


When the difference between the position calculated by the controller and the only proportional component exceeds the value corresponding to the minimum impulse t.Lo the controller provides an OPEN or CLOSE command of the duration of the minimum impulse itself t.Lo. At each delivery the integral component of the command is set to zero (discharge of the integral). The frequency and duration of the impulses is correlated to the integral time (h.it or c.it).

*Non-movement behavior*

t.Hi = 0: with power = 100% or 0.0%, the corresponding open or close outputs always remain enabled (safety status).

*Movement behavior*

t.Hi  $\neq 0$ : with position attained corresponding to 100% or 0.0%, the corresponding open or close outputs are switched off.

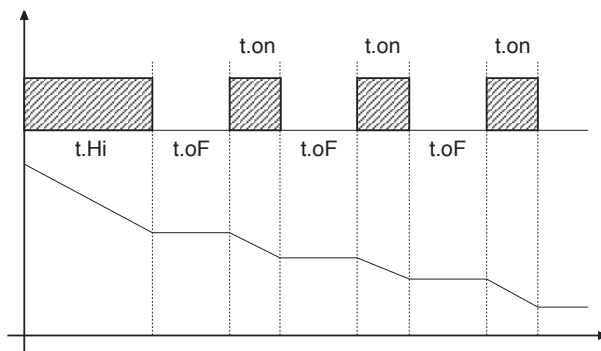

If t.oF = 0, current function is maintained.

If t.oF  $\neq 0$  movement mode will be as shown on the graph

## 10 • CONTROL ACTIONS

*Proportional Action:*

action in which contribution to output is proportional to deviation at input (deviation = difference between controlled variable and setpoint).

*Derivative Action:*

action in which contribution to output is proportional to rate of variation input deviation.

*Integral Action:*

action in which contribution to output is proportional to integral of time of input deviation.


### Influence of Proportional, Derivative and Integral actions on response of process under control

- \* An increase in P.B. reduces oscillations but increases deviation.
  - \* A reduction in P.B. reduces the deviation but provokes oscillations of the controlled variable (the system tends to be unstable if P.B. value is too low).
  - \* An increase in Derivative Action corresponds to an increase in Derivative Time, reduces deviation and prevents oscillation up to a critical value of Derivative Time, beyond which deviation increases and prolonged oscillations occur.
  - \* An increase in Integral Action corresponds to a reduction in Integral Time, and tends to eliminate deviation between the controlled variable and the setpoint when the system is running at rated speed.
- If the Integral Time value is too long (Weak integral action), deviation between the controlled variable and the setpoint may persist.

Contact GEFRA for more information on control actions.

## 11 • MANUAL TUNING

- A) Enter the setpoint at its working value.  
 B) Set the proportional band at 0.1% (with on-off type setting).  
 C) Switch to automatic and observe the behavior of the variable. It will be similar to that in the figure:

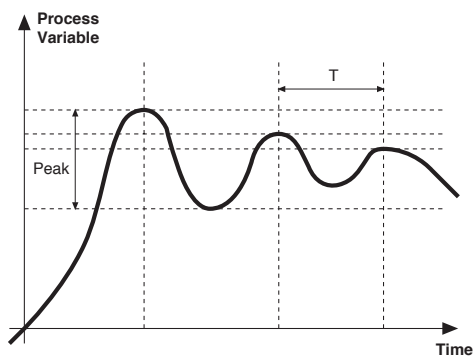

D) The PID parameters are calculated as follows: Proportional band

$$P.B. = \frac{\text{Peak}}{(V_{\max} - V_{\min})} \times 100$$

(V max - V min) is the scale range.

Integral time:  $I_t = 1.5 \times T$

Derivative time:  $d_t = I_t/4$

E) Switch the unit to manual, set the calculated parameters. Return to PID action by setting the appropriate relay output cycle time, and switch back to Automatic.

F) If possible, to optimize parameters, change the setpoint and check temporary response. If an oscillation persists, increase the proportional band. If the response is too slow, reduce it.

## 12 • SET GRADIENT

SET GRADIENT: if set to  $\neq 0$ , the setpoint is assumed equal to PV at power-on and auto/man switchover. With gradient set, it reaches the local setpoint. Every variation in setpoint is subject to a gradient.

The set gradient is inhibited at power-on when self-tuning is engaged.

If the set gradient is set to  $\neq 0$ , it is active even with variations of the local setpoint.

The control setpoint reaches the set value at the speed defined by the gradient.

## 13 • SOFTWARE ON / OFF SWITCHING FUNCTION

**How to switch the unit OFF:** hold down the "F" and "Raise" keys simultaneously for 5 seconds to deactivate the unit, which will go to the OFF state while keeping the line supply connected and keeping the process value displayed. The SV display is OFF.

All outputs (alarms and controls) are OFF (logic level 0, relays de-energized) and all unit functions are disabled except the switch-on function and digital communication.

**How to switch the unit ON:** hold down the "F" key for 5 seconds and the unit will switch OFF to ON. If there is a power failure during the OFF state, the unit will remain in OFF state at the next power-up (ON/OFF state is memorized).

The function is normally enabled, but can be disabled by setting the parameter Prot = Prot +16.

## 14 • SELF-TUNING

The function works for single output systems (heating or cooling). The self-tuning action calculates optimum control parameter values during process startup. The variable (for example, temperature) must be that assumed at zero power (room temperature).

The controller supplies maximum power until an intermediate value between starting value and setpoint is reached, after which it zeros power.

PID parameters are calculated by measuring overshoot and the time needed to reach peak. When calculations are finished, the system disables automatically and the control proceeds until the setpoint is reached.

**How to activate self-tuning:**

### A. Activation at power-on

1. Set the setpoint to the required value
2. Enable selftuning by setting the Stun parameter to 2 (CFG menu)
3. Turn off the instrument
4. Make sure the temperature is near room temperature
5. Turn on the instrument again

### B. Activation from keyboard


1. Make sure that key M/A is enabled for Start/Stop selftuning (code but = 6 Hrd menu)
2. Bring the temperature near room temperature
3. Set the setpoint to the required value
4. Press key M/A to activate selftuning (Attention: selftuning interrupts if the key is pressed again)

The procedure runs automatically until finished, when the new PID parameters are stored: proportional band, integral and derivative times calculated for the active action (heating or cooling). In case of double action (heating or cooling), parameters for the opposite action are calculated by maintaining the initial ratio between parameters (ex.:  $CPb = HPb \times K$ ; where  $K = CPb / HPb$  when self-tuning starts). When finished, the Stun code is automatically cancelled.

### Notes :

-The procedure does not start if the temperature is higher than the setpoint (heating control mode) or if the temperature is lower than the setpoint (cooling control mode). In this case, the Stun code is not cancelled.

-It is advisable to enable one of the configurable LEDs to signal selftuning status. By setting one of parameters LED1, LED2, LED3=4 or 20 on the Hrd menu, the respective LED will be on or flashing when selftuning is active.

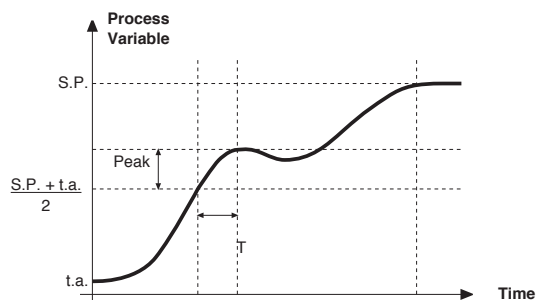

## 15 • ACCESSORIES

### • Interface for instrument configuration

KIT PC USB / RS485 o TTL



Kit for PC via the USB port (Windows environment) for GEFTRAN instruments configuration:

Lets you read or write all of the parameters

- A single software for all models
- Easy and rapid configuration
- Saving and management of parameter recipes
- On-line trend and saving of historical data

Component Kit:


- Connection cable PC USB ... port TTL
- Connection cable PC USB ... RS485 port
- Serial line converter
- CD SW GF Express installation

### • ORDERING CODE

GF\_eXK-2-0-0

cod F049095

## 16 • ORDER CODE

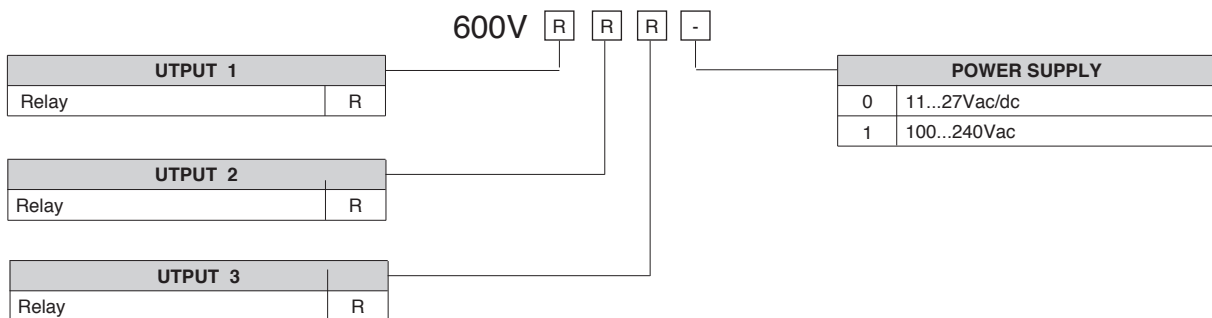

### • WARNINGS

**WARNING:** this symbol indicates danger. It is placed near the power supply circuit and near high-voltage relay contacts.

**Read the following warnings before installing, connecting or using the device:**

- follow instructions precisely when connecting the device.
- always use cables that are suitable for the voltage and current levels indicated in the technical specifications.
- the device has no ON/OFF switch: it switches on immediately when power is turned on. For safety reasons, devices permanently connected to the power supply require a two-phase disconnecting switch with proper marking. Such switch must be located near the device and must be easily reachable by the user. A single switch can control several units.
- if the device is connected to electrically NON-ISOLATED equipment (e.g. thermocouples), a grounding wire must be applied to assure that this connection is not made directly through the machine structure.
- if the device is used in applications where there is risk of injury to persons and/or damage to machines or materials, it MUST be used with auxiliary alarm units. You should be able to check the correct operation of such units during normal operation of the device.
- before using the device, the user must check that all device parameters are correctly set in order to avoid injury to persons and/or damage to property.
- the device must NOT be used in inflammable or explosive environments. It may be connected to units operating in such environments only by means of suitable interfaces in conformity to local safety regulations.
- the device contains components that are sensitive to static electrical discharges. Therefore, take appropriate precautions when handling electronic circuit boards in order to prevent permanent damage to these components.

**Installation:** installation category II, pollution level 2, double isolation

The equipment is intended for permanent indoor installations within their own enclosure or panel mounted enclosing the rear housing and exposed terminals on the back.

- only for low power supply: supply from Class 2 or low voltage limited energy source
- power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.
- install the instrumentation separately from the relays and power switching devices
- do not install high-power remote switches, contactors, relays, thyristor power units (particularly if "phase angle" type), motors, etc... in the same cabinet.
- avoid dust, humidity, corrosive gases and heat sources.
- do not close the ventilation holes; working temperature must be in the range of 0...50°C.

- surrounding air: 50°C
- use 60/75°C copper (Cu) conductor only, wire size range 2x No 22 - 14AWG, Solid/Stranded
- use terminal tightening torque 0.5N m

If the device has faston terminals, they must be protected and isolated; if the device has screw terminals, wires should be attached at least in pairs.

• **Power:** supplied from a disconnecting switch with fuse for the device section; path of wires from switch to devices should be as straight as possible; the same supply should not be used to power relays, contactors, solenoid valves, etc.; if the voltage waveform is strongly distorted by thyristor switching units or by electric motors, it is recommended that an isolation transformer be used only for the devices, connecting the screen to ground; it is important for the electrical system to have a good ground connection; voltage between neutral and ground must not exceed 1V and resistance must be less than 60Ωm; if the supply voltage is highly variable, use a voltage stabilizer for the device; use line filters in the vicinity of high frequency generators or arc welders; power supply lines must be separated from device input and output lines; always check that the supply voltage matches the voltage indicated on the device label.

• **Input and output connections:** external connected circuits must have double insulation; to connect analog inputs (TC, RTD) you have to: physically separate input wiring from power supply wiring, from output wiring, and from power connections; use twisted and screened cables, with screen connected to ground at only one point; to connect adjustment and alarm outputs (contactors, solenoid valves, motors, fans, etc.), install RC groups (resistor and capacitor in series) in parallel with inductive loads that work in AC (*Note: all capacitors must conform to VDE standards (class x2) and support at least 220 VAC. Resistors must be at least 2W*); fit a 1N4007 diode in parallel with the coil of inductive loads that operate in DC.

**GEFRAN spa will not be held liable for any injury to persons and/or damage to property deriving from tampering, from any incorrect or erroneous use, or from any use not conforming to the device specifications.**




## Set-up for 600V RRR0-1-T73 regulator

### Set up for temperature probe Pt100 (ex Siemens QAE2120 130°C max.)

The regulator comes out of the factory preset with the corresponding values of the Siemens RWF40.000 and RWF50.2x

Verify wiring of the sensor

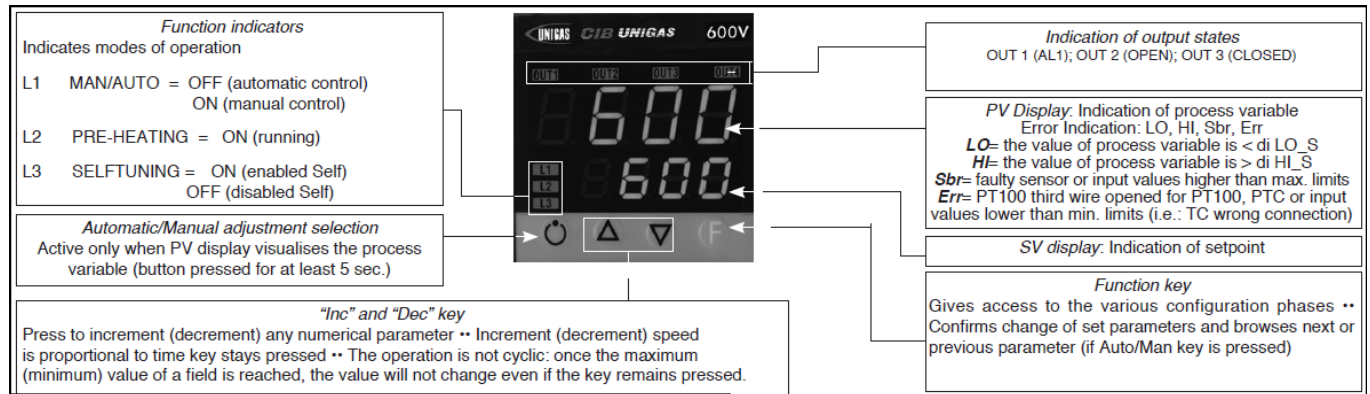

Regulation of the set-point = 80

It can be modified by using arrows "up" and "down".

By pushing **F** you go to parameters:

|      |                                                                    |
|------|--------------------------------------------------------------------|
| Hy.P | 5 (hysteresis positive for output 1, terminals 21-22 (ex Q13-Q14)) |
| Hy.n | -5 hysteresis negative for output ,1 terminals 21-22 (ex Q13-Q14)  |

Keep pushing **F** until you see **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) default is **12**, through the arrows set **128** and push **F**, keep it pushed until all parameters **InF**, **CFG**, **InP**, **Out**, **PASS** are visualized.

| CFG   |      |
|-------|------|
| S.tun | 0    |
| hPb   | 1,2  |
| hIt   | 5,83 |
| hdt   | 1,33 |
| ...   |      |

| InP  |                                     |
|------|-------------------------------------|
| .... |                                     |
| tyP  | 30 (Pt100)                          |
| ...  |                                     |
| dP_S | 1 (decimals num.)                   |
| Lo.S | 0 (min. sensor scale)               |
| Hi.S | 850,0 (max sensor scale)            |
| oFS  | 0 (offset of input correction)      |
| Lo.L | 30,0 (lower set-point range limit)  |
| Hi.L | 130,0 (upper set-point range limit) |



| Out  |                                                                        |
|------|------------------------------------------------------------------------|
| A1.r | 0                                                                      |
| ...  |                                                                        |
| A1.t | 3 (operating mode AL1 =inverse-relative-normal)                        |
| ...  |                                                                        |
| rL.1 | 2 (AL1)                                                                |
| rL.2 | 18 (open)                                                              |
| rL.3 | 19 (close)                                                             |
| rEL  | 0                                                                      |
| A.ty | 9 (type of servocontrol command)                                       |
| Ac.t | 12 (servocontrol running time: SQN72.4.../STA12..=12;<br>SQM40.265=30) |
| t Lo | 2                                                                      |
| t Hi | 0.0                                                                    |
| t.on | 2                                                                      |
| t.oF | 0.0                                                                    |
| dE.b | 0,1 (dead zone in % of end scale)                                      |
|      |                                                                        |

| PAS   | 99 then push and keep pushed <b>F</b> until visualization of <b>Hrd</b> |
|-------|-------------------------------------------------------------------------|
|       |                                                                         |
| Hrd   |                                                                         |
| ...   |                                                                         |
| Ctrl  | 6 (PID warm)                                                            |
| AL.nr | 1                                                                       |
| but   | 1                                                                       |
| diSP  | 0                                                                       |
| Ld.1  | 1                                                                       |
| Ld.2  | 28                                                                      |
| Ld.3  | 20                                                                      |

Keep pushed **F** until you visualize **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) from **128**, through the arrows, bring it back to **12**, and keep **F** pushed until you come back to set-point value.

#### Manual operation :

Keep pushed the lower left key for at least 5 sec.

The instrument will enter the "MAN" mode (see also "Ld1" switching on).

Through the arrows, "Open" and "Close" outputs are activated.

To come back to normal working keep the lower left key pushed for at least 5 sec.


#### Software switch off :

By keeping pushed keys **Arrow up** + **F** for more than 5 sec. the instrument switches off the software, does not command the outputs and visualize only the variable of process measured by the probe.

To restore keep pushed **F** for more than 5 sec.

## Set up for temperature probe Pt100 for high temperature (350°C max.)

Verify wiring of the sensor

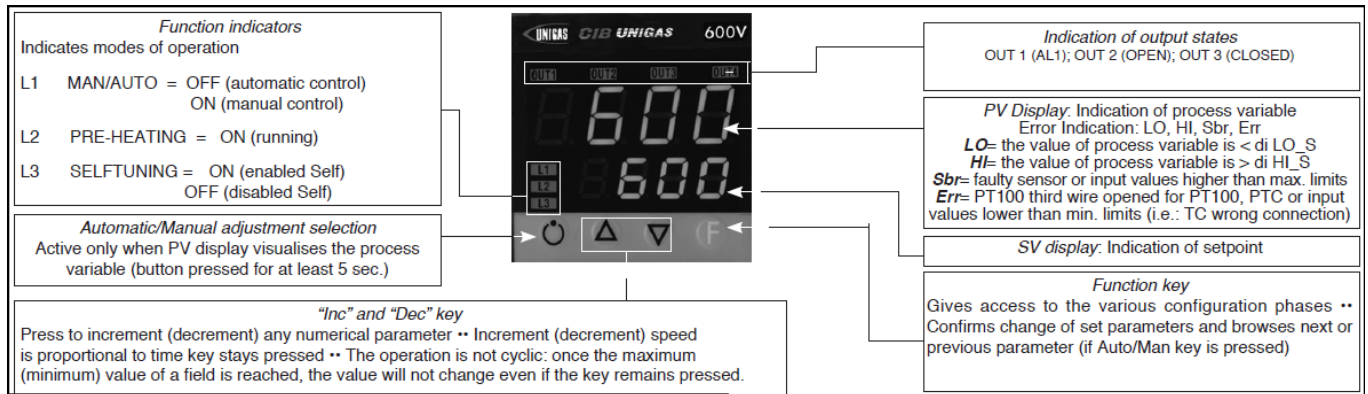

Regulation of the set-point = 80

It can be modified by using arrows "up" and "down".

By pushing **F** you go to parameters:

|      |                                                                    |
|------|--------------------------------------------------------------------|
| Hy.P | 10 (hysteresis positive for output 1 terminals 21-22 (ex Q13-Q14)) |
| Hy.n | -5 (hysteresis negative for output 1 terminals 21-22 (ex Q13-Q14)) |

Keep pushing **F** until you see **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) default is **12**, through the arrows set **128** and push **F**, keep it pushed until all parameters **InF**, **CFG**, **InP**, **Out**, **PASS** are visualized.

| CFG   |      |
|-------|------|
| S.tun | 0    |
| hPb   | 1,2  |
| hIt   | 5,83 |
| hdt   | 1,33 |
| ...   |      |

| InP  |                                     |
|------|-------------------------------------|
| .... |                                     |
| tyP  | 30 (Pt100)                          |
| ...  |                                     |
| dP_S | 1 (decimals num.)                   |
| Lo.S | 0 (min. sensor scale)               |
| Hi.S | 850,0 (max sensor scale)            |
| oFS  | 0 (offset of input correction)      |
| Lo.L | 0,0 (lower set-point range limit)   |
| Hi.L | 350,0 (upper set-point range limit) |

| Out  |                                                                        |
|------|------------------------------------------------------------------------|
| A1.r | 0                                                                      |
| ...  |                                                                        |
| A1.t | 3 (mode AL1 =inverse-relative-normal)                                  |
| ...  |                                                                        |
| rL.1 | 2 (AL1)                                                                |
| rL.2 | 18 (open)                                                              |
| rL.3 | 19 (close)                                                             |
| rEL  | 0                                                                      |
| A.ty | 9 (type of servocontrol command)                                       |
| Ac.t | 12 (servocontrol running time: SQN72.4.../STA12..=12;<br>SQM40.265=30) |
| t Lo | 2                                                                      |
| t Hi | 0.0                                                                    |
| t.on | 2                                                                      |
| t.oF | 0.0                                                                    |
| dE.b | 0,1 (dead zone in % of end scale)                                      |

| PAS   | 99 then push and keep pushed F until visualization of Hrd |
|-------|-----------------------------------------------------------|
|       |                                                           |
| Hrd   |                                                           |
| ...   |                                                           |
| Ctrl  | 6 (PID warm)                                              |
| AL.nr | 1                                                         |
| but   | 1                                                         |
| diSP  | 0                                                         |
| Ld.1  | 1                                                         |
| Ld.2  | 28                                                        |
| Ld.3  | 20                                                        |

Keep pushed **F** until you visualize **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) from **128**, through the arrows, bring it back to **12**, and keep **F** pushed until you come back to set-point value.

#### Manual operation:

Keep pushed the lower left key for at least 5 sec.

The instrument will enter the "MAN" mode (see also "Ld1" switching on).

Through the arrows, "Open" and "Close" outputs are activated.


To come back to normal working keep the lower left key pushed for at least 5 sec.

#### Software switch off :



By keeping pushed keys **Arrow up** + **F** for more than 5 sec. the instrument switches off the software, does not command the outputs and visualize only the variable of process measured by the probe.

To restore keep pushed **F** for more than 5 sec.

## Set up for pressure transmitter 2 wires signal 4÷20mA

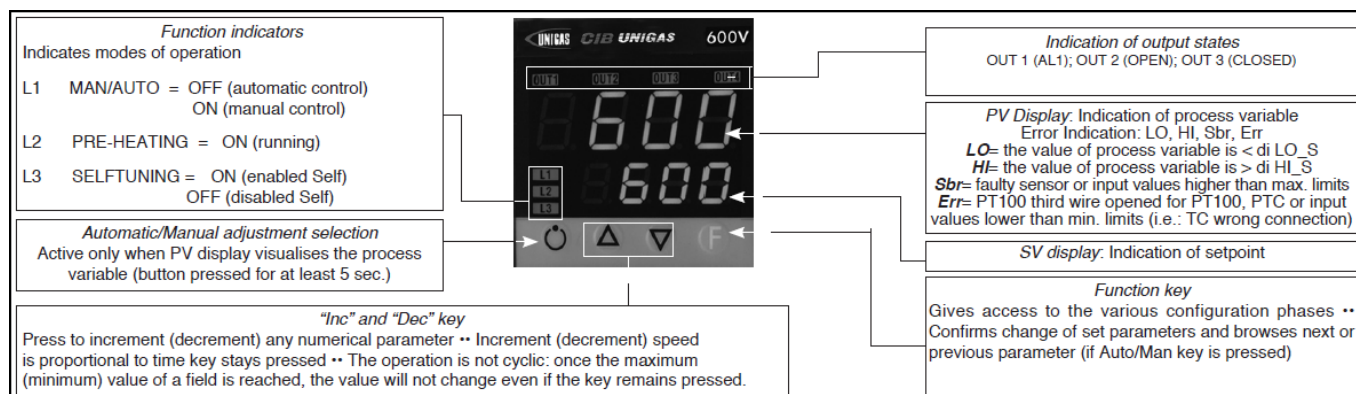

With pressure transmitters first we need to enable their power supply: remove the part as shown below, then, on the CPU unit, move the bridge from Pt100 to +Vt

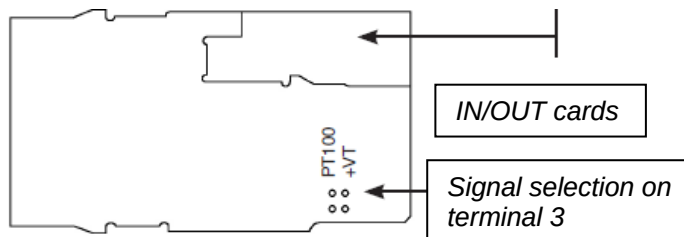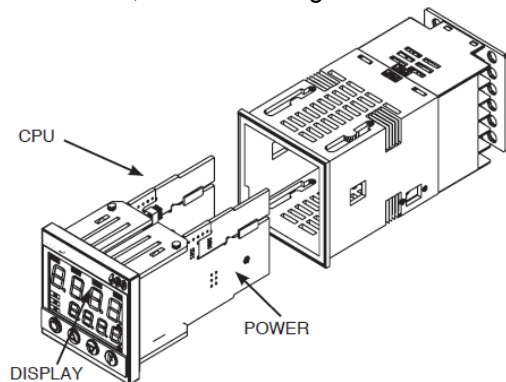

Verify wiring of the sensor

Impostazione set-point

| Transmitter | 1,6bar | 3bar   | 10bar | 16bar | 25bar | 40bar |
|-------------|--------|--------|-------|-------|-------|-------|
| Set-point   | 1bar   | 1,5bar | 6bar  | 6bar  | 6bar  | 6bar  |

To modify it directly use "up" and "down" arrows.

By pushing **F** you go to parameter:

| Transmitter | 1,6bar | 3bar   | 10bar  | 16bar  | 25bar   | 40bar |
|-------------|--------|--------|--------|--------|---------|-------|
| Hy.P        | 0,2bar | 0,5bar | 0,5bar | 0,8bar | 1,25bar | 2bar  |
| Hy.n        | 0bar   | 0bar   | 0bar   | 0bar   | 0bar    | 0bar  |

Keep pushing **F** until you see **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) default is **12**, through the arrows set **128** and push **F**, keep it pushed until all parameters **InF**, **CFG**, **InP**, **Out**, **PASS** are visualized.

| CFG   |      |
|-------|------|
| S.tun | 0    |
| hPb   | 5    |
| hIt   | 1,33 |
| hdt   | 0,33 |
| ...   |      |

| InP  |                   |
|------|-------------------|
| .... |                   |
| tyP  | 44 (4÷20mA)       |
| ...  |                   |
| dP_S | 2 (decimals num.) |

| Transmitter | 1,6bar | 3bar | 10bar | 16bar | 25bar | 40bar |                            |
|-------------|--------|------|-------|-------|-------|-------|----------------------------|
| Lo.S        | 0,00   | 0,00 | 0,00  | 0,00  | 0,00  | 0,00  | min. sensor scale          |
| Hi.S        | 1,60   | 3,00 | 10,00 | 16,00 | 25,00 | 40,00 | max sensor scale           |
| oFS         | 0      | 0    | 0     | 0     | 0     | 0     | offset of input correction |
| Lo.L        | 0,00   | 0,00 | 0,00  | 0,00  | 0,00  | 0,00  | lower set-point setting    |
| Hi.L        | 1,60   | 3,00 | 10,00 | 16,00 | 25,00 | 40,00 | upper set-point setting    |

| Out  |                                                                        |
|------|------------------------------------------------------------------------|
| A1.r | 0                                                                      |
| ...  |                                                                        |
| A1.t | 3 (mode AL1 =inverse-relative-normal)                                  |
| ...  |                                                                        |
| rL.1 | 2 (AL1)                                                                |
| rL.2 | 18 (open)                                                              |
| rL.3 | 19 (close)                                                             |
| rEL  | 0                                                                      |
| A.ty | 9 (type of servocontrol command)                                       |
| Ac.t | 12 (servocontrol running time: SQN72.4.../STA12..=12;<br>SQM40.265=30) |
| t Lo | 2                                                                      |
| t Hi | 0.0                                                                    |
| t.on | 2                                                                      |
| t.oF | 0.0                                                                    |
| dE.b | 0,1 (dead zone in % of end scale)                                      |

| <b>PAS</b> | 99 then push and keep pushed <b>F</b> until visualization of <b>Hrd</b> |
|------------|-------------------------------------------------------------------------|
|            |                                                                         |
| Hrd        |                                                                         |
| ...        |                                                                         |
| Ctrl       | 6 (PID warm)                                                            |
| AL.nr      | 1                                                                       |
| but        | 1                                                                       |
| diSP       | 0                                                                       |
| Ld.1       | 1                                                                       |
| Ld.2       | 28                                                                      |
| Ld.3       | 20                                                                      |

Keep pushed **F** until you visualize **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) from **128**, through the arrows, bring it back to **12**, and keep **F** pushed until you come back to set-point value.

#### Manual operation:

Keep pushed the lower left key for at least 5 sec.

The instrument will enter the "MAN" mode (see also "Ld1" switching on).

Through the arrows, "Open" and "Close" outputs are activated.

To come back to normal working keep the lower left key pushed for at least 5 sec.


#### Software switch off :

By keeping pushed keys **Arrow up** + **F** for more than 5 sec. the instrument switches off the software, does not command the outputs and visualize only the variable of process measured by the probe.

To restore keep pushed **F** for more than 5 sec.

## Set-up for thermocouples type **K** or **J**

Verify wiring of the sensor

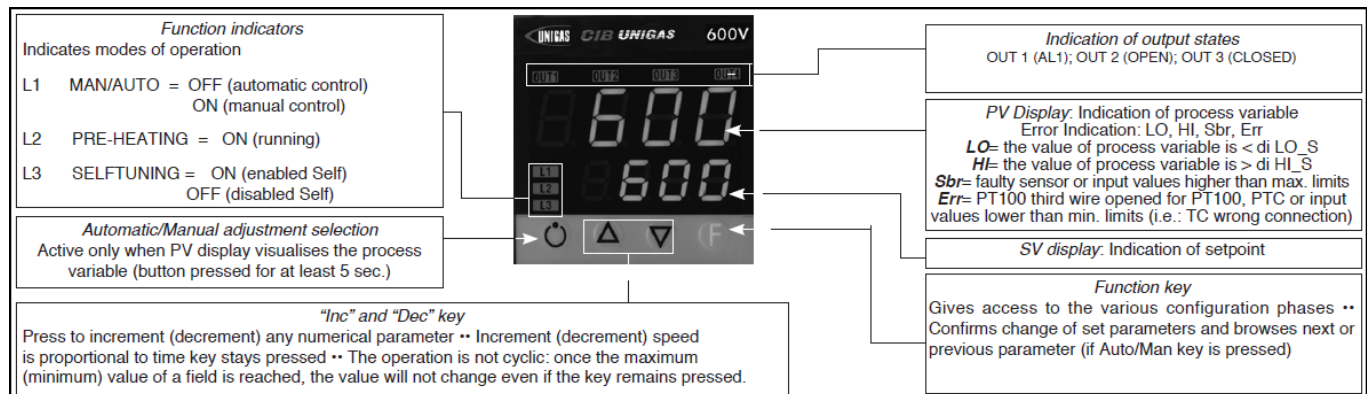

Regulation of the set-point = **80**

It can be modified by using arrows "up" and "down".

By pushing **F** you go to parameters:

|      |                                                                    |
|------|--------------------------------------------------------------------|
| Hy.P | 10 (hysteresis positive for output 1 terminals 21-22 (ex Q13-Q14)) |
| Hy.n | -5 (hysteresis negative for output 1 terminals 21-22 (ex Q13-Q14)) |

Keep pushing **F** until you see **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) default is **12**, through the arrows set **128** and push **F**, keep it pushed until all parameters **InF**, **CFG**, **InP**, **Out**, **PASS** are visualized.

| CFG   |      |
|-------|------|
| S.tun | 0    |
| hPb   | 1,2  |
| hIt   | 5,83 |
| hdt   | 1,33 |
| ...   |      |

| InP  |                                                                                     |
|------|-------------------------------------------------------------------------------------|
| ...  |                                                                                     |
| tyP  | 2 (thermocouple <b>K</b> 0÷1300°C) / 0 (thermocouple <b>J</b> 0÷1000°C)             |
| ...  |                                                                                     |
| dP_S | 0 (no decimal) / 1 (1 decimal)                                                      |
| Lo.S | 0 (min. sensor scale)                                                               |
| Hi.S | 1300 (max sensor scale for tc <b>K</b> ) / 1000 (max sensor scale for tc <b>J</b> ) |
| oFS  | 0 (offset of input correction)                                                      |
| Lo.L | 0 (lower set-point range limit)                                                     |
| Hi.L | 1300 (upper set-point range limit) per tc <b>K</b> / 1000 for tc <b>J</b>           |

| Out  |                                                                        |
|------|------------------------------------------------------------------------|
| A1.r | 0                                                                      |
| ...  |                                                                        |
| A1.t | 3 (mode AL1 =inverse-relative-normal)                                  |
| ...  |                                                                        |
| rL.1 | 2 (AL1)                                                                |
| rL.2 | 18 (open)                                                              |
| rL.3 | 19 (close)                                                             |
| rEL  | 0                                                                      |
| A.ty | 9 (type of servocontrol command)                                       |
| Ac.t | 12 (servocontrol running time: SQN72.4.../STA12..=12;<br>SQM40.265=30) |
| t Lo | 2                                                                      |
| t Hi | 0.0                                                                    |
| t.on | 2                                                                      |
| t.oF | 0.0                                                                    |
| dE.b | 0,1 (dead zone in % of end scale)                                      |

| <b>PAS</b> | 99 then push and keep pushed <b>F</b> until visualization of <b>Hrd</b> |
|------------|-------------------------------------------------------------------------|
|            |                                                                         |
| Hrd        |                                                                         |
| ...        |                                                                         |
| Ctrl       | 6 (PID warm)                                                            |
| AL.nr      | 1                                                                       |
| but        | 1                                                                       |
| diSP       | 0                                                                       |
| Ld.1       | 1                                                                       |
| Ld.2       | 28                                                                      |
| Ld.3       | 20                                                                      |

Keep pushed **F** until you visualize **PASS**, release **F** and through the arrows set **99**, push **F** and visualize **Pro** (protection code) from **128**, through the arrows, bring it back to **12**, and keep **F** pushed until you come back to set-point value.

#### Manual operation:

Keep pushed the lower left key for at least 5 sec.

The instrument will enter the "MAN" mode (see also "Ld1" switching on).

Through the arrows, "Open" and "Close" outputs are activated.

To come back to normal working keep the lower left key pushed for at least 5 sec.

#### Software switch off :

By keeping pushed keys **Arrow up** + **F** for more than 5 sec. the instrument switches off the software, does not command the outputs and visualize only the variable of process measured by the probe.

To restore keep pushed **F** for more than 5 sec.







# RWF50.2x & RWF50.3x





*User manual*


## DEVICE INSTALLATION

Install the device using the relevant tools as shown in the figure.


To wire the device and sensors, follow the instructions on the burner wiring diagram.

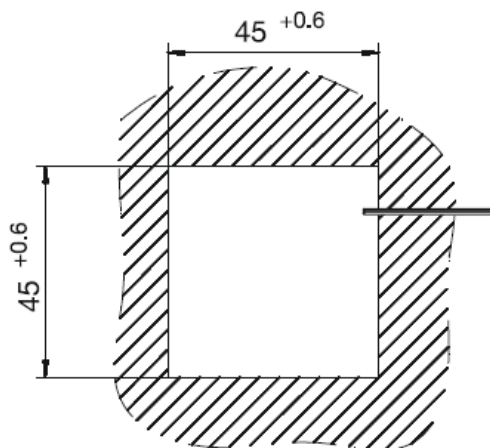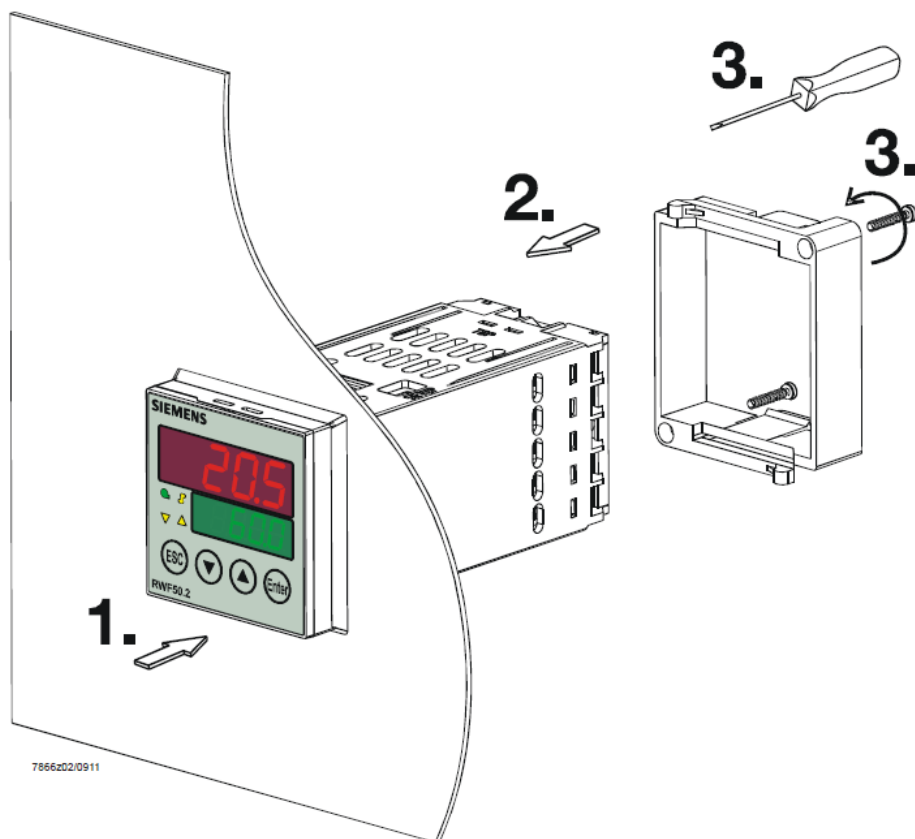

FRONT PANEL

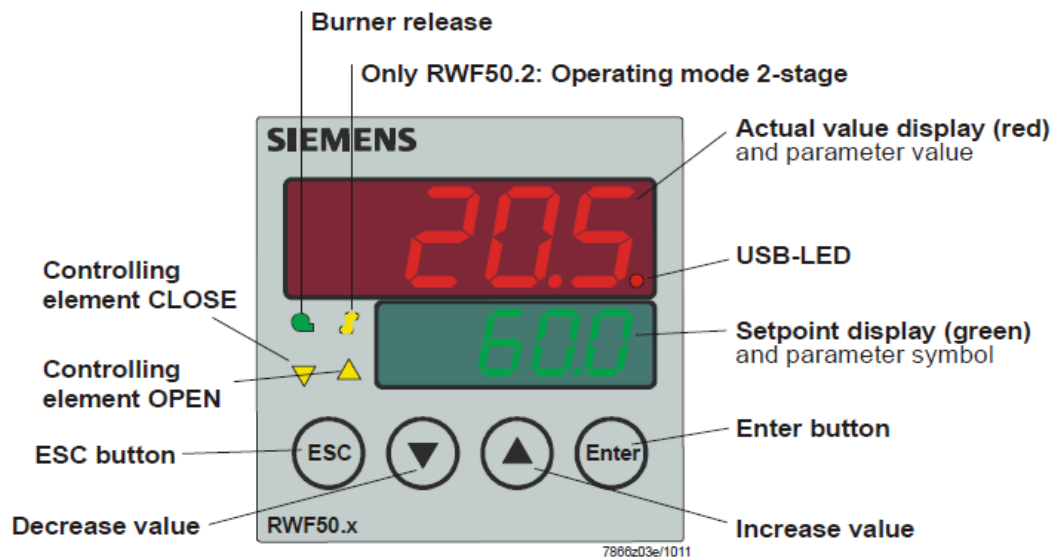

NAVIGATION MENU

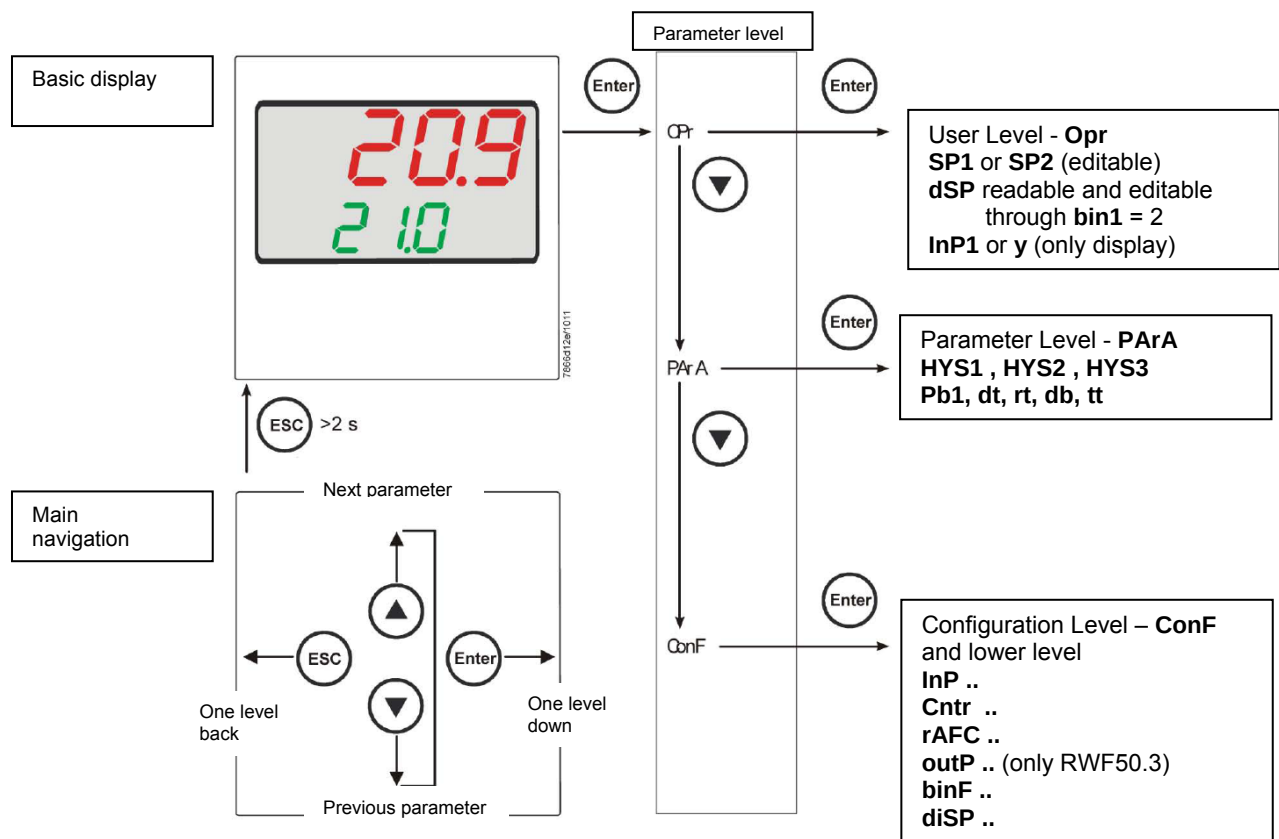

RWF5 is preset good for 90% of applications. However, you can set or edit parameters as follow:

#### Set-point: set or modification:

When the burner is in stand-by, (safety loop open, that is terminals 3-4/T1-T2 on the 7 pole plug open) push the **Enter** button: on the lower display (green) **Opr** appears; push **Enter** again and in the same display **SP1** appears. Push **Enter** again and the lower display (green **SP1**) flashes. Using the **up and down arrows** change the set-point on the upper display (red). Push **Enter** to confirm and push **ESC** more times to get the home position.

#### PID parameters set and modifications (see table below):

- Push **Enter** button, on the green display **Opr** appears; using the **down arrow**, scroll until group **PARA** is reached and push **Enter**.
- on the green display **Pb1** e appears and on the red one the set parameter.
- Push in sequence the **down or up** arrow the menu is scrolled.
- Push **Enter** to select and the **arrows** to choose the desired value. **Enter** to confirm.

| Parameter                                                  | Display | Range              | Factory setting | Remarks                                                                          |
|------------------------------------------------------------|---------|--------------------|-----------------|----------------------------------------------------------------------------------|
| Proportional band                                          | PB.1    | 1... 9999 digit    | 10              | Typical value for temperature                                                    |
| Derivative action                                          | dt      | 0... 9999 sec.     | 80              | Typical value for temperature                                                    |
| Integral action                                            | rt      | 0... 9999 sec.     | 350             | Typical value for temperature                                                    |
| Dead band (*)                                              | db      | 0... 999,9 digit   | 1               | Typical value                                                                    |
| Servocontrol running time                                  | tt      | 10... 3000 sec.    | 15              | Set servocontrol running time                                                    |
| Switch-on differential (*)                                 | HYS1    | 0,0... -1999 digit | -5              | Value under setpoint below which the burner switches back on (1N-1P closes)      |
| Switch-off differential 2° stage (*)                       | HYS2    | 0,0 ... HYS3       | 3               | (enable only with parameter <b>bin1</b> = 4)                                     |
| Upper switch-off differential (*)                          | HYS3    | 0,0... 9999 digit  | 5               | Value over setpoint above which the burner switches off (1N-1P opens)            |
| Switch-on differential on cooling controller (*)           | HYS4    | 0,0... 9999 digit  | 5               | Do not used<br>(enable only with parameter <b>CACT</b> = 0)                      |
| Switch-off differential 2° stage on cooling controller (*) | HYS5    | HYS6...0,0 digit   | 5               | Do not used<br>(enable only with parameters <b>CACT</b> = 0 and <b>bin1</b> = 4) |
| Upper switch-off differential on cooling controller (*)    | HYS6    | 0,0... -1999 digit | 5               | Do not used<br>(enable only with parameter <b>CACT</b> = 0)                      |
| Delay modulation                                           | q       | 0,0... 999,9 digit | 0               | Do not alter                                                                     |

(\*)Parameters affected by setting of decimal place (**ConF** > **dISP** parameter **dECP**)

### Setting the kind of sensor to be connected to the device:

- push the **Enter** button: on the lower display (green) **Opr** appears. Using the **up and down arrows** find **ConF**. Push **Enter** to confirm.
- Now on the green display the group **InP** appears. Push **Enter** and **InP1** is displayed. Enter to confirm.
- You are inside **InP1**; the green display shows **Sen1 (sensor type)**, while the red display shows the chosen sensor code
- Push **Enter** to enter the **Sen1** parameter, then choose the desired sensor using the **arrows**. Push **Enter** to confirm and **ESC** to escape.
- Once selected the sensor, you can modify all the other parameters using **up and down arrows** according to the tables here below.

### ConF > InP > InP1

| Parameter                                    | Value                       | Description                                                                                                                             |
|----------------------------------------------|-----------------------------|-----------------------------------------------------------------------------------------------------------------------------------------|
| SEn1<br>type of sensor for<br>analog input 1 | <b>1</b>                    | <b>Pt100 3 fili</b>                                                                                                                     |
|                                              | 2                           | Pt100 2 fili                                                                                                                            |
|                                              | 3                           | Pt1000 3 fili                                                                                                                           |
|                                              | 4                           | Pt1000 2 fili                                                                                                                           |
|                                              | 5                           | Ni1000 3 fili                                                                                                                           |
|                                              | 6                           | Ni1000 2 fili                                                                                                                           |
|                                              | 7                           | 0 ÷ 135 ohm                                                                                                                             |
|                                              | 15                          | 0 ÷ 20mA                                                                                                                                |
|                                              | 16                          | 4 ÷ 20mA                                                                                                                                |
|                                              | 17                          | 0 ÷ 10V                                                                                                                                 |
|                                              | 18                          | 0 ÷ 5V                                                                                                                                  |
|                                              | 19                          | 1 ÷ 5V                                                                                                                                  |
| OFF1<br>sensor offset                        | -1999.. <b>0</b> .. +9999   | Using the measured value correction (offset), a measured value can be corrected to a certain degree, either up or down                  |
| SCL1<br>scale low level                      | -1999.. <b>0</b> .. +9999   | In the case of a measuring transducer with standard signal, the physical signal is assigned a display value here (for input ohm, mA, V) |
| SCH1<br>scale high level                     | -1999.. <b>100</b> .. +9999 | In the case of a measuring transducer with standard signal, the physical signal is assigned a display value here (for input ohm, mA, V) |
| dF1<br>digital filter                        | 0... <b>0,6</b> ...100      | Is used to adapt the digital 2nd order input filter (time in s; 0 s = filter off)                                                       |
| Unit<br>temperature unit                     | <b>1</b><br>2               | <b>1 = degrees Celsius</b><br>2 = degrees Fahrenheit                                                                                    |

(**bold** = factory settings)

### Remark:

RWF50.2 e RWF50.3 cannot be connected to thermocouples.

If thermocouples have to be connected, convert the signal to a 4-20 mA one and set the RWF accordingly.

## ConF > Cntr


| Parameter                                               | Value                      | Description                                                                                                          |
|---------------------------------------------------------|----------------------------|----------------------------------------------------------------------------------------------------------------------|
| CtYP<br>controller type                                 | <b>1</b><br>2              | <b>1 = 3-position controller (open-stop-close only RWF50.2)</b><br>2 = continuative action controller (only RWF50.3) |
| CACt<br>control action                                  | <b>1</b><br>0              | <b>1 = heating controller</b><br>0 = cooling controller                                                              |
| SPL<br>least value of the set-point range               | -1999.. <b>0</b> ..+9999   | set-point limitation prevents entry of values outside the defined range                                              |
| SPH<br>maximum value of the set-point range             | -1999.. <b>100</b> ..+9999 | set-point limitation prevents entry of values outside the defined range                                              |
| oLLo<br>set-point limitation start, operation limit low | - <b>1999</b> .... +9999   | lower working range limit                                                                                            |
| oLHi<br>set-point limitation end, operation limit high  | -1999.... <b>+9999</b>     | upper working range limit                                                                                            |

(**bold** = factory settings)

## ConF > rAFC

### Activation boiler shock termic protetion:

RWF50.. can activate the thermal shock protection only on sites where the set-point is lower than 250°C and according to **rAL** parameter.
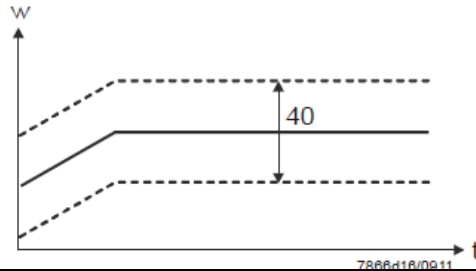
| Parameter                   | Value                | Description                                                                                                                                                                                                                             |
|-----------------------------|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FnCT<br>function            | <b>0</b><br>1<br>2   | Choose type of range degrees/time<br><b>0 = deactivated</b><br>1 = Kelvin degrees/minute<br>2 = Kelvin degrees/hour                                                                                                                     |
| rASL<br>ramp rate           | <b>0,0</b> ... 999,9 | Slope of thermal shock protection (only with functions 1 and 2)                                                                                                                                                                         |
| toLP<br>tolerance band ramp | <b>0</b> ...9999     | width of tolerance band (in K) about the set-point<br><b>0 = tolerance band inactive</b><br>                                                        |
| rAL<br>ramp limit           | <b>0</b> ...250      | Ramp limit. When this value is lower than the temperature set-point, the RWF controls the output increasing the temp set point step by step according to rASL. If this is over the temp set point, the control is performed in cooling. |

(**bold** = factory settings)

### ConF > OutP (parameter under group only for RWF50.3)

| Parameter                             | Value                        | Description                                                                                                                                                                                                                         |
|---------------------------------------|------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| FnCt<br>tipo di controllo             | 1<br><b>4</b>                | 1 = analog input 1 doubling with possibility to convert (depending on par <b>SiGn</b> )<br><b>4 = modulation controller</b>                                                                                                         |
| SiGn<br>type of output signal         | <b>0</b><br>1<br>2           | physical output signal (terminals A+, A-)<br><b>0 = 0÷20mA</b><br>1 = 4÷20mA<br>2 = 0÷10V                                                                                                                                           |
| rOut<br>Value when out of input range | <b>0...101</b>               | signal (in percent) when measurement range is crossed                                                                                                                                                                               |
| oPnt<br>zero point                    | -1999... <b>0</b> ...+9999   | value range of the output variable is assigned to a physical output signal Per default, the setting corresponds to 0...100% angular positioning for the controller outputs (terminals A+, A-) (effective only with <b>FnCt</b> = 1) |
| End<br>End value                      | -1999... <b>100</b> ...+9999 | value range of the output variable is assigned to a physical output signal Per default, the setting corresponds to 0...100% angular positioning for the controller outputs (terminals A+, A-) (effective only with <b>FnCt</b> = 1) |

(**bold** = factory settings)

### ConF > binF

| Parameter                                     | Value                   | Description                                                                                                                                                                                                                                                   |
|-----------------------------------------------|-------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| bin1<br>digital inputs<br>(terminals DG - D1) | <b>0</b><br>1<br>2<br>4 | <b>0 = without function</b><br>1 = set-point changeover (SP1 / SP2)<br>2 = set-point shift ( <b>Opr</b> > <b>dSP</b> parameter = value of set-point modify)<br>4 = changeover of operating mode<br>open – modulating operation;<br>close – 2 stage operation. |

(**bold** = factory settings)

### ConF > dISP

| Parameter                        | Value                        | Description                                                                                                                                                                                              |
|----------------------------------|------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| diSU<br>upper display<br>(red)   | 0<br><b>1</b><br>4<br>6<br>7 | display value for upper display:<br>0 = display power-off<br><b>1 = analog input value</b><br>4 = Controller's angular positioning<br>6 = set-point value<br>7 = end value with thermal shock protection |
| diSL<br>lower display<br>(green) | 0<br>1<br>4<br><b>6</b><br>7 | display value for lower display:<br>0 = display power-off<br>1 = analog input value<br>4 = Controller's angular positioning<br><b>6 = set-point value</b><br>7 = end value with thermal shock protection |
| tout<br>timeout                  | <b>0..180</b> ..250          | time (s) on completion of which the controller returns automatically to the basic display, if no button is pressed                                                                                       |
| dECP<br>decimal point            | <b>0</b><br>1<br>2           | <b>0 = no decimal place</b><br>1 = one decimal place<br>2 = two decimal places                                                                                                                           |
| CodE<br>level lockout            | <b>0</b><br>1<br>2<br>3      | <b>0 = no lockout</b><br>1 = configuration level lockout (ConF)<br>2 = Parameter and configuration level lockout (PArA & ConF)<br>3 = keyboard lockout                                                   |

(**bold** = factory settings)




#### Manual control :

- in order to manual change the burner load, while firing keep pushing the **ESC** button for more than 5 s; on the lower green display **Hand** appears.
- using the **UP** and **DOWN** arrows, the load varies.
- Keep pushing the **ESC** button for getting the normal operation again.
- **NB:** every time the device shuts the burner down (start led switched off - contact 1N-1P open), the manual control is not active.

#### Device self-setting (auto-tuning):

If the burner in the steady state does not respond properly to heat generator requests, you can activate the Device's self-setting function, which recalculates PID values for its operation, deciding which are most suitable for the specific kind of request

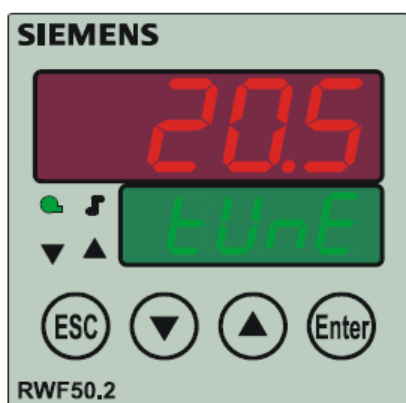

Follow the below instructions:

push the **UP** and **DOWN** arrows for more than 5 s; on the green lower display **TUNE** appears. Now the device pushes the burner to increase and decrease its output. During this time, the device calculates PID parameters (**Pb1**, **dt** and **rt**). After the calculations, the TUNE is automatically deactivated and the device has already stored them.

In order to stop the Auto-tuning function while it works, push again the **UP** and **DOWN** arrows for more than 5 s. The calculated PID parameters can be manually modified following the previously described instructions.


#### Display of software version :



The software version is shown by pushing **Enter + UP arrow** on the upper display




Electric connection :

With 7 pins connector version

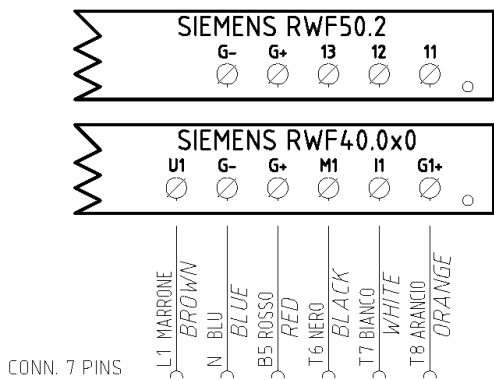

CONN. 7 PINS

With terminals version

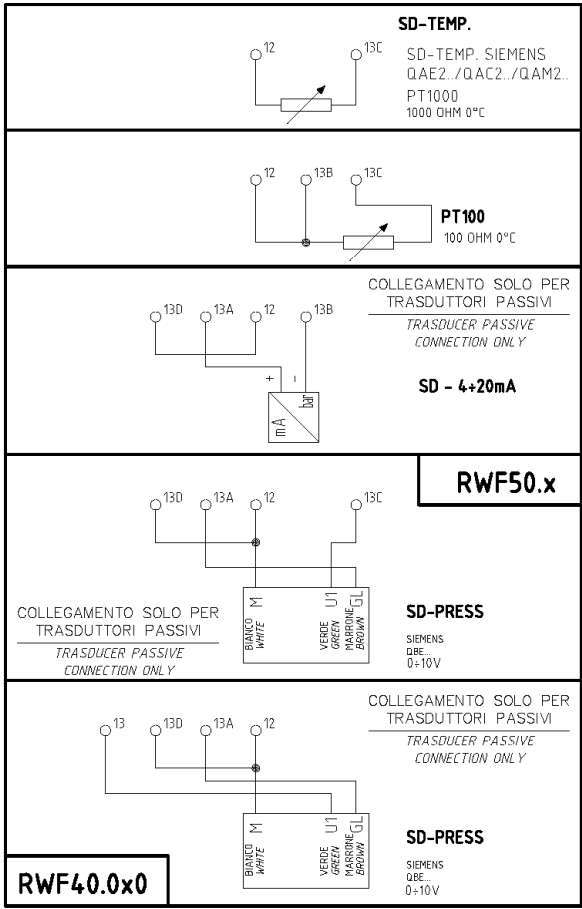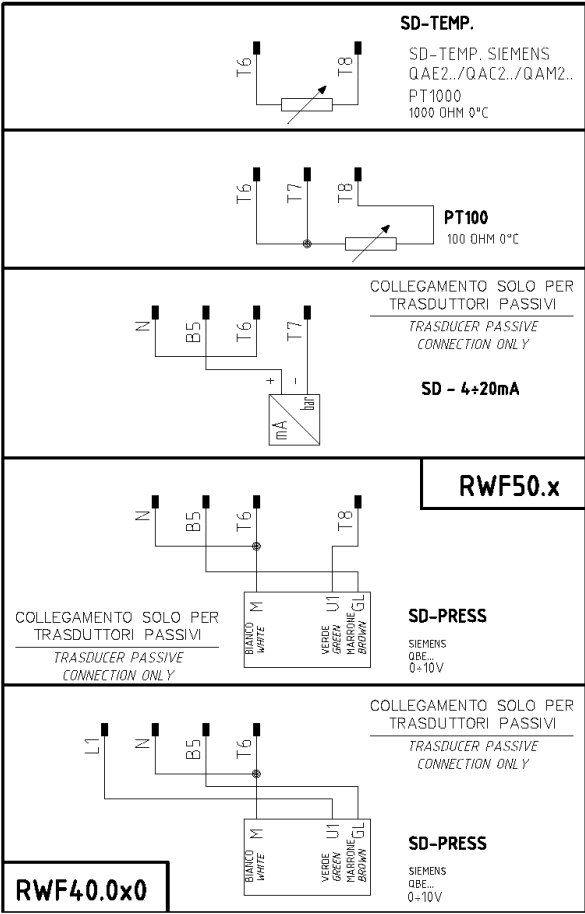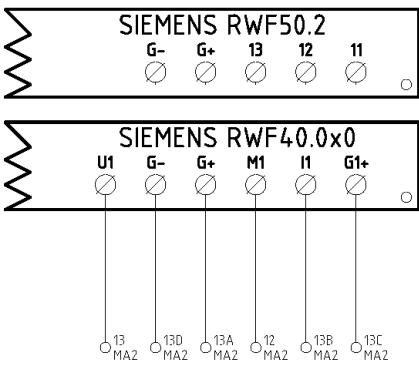

Matches terminals between RWF50.2 and RWF40.0x0



Parameters summarising for RWF50.2x:

| Navigation menù         | Conf |      |             |             |          | Conf        |             |             |       |    |     |     |             |             | Opr         |
|-------------------------|------|------|-------------|-------------|----------|-------------|-------------|-------------|-------|----|-----|-----|-------------|-------------|-------------|
|                         | Inp  |      |             |             |          |             |             | diSP        | PArA  |    |     |     |             |             |             |
|                         | Inp1 |      |             |             |          |             |             |             |       |    |     |     |             |             |             |
| Types of probe          | SEn1 | OFF1 | SCL1        | SCH1        | Unit     | SPL         | SPH         | dECP        | Pb. 1 | dt | rt  | tt  | HYS1 (*)    | HYS3 (*)    | SP1 (*)     |
| Siemens QAE2120...      | 6    | 0    | needless    | needless    | 1        | 30          | 95          | 1           | 10    | 80 | 350 | (#) | -5          | 5           | 80 °C       |
| Siemens QAM2120..       | 6    | 0    | needless    | needless    | 1        | 0           | 80          | 1           | 10    | 80 | 350 | (#) | -2,5        | 2,5         | 40°C        |
| Pt1000 (130°C max.)     | 4    | 0    | needless    | needless    | 1        | 30          | 95          | 1           | 10    | 80 | 350 | (#) | -5          | 5           | 80°C        |
| Pt1000 (350°C max.)     | 4    | 0    | needless    | needless    | 1        | 0           | 350         | 1           | 10    | 80 | 350 | (#) | -5          | 10          | 80°C        |
| Pt100 (130°C max.)      | 1    | 0    | needless    | needless    | 1        | 0           | 95          | 1           | 10    | 80 | 350 | (#) | -5          | 5           | 80°C        |
| Pt100 (350°C max)       | 1    | 0    | needless    | needless    | 1        | 0           | 350         | 1           | 10    | 80 | 350 | (#) | -5          | 10          | 80°C        |
| Probe 4÷20mA / 0÷1,6bar | 16   | 0    | 0           | 160         | needless | 0           | 160         | 0           | 5     | 20 | 80  | (#) | 0           | 20          | 100 kPa     |
| Probe 4÷20mA / 0÷3bar   | 16   | 0    | 0           | 300         | needless | 0           | 300         | 0           | 5     | 20 | 80  | (#) | 0           | 20          | 200 kPa     |
| Probe 4÷20mA / 0÷10bar  | 16   | 0    | 0           | 1000        | needless | 0           | 1000        | 0           | 5     | 20 | 80  | (#) | 0           | 50          | 600 kPa     |
| Probe 4÷20mA / 0÷16bar  | 16   | 0    | 0           | 1600        | needless | 0           | 1600        | 0           | 5     | 20 | 80  | (#) | 0           | 80          | 600 kPa     |
| Probe 4÷20mA / 0÷25bar  | 16   | 0    | 0           | 2500        | needless | 0           | 2500        | 0           | 5     | 20 | 80  | (#) | 0           | 125         | 600 kPa     |
| Probe 4÷20mA / 0÷40bar  | 16   | 0    | 0           | 4000        | needless | 0           | 4000        | 0           | 5     | 20 | 80  | (#) | 0           | 200         | 600 kPa     |
| Siemens QBE2002 P4      | 17   | 0    | 0           | 400         | needless | 0           | 400         | 0           | 5     | 20 | 80  | (#) | 0           | 20          | 200 kPa     |
| Siemens QBE2002 P10     | 17   | 0    | 0           | 1000        | needless | 0           | 1000        | 0           | 5     | 20 | 80  | (#) | 0           | 50          | 600 kPa     |
| Siemens QBE2002 P16     | 17   | 0    | 0           | 1600        | needless | 0           | 1600        | 0           | 5     | 20 | 80  | (#) | 0           | 80          | 600 kPa     |
| Siemens QBE2002 P25     | 17   | 0    | 0           | 2500        | needless | 0           | 2500        | 0           | 5     | 20 | 80  | (#) | 0           | 125         | 600 kPa     |
| Siemens QBE2002 P40     | 17   | 0    | 0           | 4000        | needless | 0           | 4000        | 0           | 5     | 20 | 80  | (#) | 0           | 200         | 600 kPa     |
| Segnale 0÷10V           | 17   | 0    | to be fixed | to be fixed | needless | to be fixed | to be fixed | to be fixed | 5     | 20 | 80  | (#) | to be fixed | to be fixed | to be fixed |
| Segnale 4÷20mA          | 16   | 0    | to be fixed | to be fixed | needless | to be fixed | to be fixed | to be fixed | 5     | 20 | 80  | (#) | to be fixed | to be fixed | to be fixed |

**NOTE :**

(#) tt – servo control run time

SQL33 ; STM30; SQM10; SQM40; SQM50; SQM54 = **30** (secondi) - STA12B3.41; SQN30.251; SQN72.4A4A20 = **12** (secondi)

(\*)These values are factory set - values **must be** set during operation at the plant based on the real working temperature/pressure value.

**WARNING :** With pressure probes the parameters SP1, SCH, SCL, HYS1, HYS3 must be selected, and visualized in kPa (kilo Pascal). (1bar ≡ 100.000Pa ≡ 100kPa)

## APPENDIX: PROBES CONNECTION



To assure the utmost comfort, the control system needs reliable information, which can be obtained provided the sensors have been installed correctly. Sensors measure and transmit all variations encountered at their location.

Measurement is taken based on design features (time constant) and according to specific operating conditions. With wiring run in raceways, the sheath (or pipe) containing the wires must be plugged at the sensor's terminal board so that currents of air cannot affect the sensor's measurements.

### Ambient probes (or ambient thermostats)

#### Installation

The sensors (or room thermostats) must be located in reference rooms in a position where they can take real temperature measurements without being affected by foreign factors.

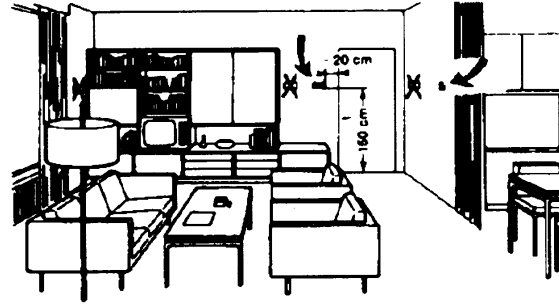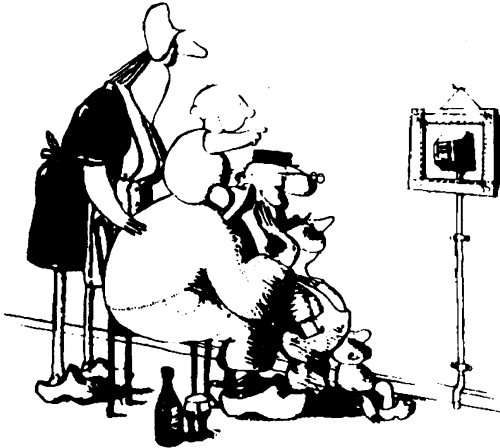


### Outside probes (weather)

#### Installation

In heating or air-conditioning systems featuring adjustment in response to outside temperature, the sensor's positioning is of paramount importance.

### It's good to be admired ...even better to be effective


Heating systems: the room sensor must not be installed in rooms with heating units complete with thermostatic valves. Avoid all sources of heat foreign to the system.

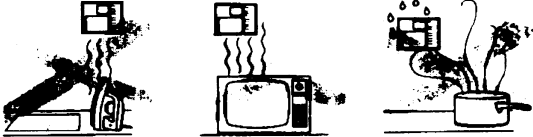

**General rule:** on the outer wall of the building where the living rooms are, never on the south-facing wall or in a position where they will be affected by morning sun. If in any doubt, place them on the north or north-east façade.

### Location


On an inner wall on the other side of the room to heating units height above floor 1.5 m, at least 1.5 m away from external sources of heat (or cold).

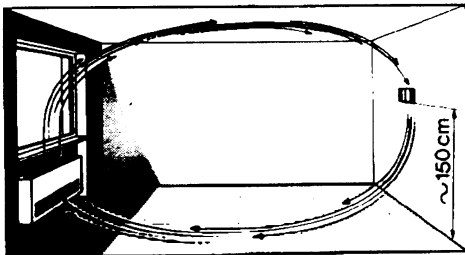

### Installation position to be avoided

near shelving or alcoves and recesses, near doors or windows, inside outer walls exposed to solar radiation or currents of cold air, on inner walls with heating system pipes, domestic hot water pipes, or cooling system pipes running through them.

### Positions to be avoided

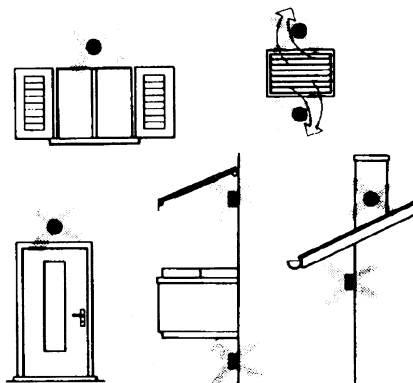

Avoid installing near windows, vents, outside the boiler room, on chimney breasts or where they are protected by balconies, cantilever roofs.

**The sensor must not be painted (measurement error).**

## Duct or pipe sensors


### Installing temperature sensors

For measuring outlet air:


- after delivery fan or
- after coil to be controlled, at a distance of at least 0,5 m

For measuring room temperature:

- before return air intake fan and near room's return air intake. For measuring saturation temperature: after mist eliminator.

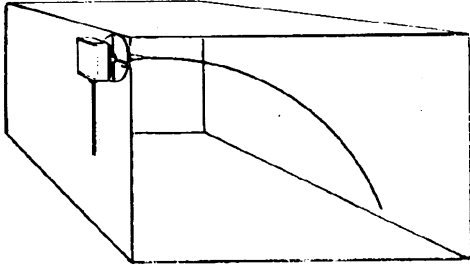


Bend 0.4m sensor by hand (never use tools) as illustrated.

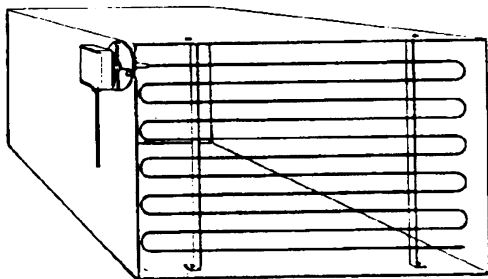

Use whole cross-section of duct, min. distance from walls 50 mm, radius of curvature 10 mm for 2m or 6m sensors.

### Installing combined humidity sensors

As max. humidity limit sensor on outlet (steam humidifiers).

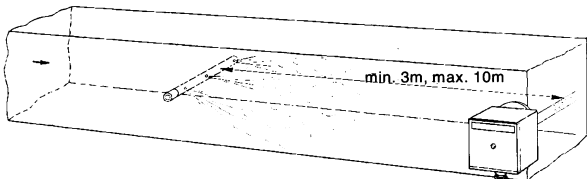


## Installing pressure sensors

A - installation on ducts carrying fluids at max. temperature 80°C

B - installation on ducts at temperature over 80°C and for refrigerants

C - installation on ducts at high temperatures:

- increase length of siphon
- place sensor at side to prevent it being hit by hot air coming from the pipe.

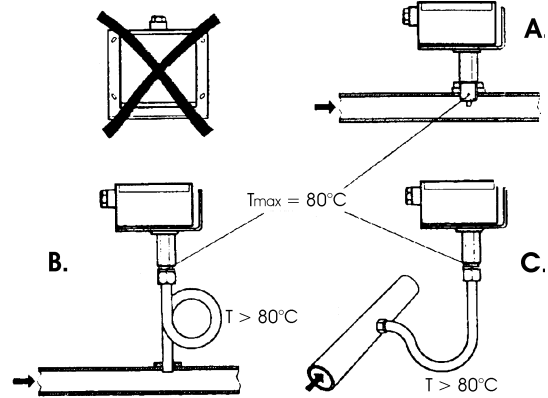

## Installing differential pressure sensors for water

- Installation with casing facing down not allowed.-With temperature over 80°C, siphons are needed.
- To avoid damaging the sensor, you must comply with the following instructions

### when installing:

- make sure pressure difference is not greater than the value permitted by the sensor
- when there are high static pressures, make sure you insert shutoff valves A-B-C.

## Putting into operation


Start disable

1=open C1=open C


2=open A2=close B

3=open B3=close A

4= close C

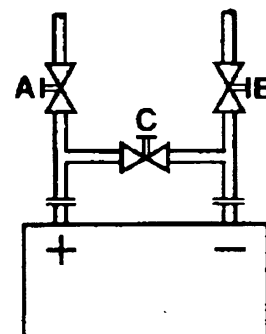

## Immersion or strap-on sensors

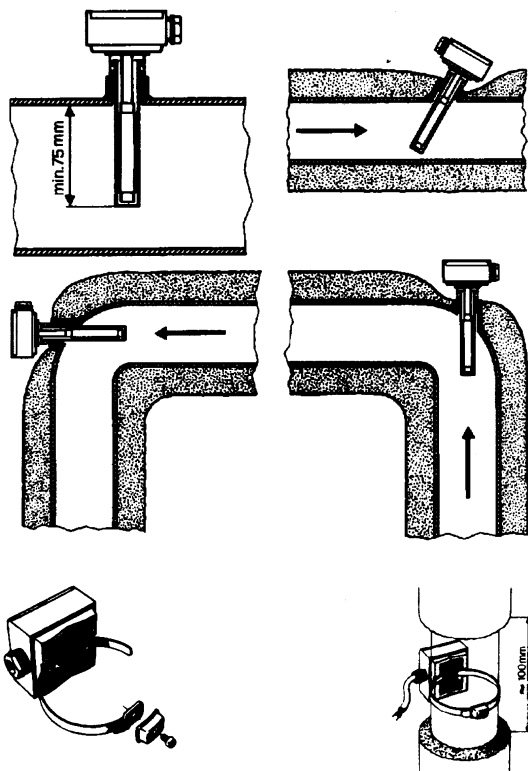

Placing the probes (QAD22.../QAE21.../QAP21.../RCA...)

## Immersion probes installation

Sensors must be installed on the stretch of pipe in which fluid circulates all the time.

The rigid stem (sensing element doing the measuring) must be inserted by at least 75mm and must face the direction of flow.

Recommended locations: on a bend or on a straight stretch of pipe but tilted by 45° and against the flow of fluid.

Protect them to prevent water from infiltrating (dripping gates, condensation from pipes etc.)

## Installing QAD2.. strap-on sensors

Make sure fluid is circulating in the chosen location.

Eliminate insulation and paintwork (including rust inhibitor) on a min. 100mm length of pipe.


Sensors come with straps for pipes up to 100 mm in diameter

## With pumps on outlet

with 3 ways valves / with 4 ways valves



Panel system / burner control

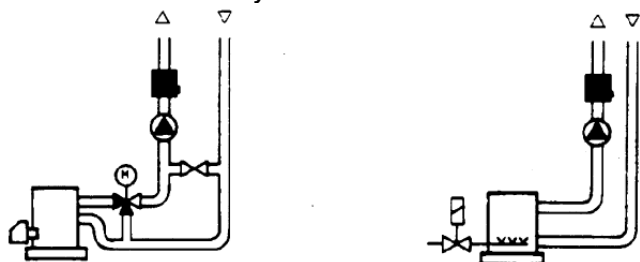

## Strap-on or immersion sensors?

### QAD2.. strap-on sensors

Advantages :

- 10 sec. time constant
- Installed with system running (no plumbing work)
- Installation can be changed easily if it proves incorrect.

Limits:

- Suitable for pipe diameters max. 100 mm
- Can be affected by currents of air etc.

### QAE2... immersion sensors

Advantages:

- Measure "mean" fluid temperature
- No external influence on measurement such as: currents of air, nearby pipes etc.

Limits:

- Time constant with sheath: 20 sec.
- Hard to change installation position if it proves incorrect.


## With pumps on return

with 3 ways valves / with 4 ways valves




## Duct pressure switches and sensors


### Installing differential pressure probes for air

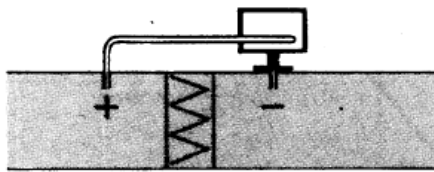


A - Control a filter (clogging)

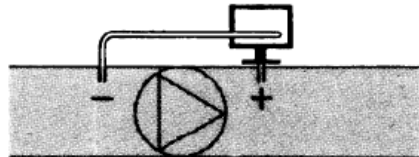

B - Control a fan (upstream/downstream)

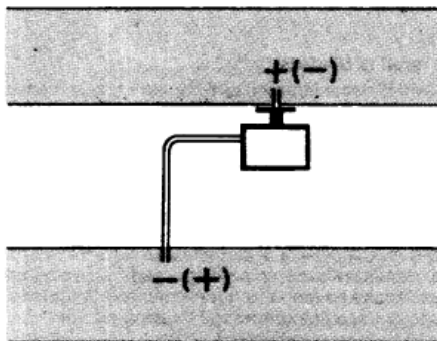


C - Measurement of difference in pressure between two ducts

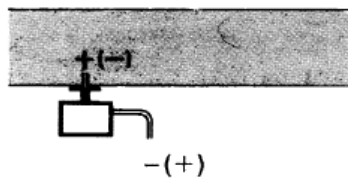


D - Measurement of difference in pressure between two rooms or of inside of duct and outside

### Basic principles

Measuring static pressure(i.e. pressure exerted by air on pipe walls)

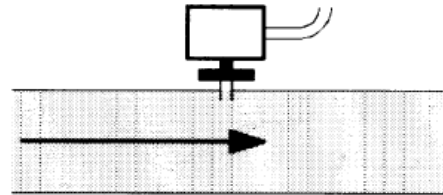

### Measuring dynamic pressure

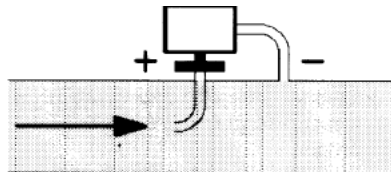


$$Pd = \frac{\gamma v^2}{2g}$$

### Key

- $\gamma$   $\text{Kg/m}^3$ , specific weight of air
- $v$   $\text{m/s}$ , air speed
- $g$   $9.81 \text{ m/s}^2$  gravity acceleration
- $Pd$   $\text{mm C.A.}$ , dynamic pressure

### Measuring total pressure

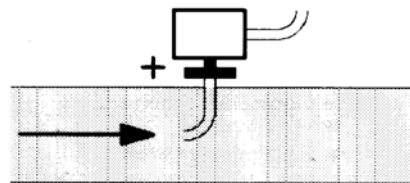

## Spare parts


| Description                                                          | Code    |
|----------------------------------------------------------------------|---------|
| Modulator RWF50.2 (uscita a 3 punti - apri, fermo, chiudi)           | 2570148 |
| Modulator RWF50.3 (uscita continua 0÷20mA, 4÷20mA, 0÷10V)            | 2570149 |
| Temperature probe Siemens QAE2120.010A (30÷130°C)                    | 2560101 |
| Temperature probe Siemens QAM2120.040 (-15÷+50°C)                    | 2560135 |
| Thermoresistor Pt1000 ø6mm L100mm (30÷130°C)                         | 2560188 |
| Thermoresistor Pt1000 ø10mm L200mm (0÷350°C)                         | 2560103 |
| Thermoresistor Pt100 ø10mm L200mm (0÷350°C)                          | 2560145 |
| Thermoresistor Pt100 ø8mm L85mm (0÷120°C)                            | 25601C3 |
| Pressure probe Siemens QBE2.. P4 (0÷4bar)                            | 2560159 |
| Pressure probe Siemens QBE2.. P10 (0÷10bar / signal 0÷10V)           | 2560160 |
| Pressure probe Siemens QBE2.. P16 (0÷16bar / signal 0÷10V)           | 2560167 |
| Pressure probe Siemens QBE2.. P25 (0÷25bar / signal 0÷10V)           | 2560161 |
| Pressure probe Siemens QBE2.. P40 (0÷40bar / signal 0÷10V)           | 2560162 |
| Pressure probe Danfoss MBS 3200 P 1,6 (0÷1,6bar / signal 4÷20mA)     | 2560189 |
| Pressure probe Danfoss MBS 3200 P 10 (0÷10bar / signal 4÷20mA)       | 2560190 |
| Pressure probe Danfoss MBS 3200 P 16 (0÷16bar / signal 4÷20mA)       | 2560191 |
| Pressure probe Danfoss MBS 3200 P 25 (0÷25bar / signal 4÷20mA)       | 2560192 |
| Pressure probe Danfoss MBS 3200 P 40 (0÷40bar / signal 4÷20mA)       | 2560193 |
| Pressure probe Siemens 7MF1565-3BB00-1AA1 (0÷1,6bar / signal 4÷20mA) | 25601A3 |
| Pressure probe Siemens 7MF1565-3CA00-1AA1 (0÷10bar / signal 4÷20mA)  | 25601A4 |
| Sonda di pressione Siemens 7MF1565-3CB00-1AA1 (0÷16bar / signal      | 25601A5 |
| Pressure probe Siemens 7MF1565-3CD00-1AA1 (0÷25bar / signal 4÷20mA)  | 25601A6 |
| Pressure probe Siemens 7MF1565-3CE00-1AA1 (0÷40bar / signal 4÷20mA)  | 25601A7 |
| Pressure probe Gefran E3E B1V6 MV (0÷1,6bar / segnale 4÷20mA)        | 25601C4 |
| Pressure probe Danfoss E3E B01D MV (0÷10bar / segnale 4÷20mA)        | 25601C5 |
| Pressure probe Danfoss E3E B16U MV (0÷16bar / segnale 4÷20mA)        | 25601C6 |
| Pressure probe Danfoss E3E B25U MV (0÷25bar / segnale 4÷20mA)        | 25601C7 |
| Pressure probe Danfoss E3E B04D MV (0÷40bar / segnale 4÷20mA))       | 25601C8 |




Note: Specifications and data subject to change. Errors and omissions excepted.

# **KM3 Modulator**

## **USER MANUAL**

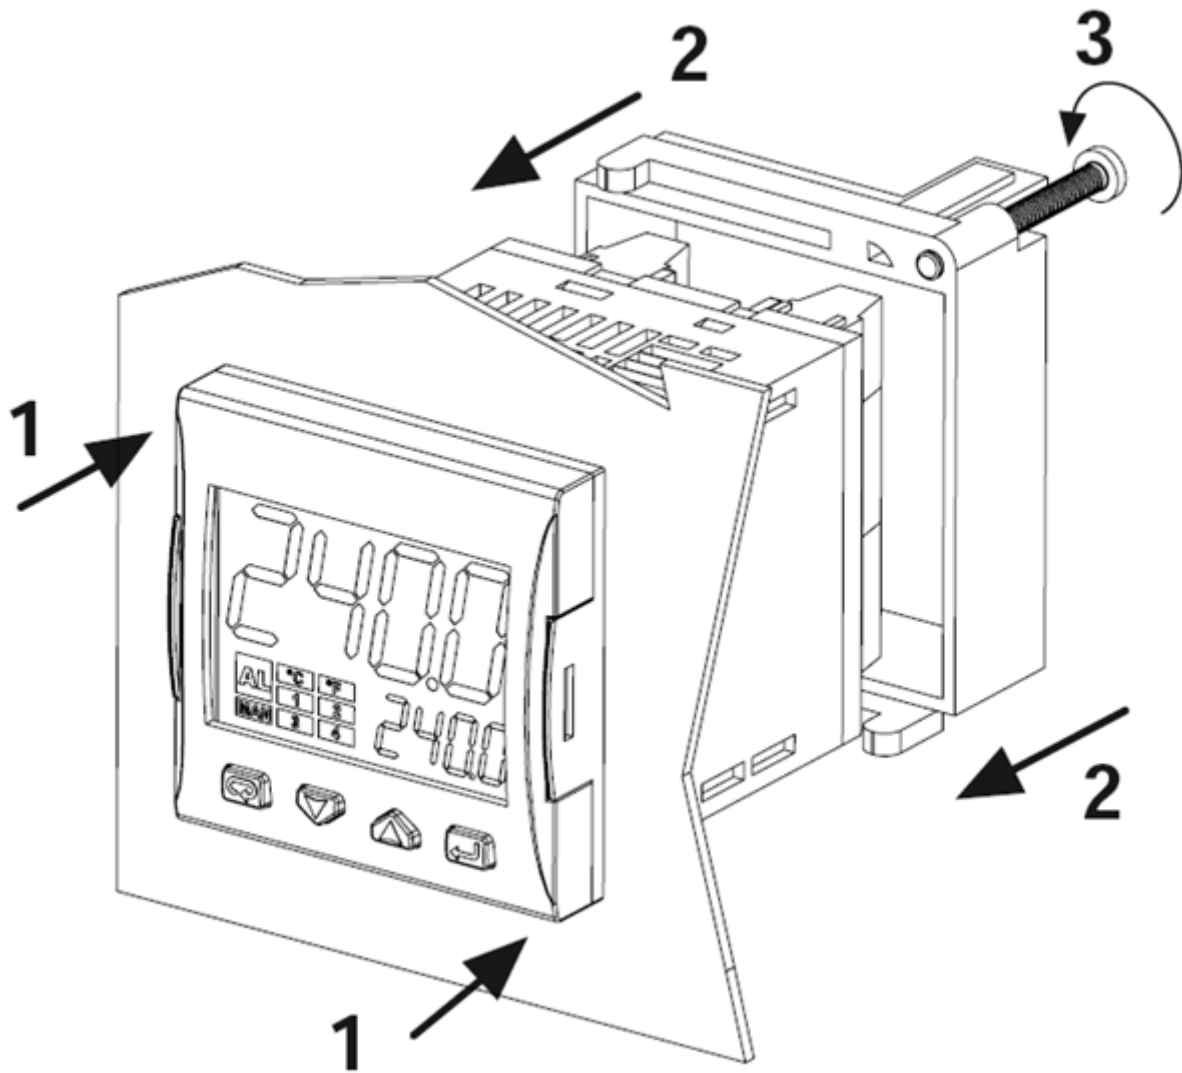
**MOUNTING**

## DISPLAY AND KEYS

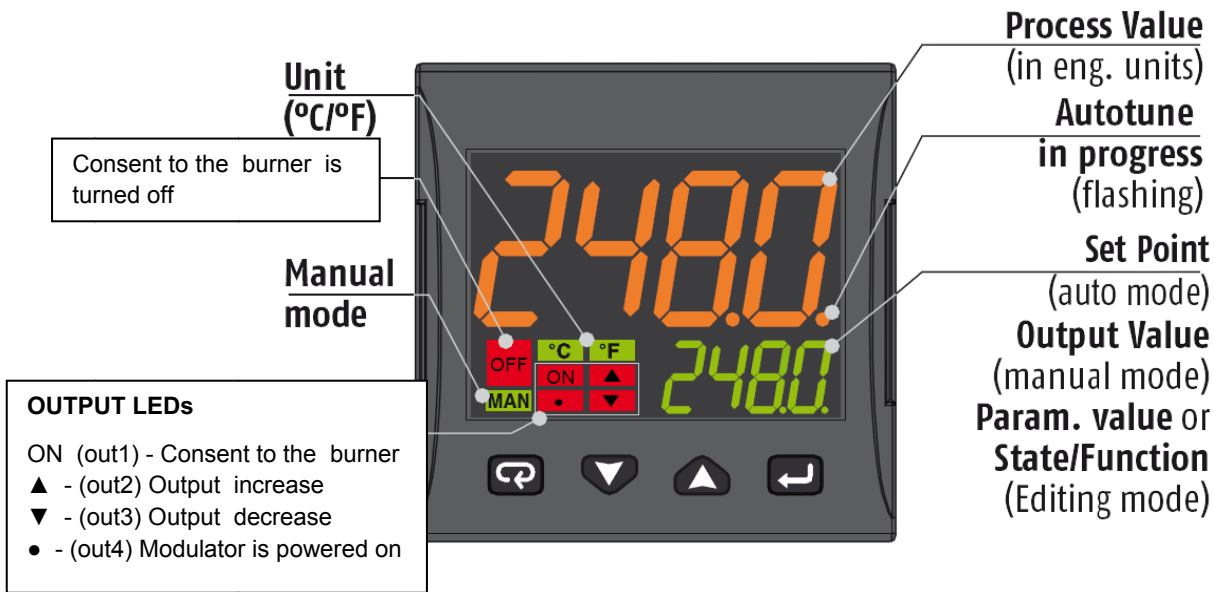

|  | Operator Mode                                                                                        | Editing Mode                                                                   |
|--|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
|  | Access to:<br>- Operator Commands (Timer, Setpoint selection ...)<br>- Parameters<br>- Configuration | Confirm and go to Next parameter                                               |
|  | Access to:<br>- Operator additional information (Output value, running time ...)                     | Increase the displayed value or select the next element of the parameters list |
|  | Access to:<br>- Set Point                                                                            | Decrease the displayed value or select the previous element                    |
|  | Programmable key:<br>Start the programmed function (Autotune, Auto/Man, Timer ...)                   | Exit from Operator commands/Parameter setting/Configuration                    |

## CONNECTIONS DIAGRAM

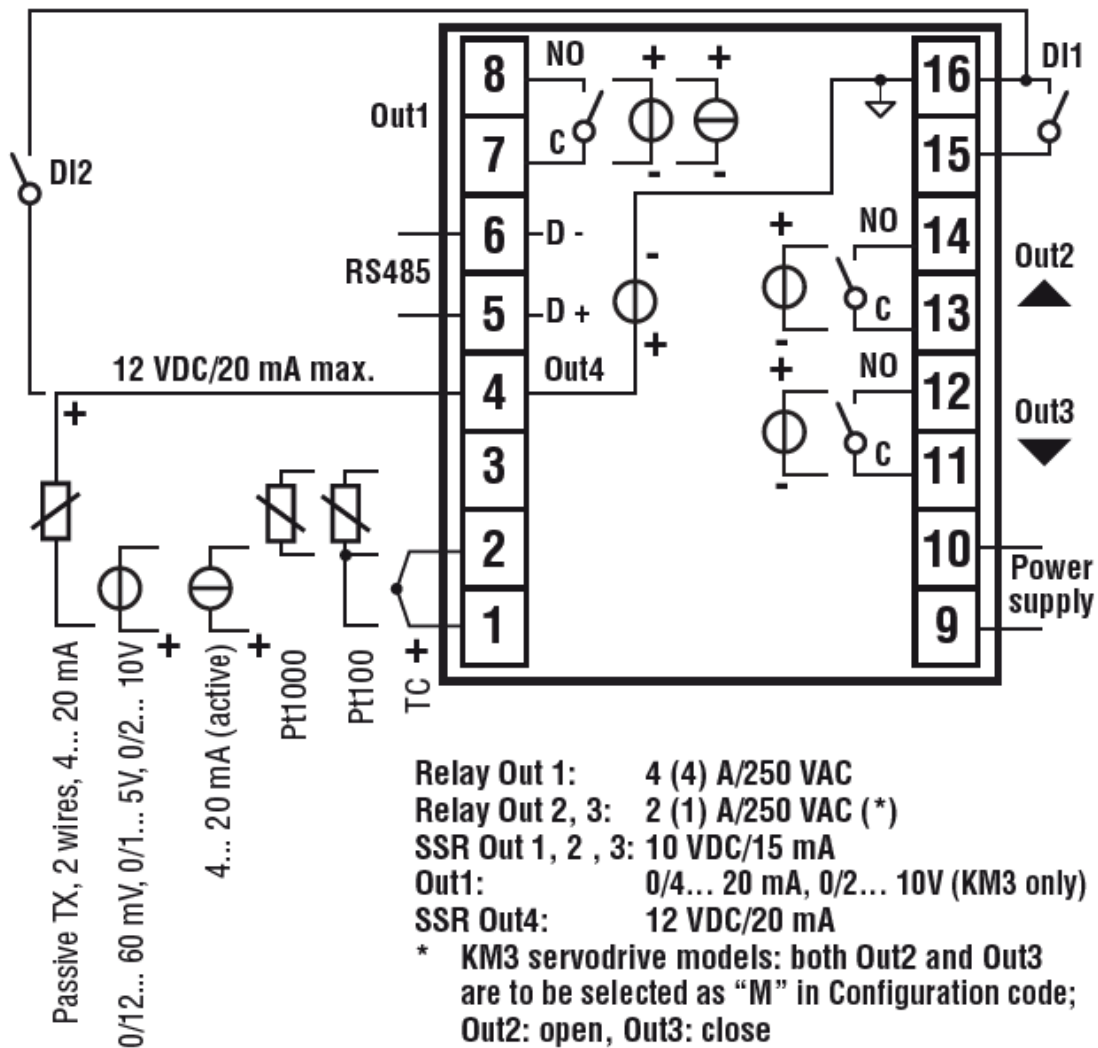

### Probe connection:

- **PT1000/NTC/PTC:** between terminal 3 and 2
- **PT 100:** between terminal 3 and 2 with terminal 1
- **Passive pressure probe** 0/4-20 mA: between terminal 4 ( + ) e 1 ( - )  
Note: out4 must be activated ( IO4F must be set to ON )
- **Powered pressure probe** 0/4-20 mA between terminal 4 (power supply), 2 ( negative ) e 1 (positive)  
Note: set IO4F to ON to activate Out4

### Power supply connection:


- **Neutral wire:** terminal 9
- **Phase:** terminal 10 ( 100...240 Vac )
- Close terminals 15-16 to switch to the set point 2

### Output connection:

- **Channel 1:** terminal 7 and 8 ( burner on – off )
- **Channel 2:** terminal 11 and 12 (servomotor opens)
- **Channel 3:** terminal 13 and 14 (servomotor closes)


## SETPOINT AND HYSTERESIS CONFIGURATION (SP, AL1, HAL1 parameters)

Push the  button to enter into the setpoint configuration:

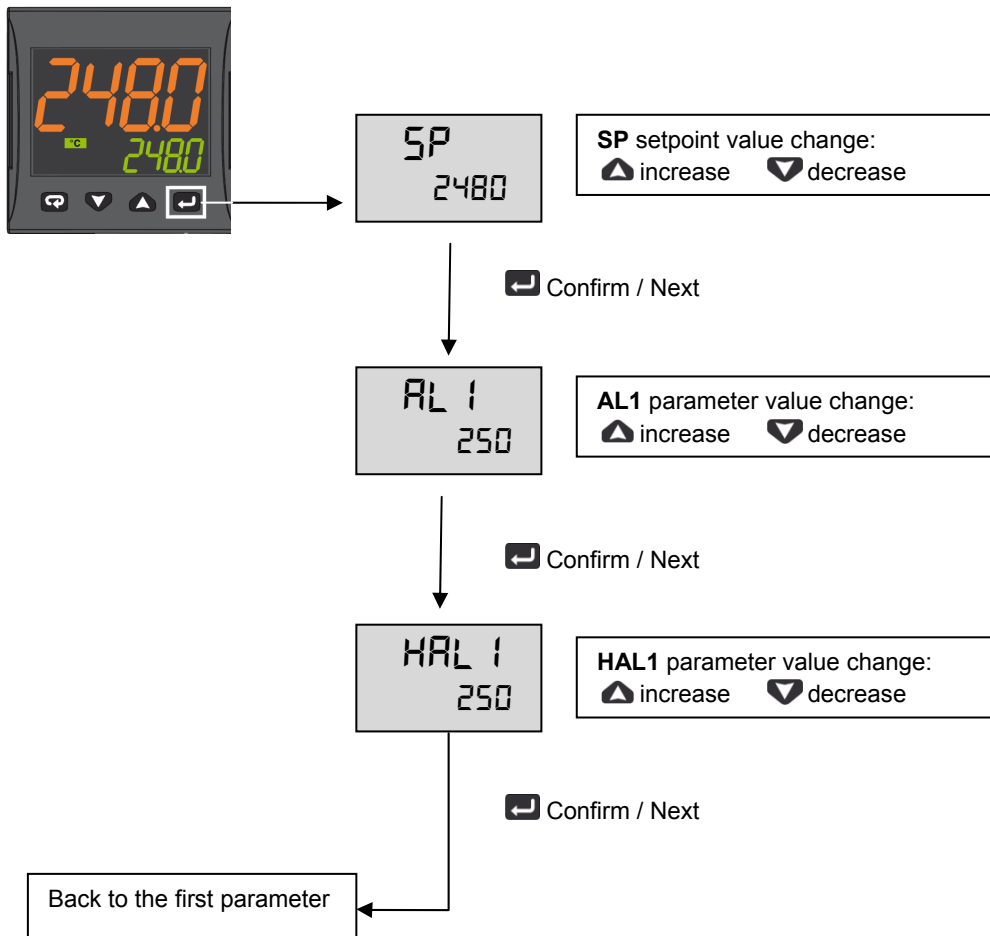


To return to normal mode, press the  key for 3 seconds or wait the 10s timeout

### Operation example

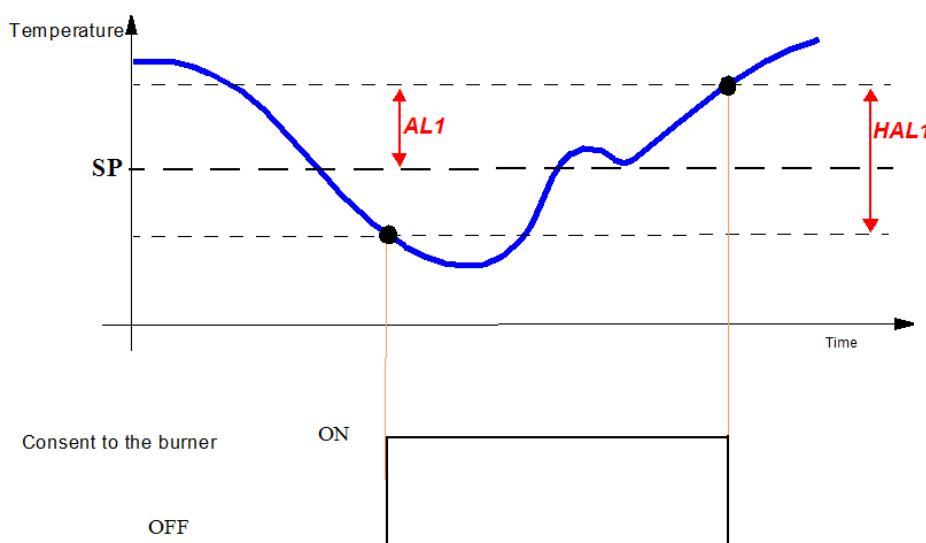

## LIMITED ACCESS LEVEL

Proceed as follows to change some parameters that are not visible in standard user mode:

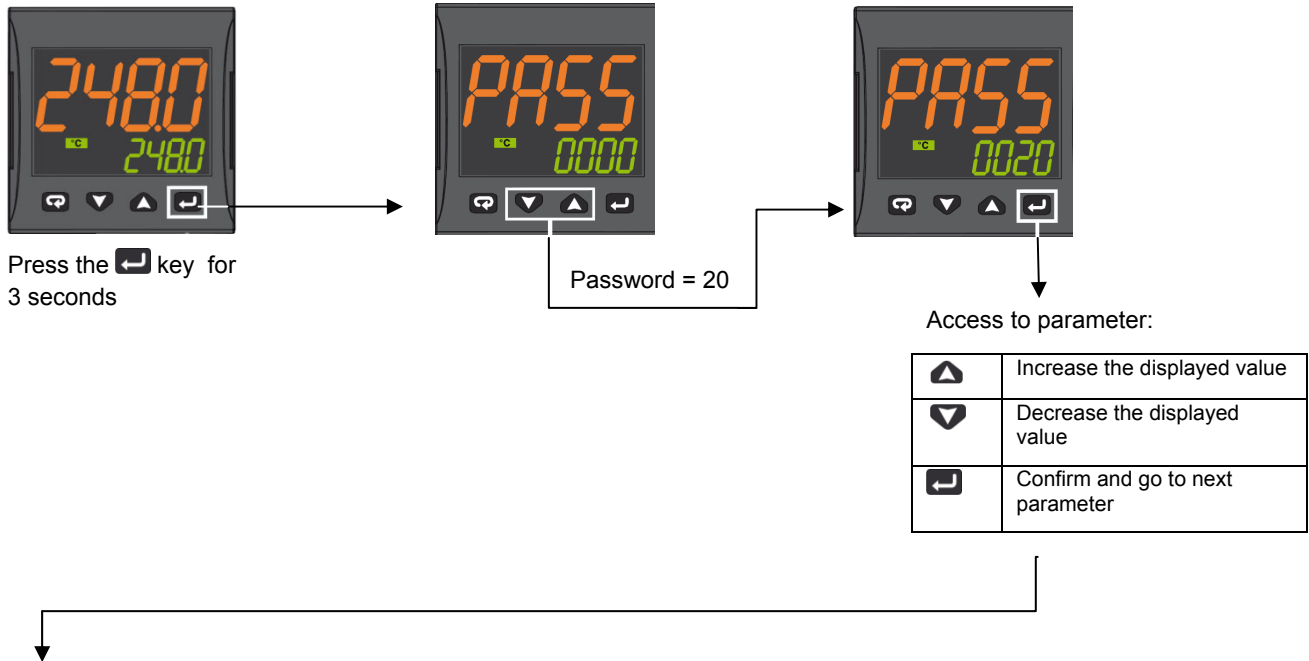

| Param | Description                       | Values                                                                                                                                            | Default              |
|-------|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| SEnS  | Input type                        | Pt1 = RTD Pt100<br>Pt10 = RTD Pt1000<br>0.20 = 0..20mA<br>4.20 = 4..20mA Pressure probe<br>0.10 = 0..10V<br>2.10 = 2..10V<br>crAL= Thermocouple K | Depends on the probe |
| SP    | Set point 1                       | SPLL ... SPLH                                                                                                                                     | See page 7           |
| AL1   | AL1 threshold                     | AL1L... AL1H (E.U.)                                                                                                                               |                      |
| HAL1  | AL1 hysteresis                    | 1... 9999 (E.U.)                                                                                                                                  |                      |
| Pb    | Proportional band                 | 1... 9999 (E.U.)                                                                                                                                  |                      |
| ti    | Integral time                     | 0 (oFF) ... 9999 (s)                                                                                                                              |                      |
| td    | Derivative time                   | 0 (oFF) ... 9999 (s)                                                                                                                              |                      |
| Str.t | Servomotor stroke time            | 5...1000 seconds                                                                                                                                  |                      |
| db.S  | Servomotor dead band              | 0...100%                                                                                                                                          |                      |
| SPLL  | Minimum set point value           | -1999 ... SPLH                                                                                                                                    |                      |
| SPHL  | Maximum set point value           | SPLL ... 9999                                                                                                                                     |                      |
| dp    | Decimal point position            | 0... 3                                                                                                                                            |                      |
| SP 2  | Set point 2                       | SPLL...SPLH                                                                                                                                       | 60                   |
| A.SP  | Selection of the active set point | "SP" ... "nSP"                                                                                                                                    | SP                   |

To exit the parameter setting procedure press the key (for 3 s) or wait until the timeout expiration (about 30 seconds)

### Probe parameters configuration MODULATORE ASCON KM3

| Parameter Group                  |  | inP  |              |              |              |      |               |              | AL1           |             | rEG         |             |                 |             |           | SP        |              |  |  |
|----------------------------------|--|------|--------------|--------------|--------------|------|---------------|--------------|---------------|-------------|-------------|-------------|-----------------|-------------|-----------|-----------|--------------|--|--|
| Parameter                        |  | Sens | dp           | SSC          | FSc          | unit | IO4.F<br>(**) | AL1<br>(***) | HAL1<br>(***) | Pb<br>(***) | ti<br>(***) | td<br>(***) | Str.t           | db.S        | SPLL      | SPHL      | SP           |  |  |
| Probes                           |  |      | Dec<br>Point | Scale<br>Min | Scale<br>Max |      |               | Off          | On            | p           | i           | d           | servo<br>time s | Band<br>Mo. | SP<br>Min | SP<br>Max | Set<br>point |  |  |
| Pt1000 (130°C max)               |  | Pt10 | 1            |              |              | °C   | on            | 5            | 10            | 10          | 350         | 1           | *               | 5           | 30        | 95        | 80           |  |  |
| Pt1000 ( 350°C max)              |  | PT10 | 1            |              |              | °C   | on            | 10           | 10            | 10          | 350         | 1           | *               | 5           | 0         | 350       | 80           |  |  |
| Pt100 (130°C max)                |  | PT1  | 1            |              |              | °C   | on            | 5            | 10            | 10          | 350         | 1           | *               | 5           | 0         | 95        | 80           |  |  |
| Pt100 (350°C max)                |  | Pt1  | 1            |              |              | °C   | on            | 10           | 10            | 10          | 350         | 1           | *               | 5           | 0         | 350       | 80           |  |  |
| Pt100 (0÷100°C 4÷20mA)           |  | 4.20 | 1            | 0            | 100          |      | on            | 5            | 10            | 10          | 350         | 1           | *               | 5           | 0         | 95        | 80           |  |  |
| Thermocouple K (1200°C max)      |  | crAL | 0            |              |              | °C   | on            | 20           | 25            | 10          | 350         | 1           | *               | 5           | 0         | 1200      | 80           |  |  |
| Thermocouple J (1000°C max)      |  | J    | 0            |              |              | °C   | on            | 20           | 25            | 10          | 350         | 1           | *               | 5           | 0         | 1000      | 80           |  |  |
| 4-20mA / 0-1,6barPressure probe  |  | 4.20 | 0            | 0            | 160          |      | on            | 20           | 20            | 5           | 120         | 1           | *               | 5           | 0         | 160       | 100          |  |  |
| 4-20mA / 0-10bar Pressure probe  |  | 4.20 | 0            | 0            | 1000         |      | on            | 50           | 50            | 5           | 120         | 1           | *               | 5           | 0         | 1000      | 600          |  |  |
| 4-20mA / 0-16bar Pressure probe  |  | 4.20 | 0            | 0            | 1600         |      | on            | 80           | 80            | 5           | 120         | 1           | *               | 5           | 0         | 1600      | 600          |  |  |
| 4-20mA / 0-25bar Pressure probe  |  | 4.20 | 0            | 0            | 2500         |      | on            | 125          | 125           | 5           | 120         | 1           | *               | 5           | 0         | 2500      | 600          |  |  |
| 4-20mA / 0-40bar Pressure probe  |  | 4.20 | 0            | 0            | 4000         |      | on            | 200          | 200           | 5           | 120         | 1           | *               | 5           | 0         | 4000      | 600          |  |  |
| QBE2002 / 0-25bar Pressure probe |  | 0.10 | 0            | 0            | 2500         |      | On            | 125          | 125           | 5           | 120         | 1           | *               | 5           | 0         | 2500      | 600          |  |  |

Note:

(\*) Str.t - Servomotor stroke time

SQL33; STM30; SQM10; SQM40; SQM50; SQM54 = 30 (Seconds)

STA12B3.41; SQN30.251; SQN72.4A4A20 = 12 (Seconds)

**(\*\*) Out 4 ... on Display led °4 must be switched on, otherwise change the io4.F parameter value from "on" to "out4", confirm the value, quit the configuration mode then change again the io4.F parameter value from "out4" to "on".**

(\*\*\*) Factory settings. These values must be adapted to machine conditions

N.B. For pressure probe, SP, SPHL, SPLL parameters values are expressed in Kpa (1 bar = 100 Kpa).



## CONFIGURATION

### How to access configuration level

The configuration parameters are collected in various groups. Every group defines all parameters related with a specific function (e.g.: control, alarms, output functions).

1. Push the  button for more than 5 seconds. The upper display will show PASS while the lower display will show 0.
2. Using  and  buttons set the programmed password.  
According to the entered password, it is possible to see a part of the parameters listed in the "configuration parameters" section.
  - a. Enter "30" as password to view all the configuration parameters
  - b. Enter "20" as password to view the parameters of the "limited access level". At this point, only the parameters with attribute **Liv = A** or **Liv = O** will be editable.
  - c. Leave the password blank to edit "user level" parameters, that are identified by attribute **Liv = O**
3. Push the  button. If the password is correct the display will show the acronym of the first parameter group preceded by the symbol: . In other words the upper display will show:  inP (group of the **Input parameters**).

The instrument is in configuration mode. To press  for more than 5 seconds, the instrument will return to the "standard display".

### Keyboard functions during parameter changing:

| Operator Mode                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                          | When the upper display is showing a group and the lower display is blank, this key allows to enter in the selected group. When the upper display is showing a parameter and the lower display is showing its value, this key allows to store the selected value for the current parameter and access the next parameter within the same group. |
|                                                                                         | Allows to increase the value of the selected parameter.                                                                                                                                                                                                                                                                                        |
|                                                                                        | Allows to decrease the value of the selected parameter.                                                                                                                                                                                                                                                                                        |
|                                                                                        | Short presses allow you to exit the current group of parameters and select a new group. A long press terminates the configuration procedure (the instrument returns to the normal display).                                                                                                                                                    |
|  +  | These two keys allow to return to the previous group. Proceed as follows:<br>Push the  button and maintaining the pressure, then push the  ; release both the buttons. |

### Configuration Parameters

| inP GROUP - input configuration |    |       |                                                                                                                       |                                                                                                                                                   |                      |
|---------------------------------|----|-------|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| Liv                             | N° | Param | Description                                                                                                           | Values                                                                                                                                            | Default              |
| A                               | 1  | SEnS  | Input type                                                                                                            | Pt1 = RTD Pt100<br>Pt10 = RTD Pt1000<br>0.20 = 0..20mA<br>4.20 = 4..20mA Pressure probe<br>0.10 = 0..10V<br>2.10 = 2..10V<br>crAL= Thermocouple K | Depends on the probe |
| A                               | 2  | dp    | Decimal point position                                                                                                | 0... 3                                                                                                                                            | See page 7           |
| A                               | 3  | SSc   | Initial scale read-out for linear inputs (available only if SEnS parameter is not equal to Pt1, Pt10, crAL values)    | -1999... 9999                                                                                                                                     | 0                    |
| C                               | 4  | FSc   | Full scale read-out for linear input inputs (available only if SEnS parameter is not equal to Pt1, Pt10, crAL values) | -1999... 9999                                                                                                                                     | Depends on the probe |
| C                               | 5  | unit  | Unit of measure (present only in the case of temperature probe)                                                       | °C/°F                                                                                                                                             | °C                   |
| C                               | 6  | Fil   | Digital filter on the measured value                                                                                  | 0 (= OFF)... 20.0 s                                                                                                                               | 1.0                  |
| C                               | 7  | inE   | Selection of the Sensor Out of Range type that will enable the safety output value                                    | or = Over range<br>ou = Under range<br>our = over e under range                                                                                   | or                   |

|   |    |       |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |    |
|---|----|-------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| C | 8  | oPE   | Safety output value                            | -100... 100                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0  |
| C | 9  | io4.F | I/O4 function selection                        | on = Out4 will be ever ON (used as a transmitter power supply) ,out4 = Uscita 4 (Used as digital output 4), dG2c = Digital input 2 for contact closure, dG2U = Digital input 2 driven by 12... 24 VDC                                                                                                                                                                                                                                                                                                                                                                                                          | on |
| C | 10 | diF1  | Digital input 1 function                       | oFF = Not used,<br>1 = Alarm reset,<br>2 = Alarm acknowledge (ACK),<br>3 = Hold of the measured value,<br>4 = Stand by mode,<br>5 = Manual mode,<br>6 = HEAt with SP1 and CoOL with SP2,<br>7 = Timer RUN/Hold/Reset,<br>8 = Timer Run,<br>9 = Timer Reset,<br>10 = Timer Run/Hold,<br>11 = Timer Run/Reset,<br>12 = Timer Run/Reset with lock,<br>13 = Program Start,<br>14 = Program Reset,<br>15 = Program Hold,<br>16 = Program Run/Hold,<br>17 = Program Run/Reset,<br>18 = Sequential SP selection,<br>19 = SP1 - SP2 selection,<br>20 = SP1... SP4 binary selection,<br>21 = Digital inputs in parallel | 19 |
| C | 12 | di.A  | Digital Inputs Action (DI2 only if configured) | 0 = DI1 direct action, DI2 direct action<br>1 = DI1 reverse action, DI2 direct action<br>2 = DI1 direct action, DI2 reverse action<br>3 = DI1 reverse action, DI2 reverse action                                                                                                                                                                                                                                                                                                                                                                                                                               | 0  |

**Out GROUP- Output parameters**

| Liv | N° | Param | Description                                      | Values                                                                                                               | Default |
|-----|----|-------|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|---------|
| C   | 14 | o1F   | Out 1 function                                   | AL = Alarm output                                                                                                    | AL      |
| C   | 15 | o1AL  | Initial scale value of the analog retransmission | -1999 ... Ao1H                                                                                                       | 1       |
| C   | 18 | o1Ac  | Out 1 action                                     | dir = Direct action<br>rEU = Reverse action<br>dir.r = Direct with reversed LED<br>ReU.r = Reverse with reversed LED | rEU.r   |
| C   | 19 | o2F   | Out 2 function                                   | H.rEG = Heating output                                                                                               | H.rEG   |
| C   | 21 | o2Ac  | Out 2 action                                     | dir = Direct action<br>rEU = Reverse action<br>dir.r = Direct with reversed LED<br>ReU.r = Reverse with reversed LED | dir     |
| C   | 22 | o3F   | Out 3 function                                   | H.rEG = Heating output                                                                                               | H.rEG   |
| C   | 24 | o3Ac  | Out 3 action                                     | dir = Direct action<br>rEU = Reverse action<br>dir.r = Direct with reversed LED<br>ReU.r = Reverse with reversed LED | dir     |

**AL1 GROUP - Alarm 1 parameters**

| Liv | N° | Param | Descrizione      | Values                                                                                                                                                                            | Default |
|-----|----|-------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 28 | AL1t  | Tipo allarme AL1 | nonE = Alarm not used<br>LoAb = Absolute low alarm<br>HiAb = Absolute high alarm<br>LHAo = Windows alarm in alarm outside the windows<br>LHAI = Windows alarm in alarm inside the | HidE    |

|   |    |      |                                                                                                                         |                                                                                                                                                                                                                                  |            |
|---|----|------|-------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
|   |    |      |                                                                                                                         | windows<br>SE.br = Sensor Break<br>LoDE = Deviation low alarm (relative)<br>HiDE = Deviation high alarm (relative)<br>LHdo = Relative band alarm in alarm out of the band<br>LHdi = Relative band alarm in alarm inside the band |            |
| C | 29 | Ab1  | Alarm 1 function                                                                                                        | 0... 15<br>+1 = Not active at power up<br>+2 = Latched alarm (manual reset)<br>+4 = Acknowledgeable alarm<br>+8 = Relative alarm not active at set point change                                                                  | 0          |
| C | 30 | AL1L | -- For High and low alarms, it is the low limit of the AL1 threshold;<br>-- For band alarm, it is low alarm threshold   | -1999... AL1H (E.U.)                                                                                                                                                                                                             | -199.9     |
| C | 31 | AL1H | -- For High and low alarms, it is the high limit of the AL1 threshold;<br>-- For band alarm, it is high alarm threshold | AL1L... 9999 (E.U.)                                                                                                                                                                                                              | 999.9      |
| O | 32 | AL1  | AL1 threshold                                                                                                           | AL1L... AL1H (E.U.)                                                                                                                                                                                                              | See page 7 |
| O | 33 | HAL1 | AL1 hysteresis                                                                                                          | 1... 9999 (E.U.)                                                                                                                                                                                                                 | See page 7 |
| C | 34 | AL1d | AL1 delay                                                                                                               | 0 (oFF)... 9999 (s)                                                                                                                                                                                                              | oFF        |
| C | 35 | AL1o | Alarm 1 enabling during Stand-by mode and out of range conditions                                                       | 0 = Alarm 1 disabled during Stand by and out of range<br>1 = Alarm 1 enabled in stand by mode<br>2 = Alarm 1 enabled in out of range condition<br>3 = Alarm 1 enabled in stand by mode and in overrange condition                | 1          |

**GRUPPO AL2 - parametri allarme 2**

| Liv | N° | Param | Description                                                       | Values                                                                                                                                                                                                                                                                                                                                                                                                             | Default |
|-----|----|-------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 36 | AL2t  | Alarm 2 type                                                      | nonE = Alarm not used<br>LoAb = Absolute low alarm<br>HiAb = Absolute high alarm<br>LHAo = Windows alarm in alarm outside the windows<br>LHAi = Windows alarm in alarm inside the windows<br>SE.br = Sensor Break<br>LoDE = Deviation low alarm (relative)<br>HiDE = Deviation high alarm (relative)<br>LHdo = Relative band alarm in alarm out of the band<br>LHdi = Relative band alarm in alarm inside the band | SE.br   |
| C   | 37 | Ab2   | Alarm 2 function                                                  | 0... 15<br>+1 = Not active at power up<br>+2 = Latched alarm (manual reset)<br>+4 = Acknowledgeable alarm<br>+8 = Relative alarm not active at set point change                                                                                                                                                                                                                                                    | 0       |
| C   | 42 | AL2d  | AL2 hysteresis                                                    | 0 (oFF)... 9999 (s)                                                                                                                                                                                                                                                                                                                                                                                                | oFF     |
| C   | 43 | AL2o  | Alarm 2 enabling during Stand-by mode and out of range conditions | 0 = Alarm 2 disabled during Stand by and out of range<br>1 = Alarm 2 enabled in stand by mode<br>2 = Alarm 2 enabled in out of range condition<br>3 = Alarm 2 enabled in stand by mode and in overrange condition                                                                                                                                                                                                  | 0       |

| AL3 Group - alarm 3 parameters |    |       |              |                                                                                                                                                                                                                                                                                                                                                                                                                    |         |
|--------------------------------|----|-------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Liv                            | N° | Param | Description  | Values                                                                                                                                                                                                                                                                                                                                                                                                             | Default |
|                                | 44 | AL3t  | Alarm 3 type | nonE = Alarm not used<br>LoAb = Absolute low alarm<br>HiAb = Absolute high alarm<br>LHAo = Windows alarm in alarm outside the windows<br>LHAI = Windows alarm in alarm inside the windows<br>SE.br = Sensor Break<br>LoDE = Deviation low alarm (relative)<br>HiDE = Deviation high alarm (relative)<br>LHdo = Relative band alarm in alarm out of the band<br>LHdi = Relative band alarm in alarm inside the band | nonE    |

| LbA Group - Loop break alarm |    |       |             |                       |         |
|------------------------------|----|-------|-------------|-----------------------|---------|
| Liv                          | N° | Param | Descrizione | Values                | Default |
| C                            | 52 | LbAt  | LBA time    | Da 0 (oFF) a 9999 (s) | oFF     |

| rEG Group - Control parameters |    |       |                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |         |
|--------------------------------|----|-------|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Liv                            | N° | Param | Description                    | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Default |
| C                              | 56 | cont  | Control type                   | Pid = PID (heat and/or)<br>On.FA = ON/OFF asymmetric hysteresis<br>On.FS = ON/OFF symmetric hysteresis<br>nr = Heat/Cool ON/OFF control with neutral zone<br>3Pt = Servomotor control (available only when Output 2 and Output 3 have been ordered as "M")                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 3pt     |
| C                              | 57 | Auto  | Autotuning selection           | -4 = Oscillating auto-tune with automatic restart at power up and after all point change<br>-3 = Oscillating auto-tune with manual start<br>-2 = Oscillating -tune with auto-matic start at the first power up only<br>-1 = Oscillating auto-tune with auto-matic restart at every power up<br>0 = Not used<br>1 = Fast auto tuning with automatic restart at every power up<br>2 = Fast auto-tune with automatic start the first power up only<br>3 = FAST auto-tune with manual start<br>4 = FAST auto-tune with automatic restart at power up and after set point change<br>5 = Evo-tune with automatic restart at every power up<br>6 = Evo-tune with automatic start the first power up only<br>7 = Evo-tune with manual start<br>8 = Evo-tune with automatic restart at power up and after a set point change | 7       |
| C                              | 58 | tunE  | Manual start of the Autotuning | oFF = Not active<br>on = Active                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | oFF     |

|   |    |       |                                  |                                                                                                            |            |
|---|----|-------|----------------------------------|------------------------------------------------------------------------------------------------------------|------------|
| C | 59 | SELF  | Self tuning enabling             | no = The instrument does not perform the self-tuning<br>YES = The instrument is performing the self-tuning | No         |
| A | 62 | Pb    | Proportional band                | 1... 9999 (E.U.)                                                                                           | See page 7 |
| A | 63 | ti    | Integral time                    | 0 (oFF) ... 9999 (s)                                                                                       | See page 7 |
| A | 64 | td    | Derivative time                  | 0 (oFF) ... 9999 (s)                                                                                       | See page 7 |
| C | 65 | Fuoc  | Fuzzy overshoot control          | 0.00... 2.00                                                                                               | 1          |
| C | 69 | rS    | Manual reset (Integral pre-load) | -100.0... +100.0 (%)                                                                                       | 0.0        |
| A | 70 | Str.t | Servomotor stroke time           | 5...1000 seconds                                                                                           | See page 7 |
| A | 71 | db.S  | Servomotor dead band             | 0...100%                                                                                                   | 5          |
| C | 72 | od    | Delay at power up                | 0.00 (oFF) ... 99.59 (hh.mm)                                                                               | oFF        |

**SP Group - Set point parameters**

| Liv | N° | Param | Description                                            | Values                                                                                                                                                                                                                                                                                   | Default    |
|-----|----|-------|--------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| C   | 76 | nSP   | Number of used set points                              | 1... 4                                                                                                                                                                                                                                                                                   | 2          |
| A   | 77 | SPLL  | Minimum set point value                                | -1999 ... SPHL                                                                                                                                                                                                                                                                           | See page 7 |
| A   | 78 | SPHL  | Maximum set point value                                | SPLL ... 9999                                                                                                                                                                                                                                                                            | See page 7 |
| O   | 79 | SP    | Set point 1                                            | SPLL ... SPLH                                                                                                                                                                                                                                                                            | See page 7 |
| C   | 80 | SP 2  | Set point 2                                            | SPLL ... SPLH                                                                                                                                                                                                                                                                            | 60         |
|     | 83 | A.SP  | Selection of the active set point                      | "SP" ... "nSP"                                                                                                                                                                                                                                                                           | SP         |
| C   | 84 | SP.rt | Remote set point type                                  | RSP = The value coming from serial link is used as remote set point<br>trin = The value will be added to the local set point selected by A.SP and the sum becomes the operative set point<br>PERc = The value will be scaled on the input range and this value will be used as remote SP | trin       |
| C   | 85 | SPLr  | Local/remote set point selection                       | Loc = Local<br>rEn = Remote                                                                                                                                                                                                                                                              | Loc        |
| C   | 86 | SP.u  | Rate of rise for POSITIVE set point change (ramp UP)   | 0.01... 99.99 (inF) Eng. units per minute                                                                                                                                                                                                                                                | inF        |
| C   | 87 | SP.d  | Rate of rise for NEGATIVE set point change (ramp DOWN) | 0.01... 99.99 (inF) Eng. units per minute                                                                                                                                                                                                                                                | inF        |

**PAn Group - Operator HMI**

| Liv | N°  | Param | Description                                        | Values                                                                                                                                                                                                                                                        | Default |
|-----|-----|-------|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 118 | PAS2  | Level 2 password (limited access level)            | oFF (Level 2 not protected by password)<br>1... 200                                                                                                                                                                                                           | 20      |
| C   | 119 | PAS3  | Level 3 password (complete configuration level)    | 3... 300                                                                                                                                                                                                                                                      | 30      |
| C   | 120 | PAS4  | Password livello (livello configurazione a codice) | 201... 400                                                                                                                                                                                                                                                    | 300     |
| C   | 121 | uSrb  | button function during RUN TIME                    | nonE = No function<br>tunE = Auto-tune/self-tune enabling. A single press (longer than 1 second) starts the auto-tune<br>oPLo = Manual mode. The first pressure puts the instrument in manual mode (OPLO) while a second one puts the instrument in Auto mode | tunE    |

|   |     |       |                               |                                                                                                                                                                                                                                                                                                                                               |      |
|---|-----|-------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
|   |     |       |                               | AAC = Alarm reset<br>ASi = Alarm acknowledge<br>chSP = Sequential set point selection<br>St.by = Stand by mode. The first press puts the instrument in stand by mode while a second one puts the instrument in Auto mode.<br>Str.t = Timer run/hold/reset<br>P.run = Program run<br>P.rES = Program reset<br>P.r.H.r = Program run/hold/reset |      |
| C | 122 | diSP  | Display management            | Spo = Operative set point                                                                                                                                                                                                                                                                                                                     | SPo  |
| C | 123 | di.cL | Display colour                | 0 = The display colour is used to show the actual deviation (PV - SP)<br>1 = Display red (fix)<br>2 = Display green (fix)<br>3 = Display orange (fix)                                                                                                                                                                                         | 2    |
|   | 125 | diS.t | Display Timeout               | -- oFF (display always ON)<br>-- 0.1... 99.59 (mm.ss)                                                                                                                                                                                                                                                                                         | oFF  |
| C | 126 | fiLd  | Filter on the displayed value | -- oFF (filter disabled)<br>-- From 0.0 (oFF) to 20.0 (E.U.)                                                                                                                                                                                                                                                                                  | oFF  |
| C | 128 | dSPu  | Instrument status at power ON | AS.Pr = Starts in the same way it was prior to the power down<br>Auto = Starts in Auto mode<br>oP.0 = Starts in manual mode with a power output equal to zero<br>St.bY = Starts in stand-by mode                                                                                                                                              | Auto |
| C | 129 | oPr.E | Operative modes enabling      | ALL = All modes will be selectable by the next parameter<br>Au.oP = Auto and manual (OPLO) mode only will be selectable by the next parameter<br>Au.Sb = Auto and Stand-by modes only will be selectable by the next parameter                                                                                                                | ALL  |
| C | 130 | oPEr  | Operative mode selection      | If oPr.E = ALL: - Auto = Auto mode<br>- oPLo = Manual mode<br>- St.bY = Stand by mode<br>If oPr.E = Au.oP: - Auto = Auto mode<br>- oPLo = Manual mode<br>If oPr.E = Au.Sb: - Auto = Auto mode<br>- St.bY = Stand by mode                                                                                                                      | Auto |

**SEr Group - Serial link parameter**

| Liv | N°  | Param | Description                                         | Values                                                                                                                                                                                                                   | Default |
|-----|-----|-------|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 131 | Add   | Instrument address                                  | -- oFF<br>-- 1... 254                                                                                                                                                                                                    | 1       |
| C   | 132 | bAud  | baud rate                                           | 1200 = 1200 baud<br>2400 = 2400 baud<br>9600 = 9600 baud<br>19.2 = 19200 baud<br>38.4 = 38400 baud                                                                                                                       | 9600    |
| C   | 133 | trSP  | Selection of the value to be retransmitted (Master) | nonE = Retransmission not used (the instrument is a slave)<br>rSP = The instrument becomes a Master and retransmits the operative set point<br>PErc = The instrument become a Master and it retransmits the power output | nonE    |

| con Group - Consumption parameters |     |       |                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |         |
|------------------------------------|-----|-------|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Liv                                | N°  | Param | Description                  | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Default |
| C                                  | 134 | Co.tY | Count type                   | oFF = Not used<br>1 = Instantaneous power (kW)<br>2 = Power consumption (kW/h)<br>3 = Energy used during program execution. This measure starts from zero when a program runs end stops at the end of the program. A new program execution will reset the value<br>4 = Total worked days: number of hours the instrument is turned ON divided by 24.<br>5 = Total worked hours: number of hours the instrument is turned ON.<br>6 = Total worked days with threshold: number of hours the instrument is turned ON divided by 24, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job.<br>7 = Total worked hours with threshold: number of hours the instrument is turned ON, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job.<br>8 = Totalizer of control relay worked days: number of hours the control relay has been in ON condition, divided by 24.<br>9 = Totalizer of control relay worked hours: number of hours the control relay has been in ON condition.<br>10 = Totalizer of control relay worked days with threshold: number of hours the control relay has been in ON condition divided by 24, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job.<br>11 = Totalizer of control relay worked hours with threshold: number of hours the control relay has been in ON condition, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job. | oFF     |
| C                                  | 138 | t.Job | Worked time (not resettable) | 0... 9999 days                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0       |

| cAL Group - User calibration group |     |       |                    |                                                |         |
|------------------------------------|-----|-------|--------------------|------------------------------------------------|---------|
| Liv                                | N°  | Param | Description        | Values                                         | Default |
| C                                  | 139 | AL.P  | Adjust Low Point   | From -1999 to (AH.P - 10) in engineering units | 0       |
| C                                  | 140 | AL.o  | Adjust Low Offset  | -300... +300 (E.U.)                            | 0       |
| C                                  | 141 | AH.P  | Adjust High Point  | From (AL.P + 10) to 9999 engineering units     | 999.9   |
| C                                  | 142 | AH.o  | Adjust High Offset | -300... +300                                   | 0       |

## OPERATIVE MODES

When the instrument is powered, it starts immediately to work according to the parameters values loaded in its memory. The instrument behaviour and its performance are governed by the value of the stored parameters.

At power ON the instrument can start in one of the following mode depending on its configuration:

**Automatic Mode** In Automatic mode the instrument drives automatically the control output according to the parameter value set and the set point/measured value.

**Manual Mode (OPLO):** In Manual mode the the upper display shows the measured value while the lower display shows the power output The lower display shows the power output [preceded by H (for heating) or C (for cooling)], MAN is lit and the instrument allows you to set manually the control output power. No Automatic action will be made.

**Stand by Mode (St.bY):** In stand-by mode the instrument operates as an indicator. It will show on the upper display the measured value and on the lower display the set point alternately to the "St.bY" messages and forces the control outputs to zero.

We define all the above described conditions as "Standard Display".

As we have seen, it is always possible to modify the value assigned to a parameter independently from the operative modes selected.

 
## AUTOMATIC MODE

Keyboard function when the instrument is in Auto mode:

|                                                                                     | Modo Operatore                                                                                                                                                                |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Allows entry into parameter modification procedures                                                                                                                           |
|  | Allows you to start the "Direct set point modification" function (see below).                                                                                                 |
|  | Allows you to display the "additional informations" (see below).                                                                                                              |
|  | Performs the action programmed by [121] uSrb (  button function during RUN TIME) parameter |

### Additional information

This instrument is able to show you some additional informations that can help you to manage your system. The additional informations are related to how the instrument is programmed, hence in many cases, only part of this information is available.

1. When the instrument is showing the "standard display" push  button. The lower display will show H or c followed by a number. This value is the current power output applied to the process. The H show you that the action is a Heating action while the "c" show you that the action is a Cooling action
2. Push  button again. When the programmer is running the lower display will show the segment currently performed and the Event status as shown below:  
 where the first character can be r for a ramp or S for a soak, the next digit show the number of the segment (e.g. S3 means Soak number 3) and the twoless significant digits (LSD) show you the status of the two event (the LSD is the Event 2)..
3. Push  button again. When the programmer is running the lower display will show the theoretical remaining time to the end of the program preceded by a "P" letter:  

4. Push  button again. When the wattmeter function is running the lower display will show U followed by the measured energy..
5. Push  button. When the "Worked time count" is running the lower display will show "d" for days or "h" for hours followed by the measured time.
6. Push  button. The instrument returns to the "standard display".

Note: The additional information visualization is subject to a time out. If no button is pressed for more than 10 second the instrument comes automatically back to the Standard display..



**Direct set point modification**

This function allows to modify rapidly the set point value selected by [83] A.SP (selection of the active Set point) or to the set point of the segment group (of the programmer) currently in progress.

1. Push  button. The upper display shows the acronym of the selected set point (e.g. SP2) and the lower display will show its value.
2. By  and  buttons, assign to this parameter the desired value
3. Do not push any button for more than 5 second or push the  button. In both cases the instrument memorize the new value and come back to the “standard display”.

**Manual mode**

This operative mode allows you to deactivate automatic control and manually program the percentage power output to the process. When the instrument is in manual mode, the upper display shows the measured value while the lower display shows the power output [preceded by H (for heating action) or C (for cooling action)] The MAN LED is lit. When manual control is selected, the instrument will start to operate with the same power output as the last one supplied by automatic mode and can be modified using the  and  buttons.

In case of ON/OFF control, 0% corresponds to the deactivated output while any value different from 0 corresponds to the activated output. As in the case of visualization, the programmable values range from H100 (100% output power with reverse action) to C100 (100% output power with direct action).

**Notes:**

- During manual mode, the alarms are operative.
- If you set manual modes during program execution, the program will be frozen and it will restart when the instrument will come back to Auto mode.
- If you set manual modes during self-tune execution, the self- tune function will be aborted.
- During manual mode, all functions not related with the control (wattmeter, independent timer, “worked time”, etc) continue to operate normally..

**STAND-BY MODE**

This operative mode also deactivates the automatic control but forces the control output to zero. In this mode the instrument operates as an indicator. When the instrument is in stand by mode the upper display will show the measured value while the lower display will show alternately the set point and the message “St.bY”.

**Notes:**

- During stand by mode, the relative alarms are disabled while the absolute alarms are operative or not according to the ALxo (Alarm x enabling during Stand-by mode) parameter setting.
- If you set stand by mode during program execution, the program will be aborted.
- If you set stand by mode during self-tune execution, the self- tune function will be aborted.
- During stand by mode, all functions not related with the control (wattmeter, independent timer, “worked time”, etc) continue to operate normally.
- When the instrument is swapped from stand by to auto modes, the instrument will start automatically the alarm masking, the soft start functions and the auto-tune (if programmed).

**AUTOTUNE (EVOTUNE)**

Evotune is a fast and fully automatic procedure that can be started in any condition, regardless the deviation from SP. The controller selects automatically the best tune method and computes the optimum PID parameters. To activate Evotune press  button for 3 seconds.

## ERROR MESSAGES

The upper display shows the OVER-RANGE and UNDERRANGE conditions with the following indications:

Over-range: 

Under-range 

The sensor break will be signalled as an out of range: - - - -

Note: When an over-range or an under-range is detected, the alarms operate as in presence of the maximum or the minimum measurable value respectively.

To check the out of span Error condition, proceed as follows:

1. Check the input signal source and the connecting line.
2. Make sure that the input signal is in accordance with the instrument configuration. Otherwise, modify the input configuration.
3. If no error is detected, send the instrument to your supplier to be checked.

### List of possible errors

**ErAT** Fast Auto-tune cannot start. The measure value is too close to the set point. Push the button in order to delete the error message.

**ouLd** Overload on the out 4. The messages shows that a short circuit is present on the Out 4 when it is used as output or as a transmitter power supply. When the short circuit disappears the output restart to operate..

**NoAt** Auto-tune not finished within 12 hours.

**ErEP** Possible problem of the instrument memory. The messages disappears automatically. When the error continues, send the instrument to your supplier.

**RonE** Possible problem of the firmware memory. When this error is detected, send the instrument to your supplier.

**Errt** Possible problem of the calibration memory. When this error is detected, send the instrument to your supplier.

## FACTORY RESET

Sometime, e.g. when you re-configure an instrument previously used for other works or from other people or when you have made too many errors during configuration and you decided to re-configure the instrument, it is possible to restore the factory configuration. This action allows to put the instrument in a defined condition (the same it was at the first power ON).

The default data are those typical values loaded in the instrument prior to ship it from factory. To load the factory default parameter set, proceed as follows:


1. Press the  button for more than 5 seconds. The upper display will show PASS while the lower display shows 0;
2. Using  and  buttons set the value -481;
3. Push  button;
4. The instrument will turn OFF all LEDs for a few seconds, then the upper display will show dFLt (default) and then all LEDs are turned ON for 2 seconds. At this point the instrument restarts as for a new power ON.

The procedure is complete.


Note: The complete list of the default parameters is available in Chapter "Configuration".

# **KM3 Modulator**

## **USER MANUAL**

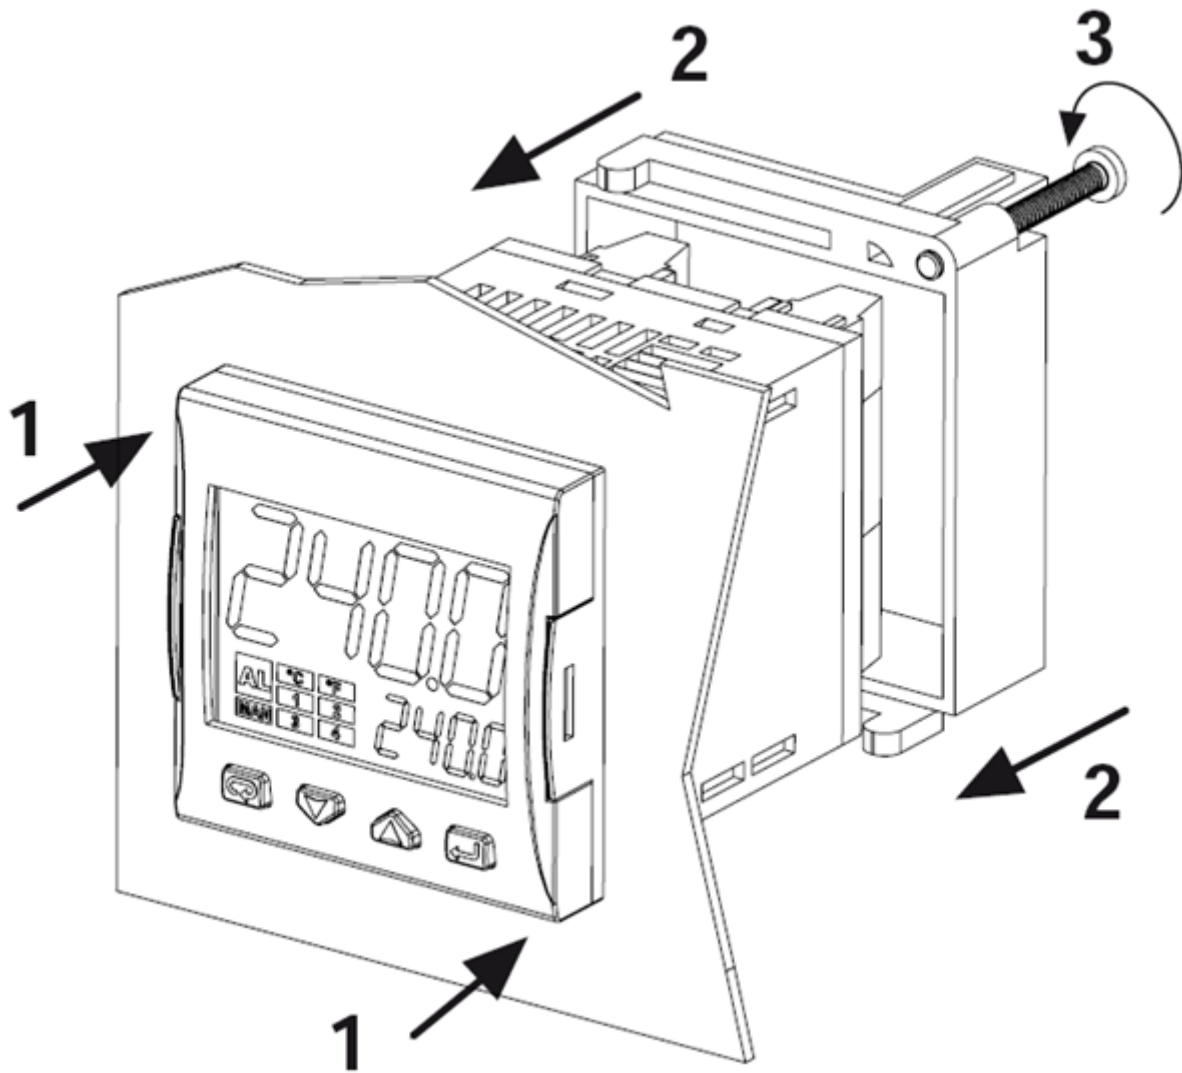
**MOUNTING**

## DISPLAY AND KEYS

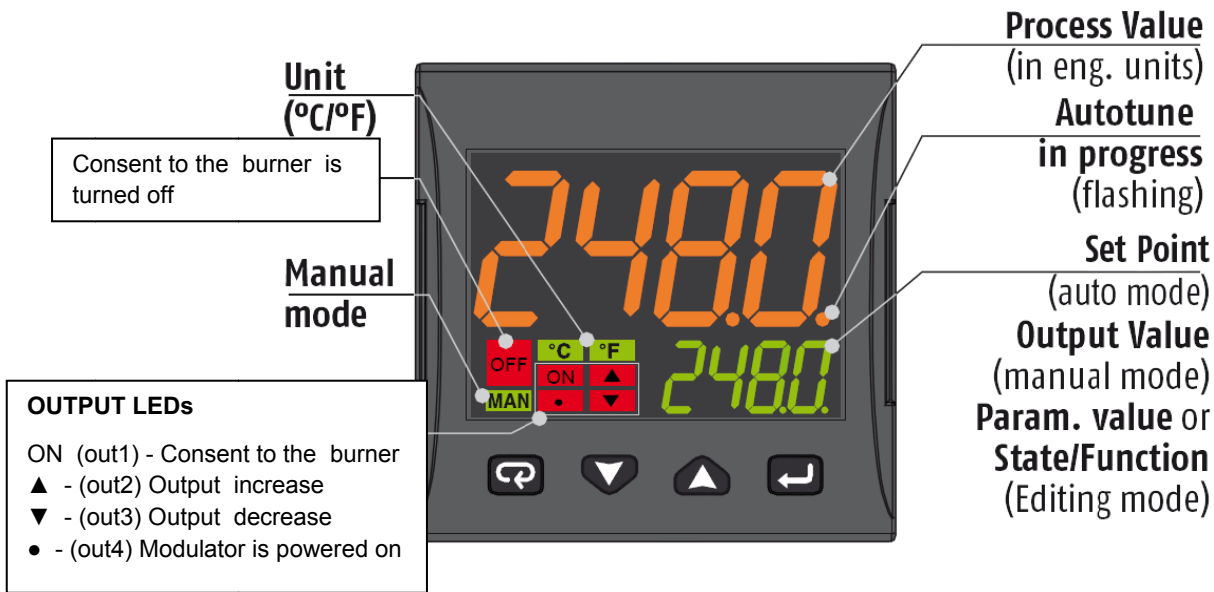

|                                                                                     | Operator Mode                                                                                        | Editing Mode                                                                   |
|-------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------|--------------------------------------------------------------------------------|
|   | Access to:<br>- Operator Commands (Timer, Setpoint selection ...)<br>- Parameters<br>- Configuration | Confirm and go to Next parameter                                               |
|  | Access to:<br>- Operator additional information (Output value, running time ...)                     | Increase the displayed value or select the next element of the parameters list |
|  | Access to:<br>- Set Point                                                                            | Decrease the displayed value or select the previous element                    |
|  | Programmable key:<br>Start the programmed function (Autotune, Auto/Man, Timer ...)                   | Exit from Operator commands/Parameter setting/Configuration                    |

## CONNECTIONS DIAGRAM

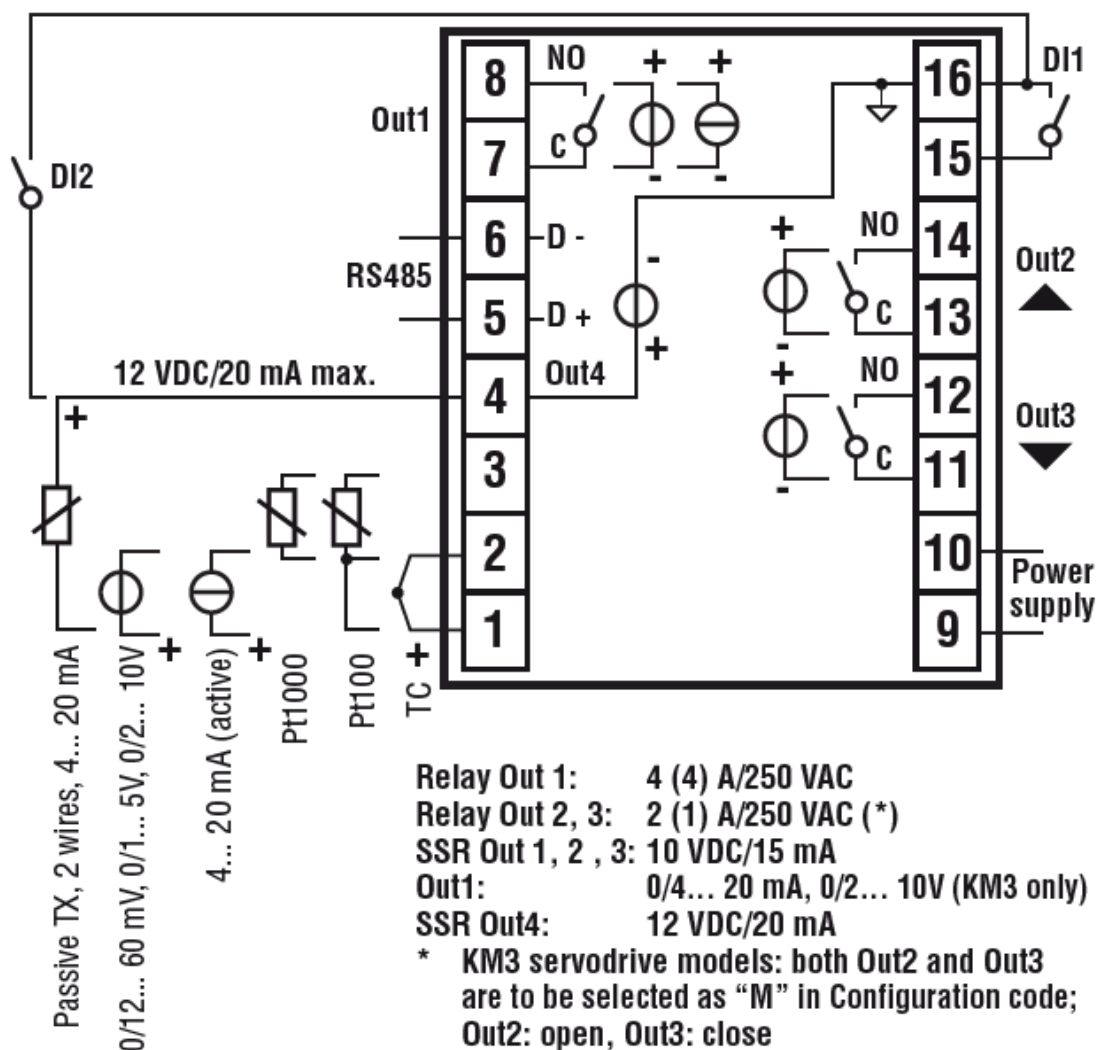

**Probe connection:**

- **PT1000/NTC/PTC**: between terminal 3 and 2
- **PT 100**: between terminal 3 and 2 with terminal 1
- **Passive pressure probe** 0/4-20 mA: between terminal 4 ( + ) e 1 ( - )  
Note: out4 must be activated ( IO4F must be setted to ON )
- **Powered pressure probe** 0/4-20 mA between terminal 4 (power supply), 2 ( negative ) e 1 (positive)  
Note: set IO4F to ON to activate Out4

**Power supply connection:**


- **Neutral wire:** terminal 9
- **Phase:** terminal 10 ( 100...240 Vac )
- Close terminals 15-16 to switch to the set point 2

**Output connection:**

- **Channel 1:** terminal 7 and 8 ( burner on – off )
- **Channel 2:** terminal 11 and 12 (servomotor opens)
- **Channel 3:** terminal 13 and 14 (servomotor closes)


## SETPOINT AND HYSTERESIS CONFIGURATION (SP, AL1, HAL1 parameters)

Push the  button to enter into the setpoint configuration:

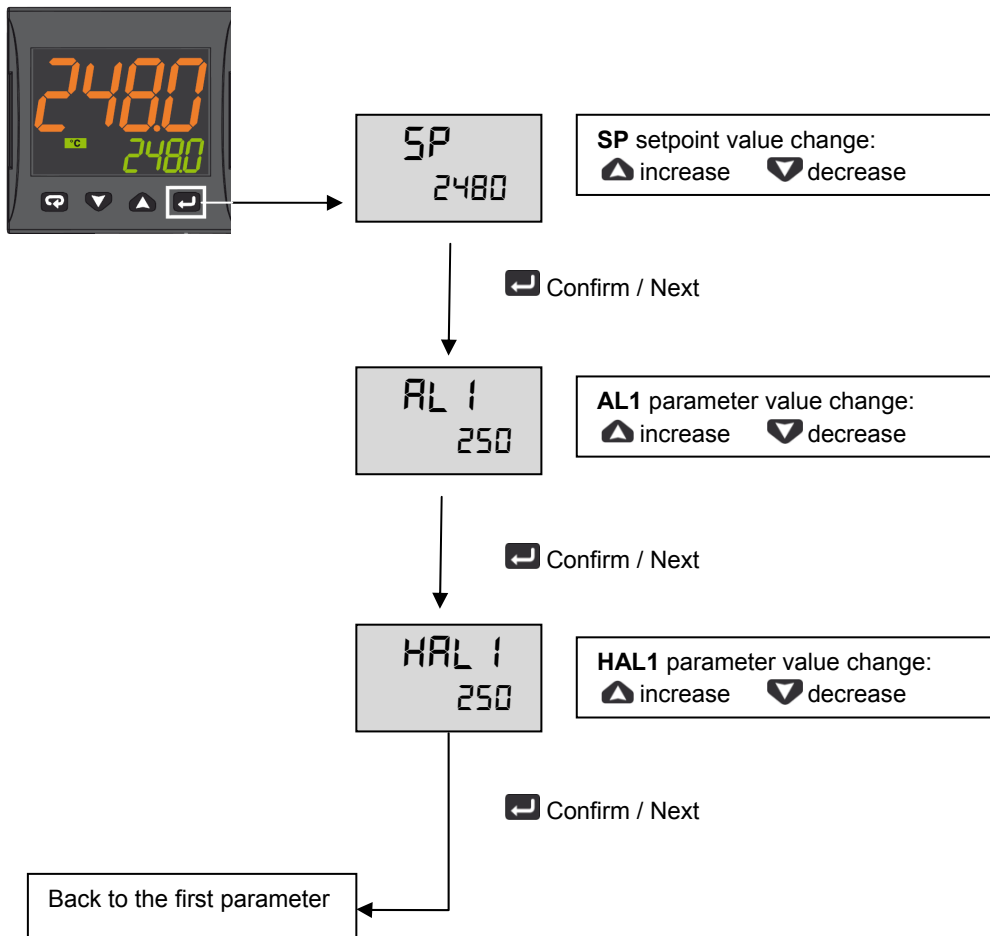


To return to normal mode, press the  key for 3 seconds or wait the 10s timeout

### Operation example

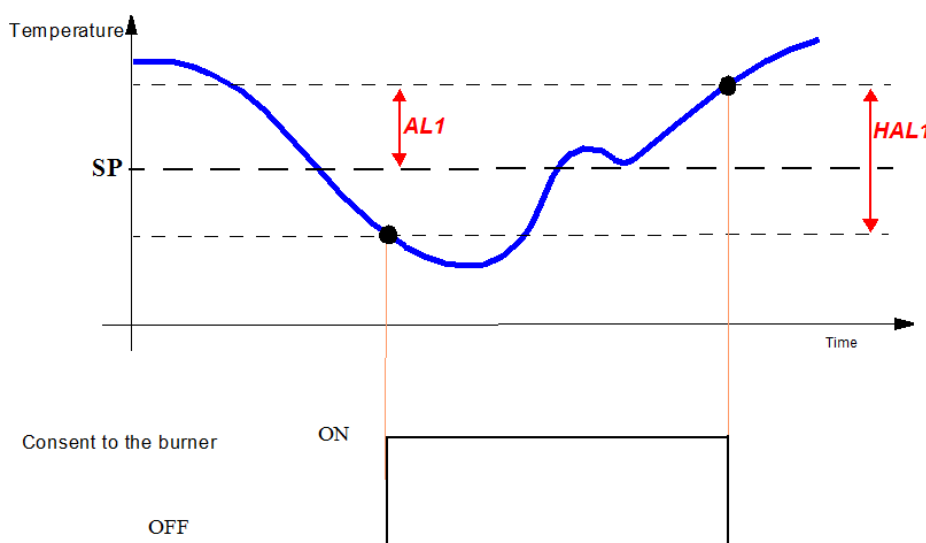

## LIMITED ACCESS LEVEL

Proceed as follows to change some parameters that are not visible in standard user mode:

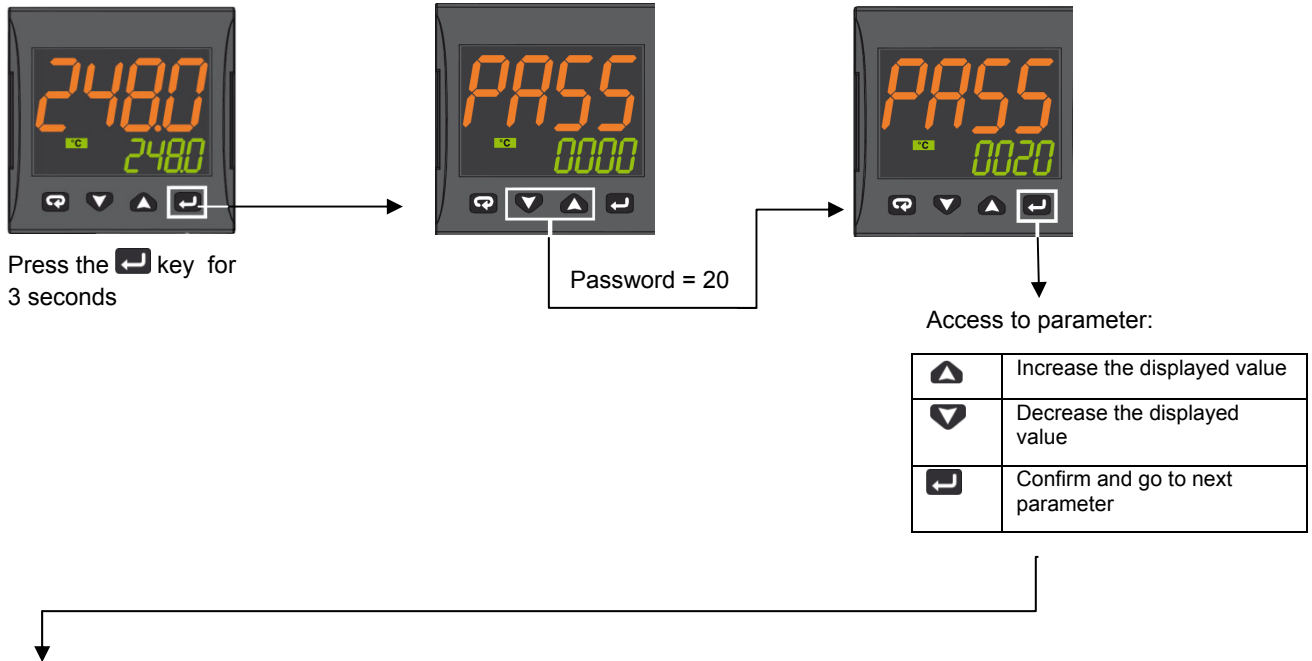

| Param | Description                       | Values                                                                                                                                            | Default              |
|-------|-----------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| SEnS  | Input type                        | Pt1 = RTD Pt100<br>Pt10 = RTD Pt1000<br>0.20 = 0..20mA<br>4.20 = 4..20mA Pressure probe<br>0.10 = 0..10V<br>2.10 = 2..10V<br>crAL= Thermocouple K | Depends on the probe |
| SP    | Set point 1                       | SPLL ... SPLH                                                                                                                                     | See page 7           |
| AL1   | AL1 threshold                     | AL1L... AL1H (E.U.)                                                                                                                               |                      |
| HAL1  | AL1 hysteresis                    | 1... 9999 (E.U.)                                                                                                                                  |                      |
| Pb    | Proportional band                 | 1... 9999 (E.U.)                                                                                                                                  |                      |
| ti    | Integral time                     | 0 (oFF) ... 9999 (s)                                                                                                                              |                      |
| td    | Derivative time                   | 0 (oFF) ... 9999 (s)                                                                                                                              |                      |
| Str.t | Servomotor stroke time            | 5...1000 seconds                                                                                                                                  |                      |
| db.S  | Servomotor dead band              | 0...100%                                                                                                                                          |                      |
| SPLL  | Minimum set point value           | -1999 ... SPLH                                                                                                                                    |                      |
| SPHL  | Maximum set point value           | SPLL ... 9999                                                                                                                                     |                      |
| dp    | Decimal point position            | 0... 3                                                                                                                                            |                      |
| SP 2  | Set point 2                       | SPLL...SPLH                                                                                                                                       | 60                   |
| A.SP  | Selection of the active set point | "SP" ... "nSP"                                                                                                                                    | SP                   |

To exit the parameter setting procedure press the key (for 3 s) or wait until the timeout expiration (about 30 seconds)



### Probe parameters configuration MODULATORE ASCON KM3

| Parameter Group                  |  | inP  |              |              |              |      |               | AL1          |               | rEG         |             |             |                 |             | SP        |           |              |  |
|----------------------------------|--|------|--------------|--------------|--------------|------|---------------|--------------|---------------|-------------|-------------|-------------|-----------------|-------------|-----------|-----------|--------------|--|
| Parameter                        |  | Sens | dp           | SSC          | FSc          | unit | IO4.F<br>(**) | AL1<br>(***) | HAL1<br>(***) | Pb<br>(***) | ti<br>(***) | td<br>(***) | Str.t           | db.S        | SPLL      | SPHL      | SP<br>(***)  |  |
| Probes                           |  |      | Dec<br>Point | Scale<br>Min | Scale<br>Max |      |               | Off          | On            | p           | i           | d           | servo<br>time s | Band<br>Mo. | SP<br>Min | SP<br>Max | Set<br>point |  |
| Pt1000 (130°C max)               |  | Pt10 | 1            |              |              | °C   | on            | 5            | 10            | 10          | 350         | 1           | *               | 5           | 30        | 95        | 80           |  |
| Pt1000 ( 350°C max)              |  | PT10 | 1            |              |              | °C   | on            | 10           | 10            | 10          | 350         | 1           | *               | 5           | 0         | 350       | 80           |  |
| Pt100 (130°C max)                |  | PT1  | 1            |              |              | °C   | on            | 5            | 10            | 10          | 350         | 1           | *               | 5           | 0         | 95        | 80           |  |
| Pt100 (350°C max)                |  | Pt1  | 1            |              |              | °C   | on            | 10           | 10            | 10          | 350         | 1           | *               | 5           | 0         | 350       | 80           |  |
| Pt100 (0÷100°C 4÷20mA)           |  | 4.20 | 1            | 0            | 100          |      | on            | 5            | 10            | 10          | 350         | 1           | *               | 5           | 0         | 95        | 80           |  |
| Thermocouple K (1200°C max)      |  | crAL | 0            |              |              | °C   | on            | 20           | 25            | 10          | 350         | 1           | *               | 5           | 0         | 1200      | 80           |  |
| Thermocouple J (1000°C max)      |  | J    | 0            |              |              | °C   | on            | 20           | 25            | 10          | 350         | 1           | *               | 5           | 0         | 1000      | 80           |  |
| 4-20mA / 0-1,6bar Pressure probe |  | 4.20 | 0            | 0            | 160          |      | on            | 20           | 20            | 5           | 120         | 1           | *               | 5           | 0         | 160       | 100          |  |
| 4-20mA / 0-10bar Pressure probe  |  | 4.20 | 0            | 0            | 1000         |      | on            | 50           | 50            | 5           | 120         | 1           | *               | 5           | 0         | 1000      | 600          |  |
| 4-20mA / 0-16bar Pressure probe  |  | 4.20 | 0            | 0            | 1600         |      | on            | 80           | 80            | 5           | 120         | 1           | *               | 5           | 0         | 1600      | 600          |  |
| 4-20mA / 0-25bar Pressure probe  |  | 4.20 | 0            | 0            | 2500         |      | on            | 125          | 125           | 5           | 120         | 1           | *               | 5           | 0         | 2500      | 600          |  |
| 4-20mA / 0-40bar Pressure probe  |  | 4.20 | 0            | 0            | 4000         |      | on            | 200          | 200           | 5           | 120         | 1           | *               | 5           | 0         | 4000      | 600          |  |
| QBE2002 / 0-25bar Pressure probe |  | 0.10 | 0            | 0            | 2500         |      | On            | 125          | 125           | 5           | 120         | 1           | *               | 5           | 0         | 2500      | 600          |  |

Note:

(\*) Str.t - Servomotor stroke time

SQL33; STM30; SQM10; SQM40; SQM50; SQM54 = 30 (Seconds)

STA12B3.41; SQN30.251; SQN72.4A4A20 = 12 (Seconds)

**(\*\*) Out 4 ... on Display led °4 must be switched on, otherwise change the io4.F parameter value from "on" to "out4", confirm the value, quit the configuration mode then change again the io4.F parameter value from "out4" to "on".**

(\*\*\*) Factory settings. These values must be adapted to machine conditions

N.B. For pressure probe, SP, SPHL, SPLL parameters values are expressed in Kpa (1 bar = 100 Kpa).

## CONFIGURATION

### How to access configuration level

The configuration parameters are collected in various groups. Every group defines all parameters related with a specific function (e.g.: control, alarms, output functions).

1. Push the  button for more than 5 seconds. The upper display will show PASS while the lower display will show 0.
2. Using  and  buttons set the programmed password.  
According to the entered password, it is possible to see a part of the parameters listed in the "configuration parameters" section.
  - a. Enter "30" as password to view all the configuration parameters
  - b. Enter "20" as password to view the parameters of the "limited access level". At this point, only the parameters with attribute **Liv = A** or **Liv = O** will be editable.
  - c. Leave the password blank to edit "user level" parameters, that are identified by attribute **Liv = O**
3. Push the  button. If the password is correct the display will show the acronym of the first parameter group preceded by the symbol: . In other words the upper display will show:  inP (group of the **Input parameters**).

The instrument is in configuration mode. To press  for more than 5 seconds, the instrument will return to the "standard display".

### Keyboard functions during parameter changing:

| Operator Mode                                                                                                                                                             |                                                                                                                                                                                                                                                                                                                                                |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                                                                                          | When the upper display is showing a group and the lower display is blank, this key allows to enter in the selected group. When the upper display is showing a parameter and the lower display is showing its value, this key allows to store the selected value for the current parameter and access the next parameter within the same group. |
|                                                                                         | Allows to increase the value of the selected parameter.                                                                                                                                                                                                                                                                                        |
|                                                                                        | Allows to decrease the value of the selected parameter.                                                                                                                                                                                                                                                                                        |
|                                                                                        | Short presses allow you to exit the current group of parameters and select a new group. A long press terminates the configuration procedure (the instrument returns to the normal display).                                                                                                                                                    |
|  +  | These two keys allow to return to the previous group. Proceed as follows:<br>Push the  button and maintaining the pressure, then push the  ; release both the buttons. |

### Configuration Parameters

| inP GROUP - input configuration |    |       |                                                                                                                       |                                                                                                                                                   |                      |
|---------------------------------|----|-------|-----------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------|----------------------|
| Liv                             | N° | Param | Description                                                                                                           | Values                                                                                                                                            | Default              |
| A                               | 1  | SEnS  | Input type                                                                                                            | Pt1 = RTD Pt100<br>Pt10 = RTD Pt1000<br>0.20 = 0..20mA<br>4.20 = 4..20mA Pressure probe<br>0.10 = 0..10V<br>2.10 = 2..10V<br>crAL= Thermocouple K | Depends on the probe |
| A                               | 2  | dp    | Decimal point position                                                                                                | 0... 3                                                                                                                                            | See page 7           |
| A                               | 3  | SSc   | Initial scale read-out for linear inputs (available only if SEnS parameter is not equal to Pt1, Pt10, crAL values)    | -1999... 9999                                                                                                                                     | 0                    |
| C                               | 4  | FSc   | Full scale read-out for linear input inputs (available only if SEnS parameter is not equal to Pt1, Pt10, crAL values) | -1999... 9999                                                                                                                                     | Depends on the probe |
| C                               | 5  | unit  | Unit of measure (present only in the case of temperature probe)                                                       | °C/°F                                                                                                                                             | °C                   |
| C                               | 6  | Fil   | Digital filter on the measured value                                                                                  | 0 (= OFF)... 20.0 s                                                                                                                               | 1.0                  |
| C                               | 7  | inE   | Selection of the Sensor Out of Range type that will enable the safety output value                                    | or = Over range<br>ou = Under range<br>our = over e under range                                                                                   | or                   |

|   |    |       |                                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |    |
|---|----|-------|------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----|
| C | 8  | oPE   | Safety output value                            | -100... 100                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    | 0  |
| C | 9  | io4.F | I/O4 function selection                        | on = Out4 will be ever ON (used as a transmitter power supply) ,out4 = Uscita 4 (Used as digital output 4), dG2c = Digital input 2 for contact closure, dG2U = Digital input 2 driven by 12... 24 VDC                                                                                                                                                                                                                                                                                                                                                                                                          | on |
| C | 10 | diF1  | Digital input 1 function                       | oFF = Not used,<br>1 = Alarm reset,<br>2 = Alarm acknowledge (ACK),<br>3 = Hold of the measured value,<br>4 = Stand by mode,<br>5 = Manual mode,<br>6 = HEAt with SP1 and CoOL with SP2,<br>7 = Timer RUN/Hold/Reset,<br>8 = Timer Run,<br>9 = Timer Reset,<br>10 = Timer Run/Hold,<br>11 = Timer Run/Reset,<br>12 = Timer Run/Reset with lock,<br>13 = Program Start,<br>14 = Program Reset,<br>15 = Program Hold,<br>16 = Program Run/Hold,<br>17 = Program Run/Reset,<br>18 = Sequential SP selection,<br>19 = SP1 - SP2 selection,<br>20 = SP1... SP4 binary selection,<br>21 = Digital inputs in parallel | 19 |
| C | 12 | di.A  | Digital Inputs Action (DI2 only if configured) | 0 = DI1 direct action, DI2 direct action<br>1 = DI1 reverse action, DI2 direct action<br>2 = DI1 direct action, DI2 reverse action<br>3 = DI1 reverse action, DI2 reverse action                                                                                                                                                                                                                                                                                                                                                                                                                               | 0  |

**Out GROUP- Output parameters**

| Liv | N° | Param | Description                                      | Values                                                                                                               | Default |
|-----|----|-------|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------|---------|
| C   | 14 | o1F   | Out 1 function                                   | AL = Alarm output                                                                                                    | AL      |
| C   | 15 | o1AL  | Initial scale value of the analog retransmission | -1999 ... Ao1H                                                                                                       | 1       |
| C   | 18 | o1Ac  | Out 1 action                                     | dir = Direct action<br>rEU = Reverse action<br>dir.r = Direct with reversed LED<br>ReU.r = Reverse with reversed LED | rEU.r   |
| C   | 19 | o2F   | Out 2 function                                   | H.rEG = Heating output                                                                                               | H.rEG   |
| C   | 21 | o2Ac  | Out 2 action                                     | dir = Direct action<br>rEU = Reverse action<br>dir.r = Direct with reversed LED<br>ReU.r = Reverse with reversed LED | dir     |
| C   | 22 | o3F   | Out 3 function                                   | H.rEG = Heating output                                                                                               | H.rEG   |
| C   | 24 | o3Ac  | Out 3 action                                     | dir = Direct action<br>rEU = Reverse action<br>dir.r = Direct with reversed LED<br>ReU.r = Reverse with reversed LED | dir     |

**AL1 GROUP - Alarm 1 parameters**

| Liv | N° | Param | Descrizione      | Values                                                                                                                                                                            | Default |
|-----|----|-------|------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 28 | AL1t  | Tipo allarme AL1 | nonE = Alarm not used<br>LoAb = Absolute low alarm<br>HiAb = Absolute high alarm<br>LHAo = Windows alarm in alarm outside the windows<br>LHAI = Windows alarm in alarm inside the | HidE    |

|   |    |      |                                                                                                                         |                                                                                                                                                                                                                                  |            |
|---|----|------|-------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
|   |    |      |                                                                                                                         | windows<br>SE.br = Sensor Break<br>LoDE = Deviation low alarm (relative)<br>HiDE = Deviation high alarm (relative)<br>LHdo = Relative band alarm in alarm out of the band<br>LHdi = Relative band alarm in alarm inside the band |            |
| C | 29 | Ab1  | Alarm 1 function                                                                                                        | 0... 15<br>+1 = Not active at power up<br>+2 = Latched alarm (manual reset)<br>+4 = Acknowledgeable alarm<br>+8 = Relative alarm not active at set point change                                                                  | 0          |
| C | 30 | AL1L | -- For High and low alarms, it is the low limit of the AL1 threshold;<br>-- For band alarm, it is low alarm threshold   | -1999... AL1H (E.U.)                                                                                                                                                                                                             | -199.9     |
| C | 31 | AL1H | -- For High and low alarms, it is the high limit of the AL1 threshold;<br>-- For band alarm, it is high alarm threshold | AL1L... 9999 (E.U.)                                                                                                                                                                                                              | 999.9      |
| O | 32 | AL1  | AL1 threshold                                                                                                           | AL1L... AL1H (E.U.)                                                                                                                                                                                                              | See page 7 |
| O | 33 | HAL1 | AL1 hysteresis                                                                                                          | 1... 9999 (E.U.)                                                                                                                                                                                                                 | See page 7 |
| C | 34 | AL1d | AL1 delay                                                                                                               | 0 (oFF)... 9999 (s)                                                                                                                                                                                                              | oFF        |
| C | 35 | AL1o | Alarm 1 enabling during Stand-by mode and out of range conditions                                                       | 0 = Alarm 1 disabled during Stand by and out of range<br>1 = Alarm 1 enabled in stand by mode<br>2 = Alarm 1 enabled in out of range condition<br>3 = Alarm 1 enabled in stand by mode and in overrange condition                | 1          |

**GRUPPO AL2 - parametri allarme 2**

| Liv | N° | Param | Description                                                       | Values                                                                                                                                                                                                                                                                                                                                                                                                             | Default |
|-----|----|-------|-------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 36 | AL2t  | Alarm 2 type                                                      | nonE = Alarm not used<br>LoAb = Absolute low alarm<br>HiAb = Absolute high alarm<br>LHAo = Windows alarm in alarm outside the windows<br>LHAi = Windows alarm in alarm inside the windows<br>SE.br = Sensor Break<br>LoDE = Deviation low alarm (relative)<br>HiDE = Deviation high alarm (relative)<br>LHdo = Relative band alarm in alarm out of the band<br>LHdi = Relative band alarm in alarm inside the band | SE.br   |
| C   | 37 | Ab2   | Alarm 2 function                                                  | 0... 15<br>+1 = Not active at power up<br>+2 = Latched alarm (manual reset)<br>+4 = Acknowledgeable alarm<br>+8 = Relative alarm not active at set point change                                                                                                                                                                                                                                                    | 0       |
| C   | 42 | AL2d  | AL2 hysteresis                                                    | 0 (oFF)... 9999 (s)                                                                                                                                                                                                                                                                                                                                                                                                | oFF     |
| C   | 43 | AL2o  | Alarm 2 enabling during Stand-by mode and out of range conditions | 0 = Alarm 2 disabled during Stand by and out of range<br>1 = Alarm 2 enabled in stand by mode<br>2 = Alarm 2 enabled in out of range condition<br>3 = Alarm 2 enabled in stand by mode and in overrange condition                                                                                                                                                                                                  | 0       |

| AL3 Group - alarm 3 parameters |    |       |              |                                                                                                                                                                                                                                                                                                                                                                                                                    |         |
|--------------------------------|----|-------|--------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Liv                            | N° | Param | Description  | Values                                                                                                                                                                                                                                                                                                                                                                                                             | Default |
|                                | 44 | AL3t  | Alarm 3 type | nonE = Alarm not used<br>LoAb = Absolute low alarm<br>HiAb = Absolute high alarm<br>LHAo = Windows alarm in alarm outside the windows<br>LHAI = Windows alarm in alarm inside the windows<br>SE.br = Sensor Break<br>LoDE = Deviation low alarm (relative)<br>HiDE = Deviation high alarm (relative)<br>LHdo = Relative band alarm in alarm out of the band<br>LHdi = Relative band alarm in alarm inside the band | nonE    |

| LbA Group - Loop break alarm |    |       |             |                       |         |
|------------------------------|----|-------|-------------|-----------------------|---------|
| Liv                          | N° | Param | Descrizione | Values                | Default |
| C                            | 52 | LbAt  | LBA time    | Da 0 (oFF) a 9999 (s) | oFF     |

| rEG Group - Control parameters |    |       |                                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |         |
|--------------------------------|----|-------|--------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Liv                            | N° | Param | Description                    | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              | Default |
| C                              | 56 | cont  | Control type                   | Pid = PID (heat and/or)<br>On.FA = ON/OFF asymmetric hysteresis<br>On.FS = ON/OFF symmetric hysteresis<br>nr = Heat/Cool ON/OFF control with neutral zone<br>3Pt = Servomotor control (available only when Output 2 and Output 3 have been ordered as "M")                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                          | 3pt     |
| C                              | 57 | Auto  | Autotuning selection           | -4 = Oscillating auto-tune with automatic restart at power up and after all point change<br>-3 = Oscillating auto-tune with manual start<br>-2 = Oscillating -tune with auto-matic start at the first power up only<br>-1 = Oscillating auto-tune with auto-matic restart at every power up<br>0 = Not used<br>1 = Fast auto tuning with automatic restart at every power up<br>2 = Fast auto-tune with automatic start the first power up only<br>3 = FAST auto-tune with manual start<br>4 = FAST auto-tune with automatic restart at power up and after set point change<br>5 = Evo-tune with automatic restart at every power up<br>6 = Evo-tune with automatic start the first power up only<br>7 = Evo-tune with manual start<br>8 = Evo-tune with automatic restart at power up and after a set point change | 7       |
| C                              | 58 | tunE  | Manual start of the Autotuning | oFF = Not active<br>on = Active                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | oFF     |

|   |    |       |                                  |                                                                                                            |            |
|---|----|-------|----------------------------------|------------------------------------------------------------------------------------------------------------|------------|
| C | 59 | SELF  | Self tuning enabling             | no = The instrument does not perform the self-tuning<br>YES = The instrument is performing the self-tuning | No         |
| A | 62 | Pb    | Proportional band                | 1... 9999 (E.U.)                                                                                           | See page 7 |
| A | 63 | ti    | Integral time                    | 0 (oFF) ... 9999 (s)                                                                                       | See page 7 |
| A | 64 | td    | Derivative time                  | 0 (oFF) ... 9999 (s)                                                                                       | See page 7 |
| C | 65 | Fuoc  | Fuzzy overshoot control          | 0.00... 2.00                                                                                               | 1          |
| C | 69 | rS    | Manual reset (Integral pre-load) | -100.0... +100.0 (%)                                                                                       | 0.0        |
| A | 70 | Str.t | Servomotor stroke time           | 5...1000 seconds                                                                                           | See page 7 |
| A | 71 | db.S  | Servomotor dead band             | 0...100%                                                                                                   | 5          |
| C | 72 | od    | Delay at power up                | 0.00 (oFF) ... 99.59 (hh.mm)                                                                               | oFF        |

**SP Group - Set point parameters**

| Liv | N° | Param | Description                                            | Values                                                                                                                                                                                                                                                                                   | Default    |
|-----|----|-------|--------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------|
| C   | 76 | nSP   | Number of used set points                              | 1... 4                                                                                                                                                                                                                                                                                   | 2          |
| A   | 77 | SPLL  | Minimum set point value                                | -1999 ... SPHL                                                                                                                                                                                                                                                                           | See page 7 |
| A   | 78 | SPHL  | Maximum set point value                                | SPLL ... 9999                                                                                                                                                                                                                                                                            | See page 7 |
| O   | 79 | SP    | Set point 1                                            | SPLL ... SPLH                                                                                                                                                                                                                                                                            | See page 7 |
| C   | 80 | SP 2  | Set point 2                                            | SPLL ... SPLH                                                                                                                                                                                                                                                                            | 60         |
|     | 83 | A.SP  | Selection of the active set point                      | "SP" ... "nSP"                                                                                                                                                                                                                                                                           | SP         |
| C   | 84 | SP.rt | Remote set point type                                  | RSP = The value coming from serial link is used as remote set point<br>trin = The value will be added to the local set point selected by A.SP and the sum becomes the operative set point<br>PERc = The value will be scaled on the input range and this value will be used as remote SP | trin       |
| C   | 85 | SPLr  | Local/remote set point selection                       | Loc = Local<br>rEn = Remote                                                                                                                                                                                                                                                              | Loc        |
| C   | 86 | SP.u  | Rate of rise for POSITIVE set point change (ramp UP)   | 0.01... 99.99 (inF) Eng. units per minute                                                                                                                                                                                                                                                | inF        |
| C   | 87 | SP.d  | Rate of rise for NEGATIVE set point change (ramp DOWN) | 0.01... 99.99 (inF) Eng. units per minute                                                                                                                                                                                                                                                | inF        |

**PAn Group - Operator HMI**

| Liv | N°  | Param | Description                                        | Values                                                                                                                                                                                                                                                        | Default |
|-----|-----|-------|----------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 118 | PAS2  | Level 2 password (limited access level)            | oFF (Level 2 not protected by password)<br>1... 200                                                                                                                                                                                                           | 20      |
| C   | 119 | PAS3  | Level 3 password (complete configuration level)    | 3... 300                                                                                                                                                                                                                                                      | 30      |
| C   | 120 | PAS4  | Password livello (livello configurazione a codice) | 201... 400                                                                                                                                                                                                                                                    | 300     |
| C   | 121 | uSrb  | button function during RUN TIME                    | nonE = No function<br>tunE = Auto-tune/self-tune enabling. A single press (longer than 1 second) starts the auto-tune<br>oPLo = Manual mode. The first pressure puts the instrument in manual mode (OPLO) while a second one puts the instrument in Auto mode | tunE    |

|   |     |       |                               |                                                                                                                                                                                                                                                                                                                                               |      |
|---|-----|-------|-------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|
|   |     |       |                               | AAC = Alarm reset<br>ASi = Alarm acknowledge<br>chSP = Sequential set point selection<br>St.by = Stand by mode. The first press puts the instrument in stand by mode while a second one puts the instrument in Auto mode.<br>Str.t = Timer run/hold/reset<br>P.run = Program run<br>P.rES = Program reset<br>P.r.H.r = Program run/hold/reset |      |
| C | 122 | diSP  | Display management            | Spo = Operative set point                                                                                                                                                                                                                                                                                                                     | SPo  |
| C | 123 | di.cL | Display colour                | 0 = The display colour is used to show the actual deviation (PV - SP)<br>1 = Display red (fix)<br>2 = Display green (fix)<br>3 = Display orange (fix)                                                                                                                                                                                         | 2    |
|   | 125 | diS.t | Display Timeout               | -- oFF (display always ON)<br>-- 0.1... 99.59 (mm.ss)                                                                                                                                                                                                                                                                                         | oFF  |
| C | 126 | fiLd  | Filter on the displayed value | -- oFF (filter disabled)<br>-- From 0.0 (oFF) to 20.0 (E.U.)                                                                                                                                                                                                                                                                                  | oFF  |
| C | 128 | dSPu  | Instrument status at power ON | AS.Pr = Starts in the same way it was prior to the power down<br>Auto = Starts in Auto mode<br>oP.0 = Starts in manual mode with a power output equal to zero<br>St.bY = Starts in stand-by mode                                                                                                                                              | Auto |
| C | 129 | oPr.E | Operative modes enabling      | ALL = All modes will be selectable by the next parameter<br>Au.oP = Auto and manual (OPLO) mode only will be selectable by the next parameter<br>Au.Sb = Auto and Stand-by modes only will be selectable by the next parameter                                                                                                                | ALL  |
| C | 130 | oPEr  | Operative mode selection      | If oPr.E = ALL: - Auto = Auto mode<br>- oPLo = Manual mode<br>- St.bY = Stand by mode<br>If oPr.E = Au.oP: - Auto = Auto mode<br>- oPLo = Manual mode<br>If oPr.E = Au.Sb: - Auto = Auto mode<br>- St.bY = Stand by mode                                                                                                                      | Auto |

**SEr Group - Serial link parameter**

| Liv | N°  | Param | Description                                         | Values                                                                                                                                                                                                                   | Default |
|-----|-----|-------|-----------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| C   | 131 | Add   | Instrument address                                  | -- oFF<br>-- 1... 254                                                                                                                                                                                                    | 1       |
| C   | 132 | bAud  | baud rate                                           | 1200 = 1200 baud<br>2400 = 2400 baud<br>9600 = 9600 baud<br>19.2 = 19200 baud<br>38.4 = 38400 baud                                                                                                                       | 9600    |
| C   | 133 | trSP  | Selection of the value to be retransmitted (Master) | nonE = Retransmission not used (the instrument is a slave)<br>rSP = The instrument becomes a Master and retransmits the operative set point<br>PErc = The instrument become a Master and it retransmits the power output | nonE    |

| con Group - Consumption parameters |     |       |                              |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |         |
|------------------------------------|-----|-------|------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------|
| Liv                                | N°  | Param | Description                  | Values                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             | Default |
| C                                  | 134 | Co.tY | Count type                   | oFF = Not used<br>1 = Instantaneous power (kW)<br>2 = Power consumption (kW/h)<br>3 = Energy used during program execution. This measure starts from zero when a program runs end stops at the end of the program. A new program execution will reset the value<br>4 = Total worked days: number of hours the instrument is turned ON divided by 24.<br>5 = Total worked hours: number of hours the instrument is turned ON.<br>6 = Total worked days with threshold: number of hours the instrument is turned ON divided by 24, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job.<br>7 = Total worked hours with threshold: number of hours the instrument is turned ON, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job.<br>8 = Totalizer of control relay worked days: number of hours the control relay has been in ON condition, divided by 24.<br>9 = Totalizer of control relay worked hours: number of hours the control relay has been in ON condition.<br>10 = Totalizer of control relay worked days with threshold: number of hours the control relay has been in ON condition divided by 24, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job.<br>11 = Totalizer of control relay worked hours with threshold: number of hours the control relay has been in ON condition, the controller is forced in stand-by when Co.ty value reaches the threshold set in [137] h.Job. | oFF     |
| C                                  | 138 | t.Job | Worked time (not resettable) | 0... 9999 days                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | 0       |

| cAL Group - User calibration group |     |       |                    |                                                |         |
|------------------------------------|-----|-------|--------------------|------------------------------------------------|---------|
| Liv                                | N°  | Param | Description        | Values                                         | Default |
| C                                  | 139 | AL.P  | Adjust Low Point   | From -1999 to (AH.P - 10) in engineering units | 0       |
| C                                  | 140 | AL.o  | Adjust Low Offset  | -300... +300 (E.U.)                            | 0       |
| C                                  | 141 | AH.P  | Adjust High Point  | From (AL.P + 10) to 9999 engineering units     | 999.9   |
| C                                  | 142 | AH.o  | Adjust High Offset | -300... +300                                   | 0       |



## OPERATIVE MODES

When the instrument is powered, it starts immediately to work according to the parameters values loaded in its memory. The instrument behaviour and its performance are governed by the value of the stored parameters.

At power ON the instrument can start in one of the following mode depending on its configuration:

**Automatic Mode** In Automatic mode the instrument drives automatically the control output according to the parameter value set and the set point/measured value.

**Manual Mode (OPLO):** In Manual mode the the upper display shows the measured value while the lower display shows the power output The lower display shows the power output [preceded by H (for heating) or C (for cooling)], MAN is lit and the instrument allows you to set manually the control output power. No Automatic action will be made.

**Stand by Mode (St.bY):** In stand-by mode the instrument operates as an indicator. It will show on the upper display the measured value and on the lower display the set point alternately to the "St.bY" messages and forces the control outputs to zero.

We define all the above described conditions as "Standard Display".

As we have seen, it is always possible to modify the value assigned to a parameter independently from the operative modes selected.

 
## AUTOMATIC MODE

Keyboard function when the instrument is in Auto mode:

|                                                                                     | Modo Operatore                                                                                                                                                                |
|-------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | Allows entry into parameter modification procedures                                                                                                                           |
|  | Allows you to start the "Direct set point modification" function (see below).                                                                                                 |
|  | Allows you to display the "additional informations" (see below).                                                                                                              |
|  | Performs the action programmed by [121] uSrb (  button function during RUN TIME) parameter |

### Additional information

This instrument is able to show you some additional informations that can help you to manage your system. The additional informations are related to how the instrument is programmed, hence in many cases, only part of this information is available.

1. When the instrument is showing the "standard display" push  button. The lower display will show H or c followed by a number. This value is the current power output applied to the process. The H show you that the action is a Heating action while the "c" show you that the action is a Cooling action
2. Push  button again. When the programmer is running the lower display will show the segment currently performed and the Event status as shown below:  
 where the first character can be r for a ramp or S for a soak, the next digit show the number of the segment (e.g. S3 means Soak number 3) and the twoless significant digits (LSD) show you the status of the two event (the LSD is the Event 2)..
3. Push  button again. When the programmer is running the lower display will show the theoretical remaining time to the end of the program preceded by a "P" letter:  

4. Push  button again. When the wattmeter function is running the lower display will show U followed by the measured energy..
5. Push  button. When the "Worked time count" is running the lower display will show "d" for days or "h" for hours followed by the measured time.
6. Push  button. The instrument returns to the "standard display".

Note: The additional information visualization is subject to a time out. If no button is pressed for more than 10 second the instrument comes automatically back to the Standard display..

**Direct set point modification**

This function allows to modify rapidly the set point value selected by [83] A.SP (selection of the active Set point) or to the set point of the segment group (of the programmer) currently in progress.

1. Push  button. The upper display shows the acronym of the selected set point (e.g. SP2) and the lower display will show its value.
2. By  and  buttons, assign to this parameter the desired value
3. Do not push any button for more than 5 second or push the  button. In both cases the instrument memorize the new value and come back to the “standard display”.

**Manual mode**

This operative mode allows you to deactivate automatic control and manually program the percentage power output to the process. When the instrument is in manual mode, the upper display shows the measured value while the lower display shows the power output [preceded by H (for heating action) or C (for cooling action)] The MAN LED is lit. When manual control is selected, the instrument will start to operate with the same power output as the last one supplied by automatic mode and can be modified using the  and  buttons.

In case of ON/OFF control, 0% corresponds to the deactivated output while any value different from 0 corresponds to the activated output. As in the case of visualization, the programmable values range from H100 (100% output power with reverse action) to C100 (100% output power with direct action).

**Notes:**

- During manual mode, the alarms are operative.
- If you set manual modes during program execution, the program will be frozen and it will restart when the instrument will come back to Auto mode.
- If you set manual modes during self-tune execution, the self- tune function will be aborted.
- During manual mode, all functions not related with the control (wattmeter, independent timer, “worked time”, etc) continue to operate normally..

**STAND-BY MODE**

This operative mode also deactivates the automatic control but forces the control output to zero. In this mode the instrument operates as an indicator. When the instrument is in stand by mode the upper display will show the measured value while the lower display will show alternately the set point and the message “St.bY”.

**Notes:**

- During stand by mode, the relative alarms are disabled while the absolute alarms are operative or not according to the ALxo (Alarm x enabling during Stand-by mode) parameter setting.
- If you set stand by mode during program execution, the program will be aborted.
- If you set stand by mode during self-tune execution, the self- tune function will be aborted.
- During stand by mode, all functions not related with the control (wattmeter, independent timer, “worked time”, etc) continue to operate normally.
- When the instrument is swapped from stand by to auto modes, the instrument will start automatically the alarm masking, the soft start functions and the auto-tune (if programmed).

**AUTOTUNE (EVOTUNE)**

Evotune is a fast and fully automatic procedure that can be started in any condition, regardless the deviation from SP. The controller selects automatically the best tune method and computes the optimum PID parameters. To activate Evotune press  button for 3 seconds.

## ERROR MESSAGES

The upper display shows the OVER-RANGE and UNDERRANGE conditions with the following indications:

Over-range: 

Under-range 

The sensor break will be signalled as an out of range: - - - -

Note: When an over-range or an under-range is detected, the alarms operate as in presence of the maximum or the minimum measurable value respectively.

To check the out of span Error condition, proceed as follows:

1. Check the input signal source and the connecting line.
2. Make sure that the input signal is in accordance with the instrument configuration. Otherwise, modify the input configuration.
3. If no error is detected, send the instrument to your supplier to be checked.

### List of possible errors

**ErAT** Fast Auto-tune cannot start. The measure value is too close to the set point. Push the button in order to delete the error message.

**ouLd** Overload on the out 4. The messages shows that a short circuit is present on the Out 4 when it is used as output or as a transmitter power supply. When the short circuit disappears the output restart to operate..

**NoAt** Auto-tune not finished within 12 hours.

**ErEP** Possible problem of the instrument memory. The messages disappears automatically. When the error continues, send the instrument to your supplier.

**RonE** Possible problem of the firmware memory. When this error is detected, send the instrument to your supplier.

**Errt** Possible problem of the calibration memory. When this error is detected, send the instrument to your supplier.

## FACTORY RESET

Sometime, e.g. when you re-configure an instrument previously used for other works or from other people or when you have made too many errors during configuration and you decided to re-configure the instrument, it is possible to restore the factory configuration. This action allows to put the instrument in a defined condition (the same it was at the first power ON).

The default data are those typical values loaded in the instrument prior to ship it from factory. To load the factory default parameter set, proceed as follows:

1. Press the  button for more than 5 seconds. The upper display will show PASS while the lower display shows 0;
2. Using  and  buttons set the value -481;
3. Push  button;
4. The instrument will turn OFF all LEDs for a few seconds, then the upper display will show dFLt (default) and then all LEDs are turned ON for 2 seconds. At this point the instrument restarts as for a new power ON.

The procedure is complete.

Note: The complete list of the default parameters is available in Chapter "Configuration".