

# LME73.000Ax + PME73.831AxBC LME73.831AxBC



***Service instruction manual***

M12921CB Rel.1.2 02/2016

## GENERAL FEATURES

LME/ is suitable for gas, light and heavy oil burners

LME7 series has two devices: LME73.000 (hardware) and PME73.831AxBC (programmable unit). The LME73.831AxBC is also available: it has a built in software and it is not programmable.

LME7 is inside the control panel. If supplied, PME73.831BC is inside the LME7;

The display AZL23.. or AZL21.. is available for Service and hardware setup.

LME7... are used for the startup and supervision of 2-stage/progressive, modulating forced draft gas burners in intermittent operation.

The flame is supervised with an ionization probe, optionally with UV flame detector QRA2..., QRA4.U or QRA10....


Integrated in the LME7... basic unit are:

- Burner control
- BCI
- Control for one actuator
- Lockout reset button (info button)
- 3 multicolor signal lamp LED for operations and fault notifications
- 3 x 7-segment display for service, fault and operating state information
- Interface for program module (no function)

Passwords protect the different parameter levels against unauthorized access. Basic settings that the plant operator can make on site require no password.


Functions:


- Undervoltage detection
- Electrical remote reset facility
- Accurate control times thanks to digital signal handling
- Multicolor indication of fault status and operating state messages
- Air pressure supervision with function check of air pressure switch during start and operation (gas)
- Repetition limitation
- Controlled intermittent operation after 24 hours of continuous operation\*
- BCI
- Indication of program sequence

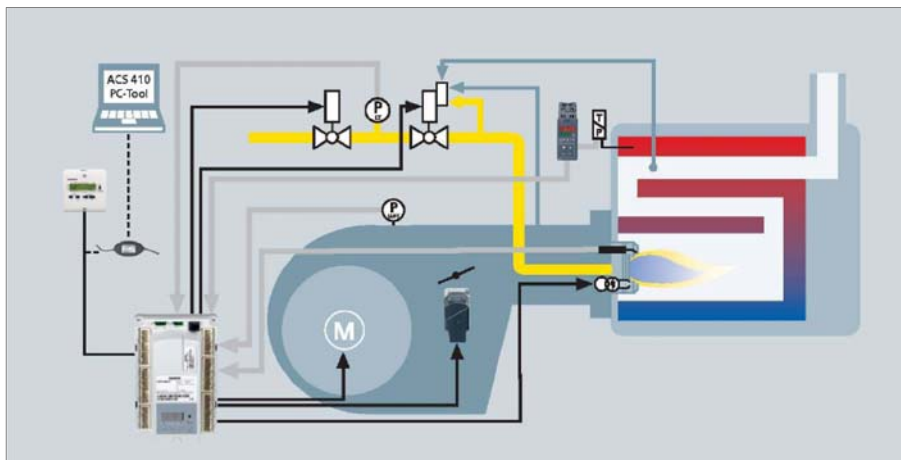

\* after no more than 24 hours of continuous operation, the burner control initiates automatic controlled shutdown followed by a restart.

## User interface :

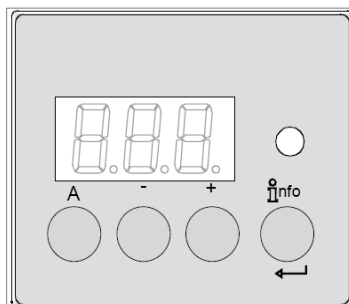

|                                                                                     |                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|    | <b>Button A</b> <ul style="list-style-type: none"> <li>- Display preset output</li> <li>- In lockout position: Power value to the time of fault</li> </ul>                                                                                             |
|    | <b>Info and Enter button</b> <ul style="list-style-type: none"> <li>- Reset in the event of fault, changeover visual diagnostic of the cause of fault (refer to chapter Diagnostics of cause of fault )</li> </ul>                                     |
|    | <b>- button</b> <ul style="list-style-type: none"> <li>- Display flame signal current 2 or phases display</li> <li>- In lockout position: MMI phase to the time of fault</li> </ul>                                                                    |
|    | <b>+ button</b> <ul style="list-style-type: none"> <li>- Display flame signal current 1 or phases display</li> <li>- In lockout position: MMI phase to the time of fault</li> </ul>                                                                    |
|  | <b>3 multicolor signal lamp</b> <ul style="list-style-type: none"> <li>- Refer to chapter "Blink code table"</li> </ul>                                                                                                                                |
|  | <b>+ and - button: Escape function</b><br>(press + and - simultaneously) <ul style="list-style-type: none"> <li>- No adoption of value</li> <li>- One menu level up</li> <li>- Keep depressed for &gt;1second for backup / restore function</li> </ul> |

## First startup when PME is supplied or PME replacement:

### First startup:

- 1) insert a new PME
- 2) turn the power on; The display shows "rst" and "PrC" one after the other.
- 3) keep pushing the INFO  button more than 3 seconds; "run" appears; PME parameters will be transferred to LME
- 4) at the end, "End" and "rst" appears one after the other; Later (2'), the control box locks out "Loc 138"
- 5) reset the control box by pressing the INFO  button (for less than 3 seconds)  
Now the display shows "OFF"; the burner is ready to be started.

### Replacement:

- 1) Turn off the burner, replace the existing PME with a new one
- 2) For the first startup, repeat the above procedure, from step 2.

**List of phase display on board LME :**

| Phase number of 7-segment display        | LED                   | Function                                                                                                               |
|------------------------------------------|-----------------------|------------------------------------------------------------------------------------------------------------------------|
| Standby                                  |                       |                                                                                                                        |
| OFF                                      | Off                   | Standby, waiting for heat demand                                                                                       |
| P08                                      | Off                   | Mains ON / test phase (e.g. detector test)                                                                             |
| <b>Startup</b>                           |                       |                                                                                                                        |
| P21                                      | Yellow                | Safety valve ON, air pressure switch test / POC test (timeout / locking                                                |
| P22                                      | Yellow                | Fan motor ON / air pressure switch test / settling time                                                                |
| P24                                      | Yellow                | Actuator opens in prepurging position                                                                                  |
| P30                                      | Yellow                | Prepurging                                                                                                             |
| P36                                      | Yellow                | Actuator closes in ignition load / low-fire position                                                                   |
| P38                                      | Yellow blinking       | Preignition time                                                                                                       |
| P40                                      | Yellow blinking       | 1st safety time (TSA1) / ignition transformer ON                                                                       |
| P42                                      | Green                 | Safety time (ignition transformer OFF), flame check                                                                    |
| P44                                      | Green                 | Interval: End of safety time and fuel valve 1 (V1) ON<br>Interval: End of safety time and load controller (LR) release |
| P50 Green                                | P50 Green             | 2nd safety time (TSA2)                                                                                                 |
| P54 Green                                | P54 Green             | P259.01: Actuator opens in > low-fire                                                                                  |
| P54 Green                                | P54 Green             | P260: Actuator closes in low-fire                                                                                      |
| oP1 Green                                | oP1 Green             | Interval until release of load controller target (analog or 3-position step input)                                     |
| <b>Operation</b>                         |                       |                                                                                                                        |
| oP                                       | Green                 | Operation, modulating operation                                                                                        |
| <b>Shutdown</b>                          |                       |                                                                                                                        |
| P10                                      | Yellow                | Shutdown, actuator opens in CLOSE position (home run)                                                                  |
| P72                                      | Yellow                | Actuator opens in high-fire position / end of operation                                                                |
| P74                                      | Yellow                | Postpurging                                                                                                            |
| <b>Valve proving</b>                     |                       |                                                                                                                        |
| P80                                      | Yellow                | Test space evacuating                                                                                                  |
| P81                                      | Yellow                | Checking time fuel valve 1                                                                                             |
| P82                                      | Yellow                | Test space filling                                                                                                     |
| P83                                      | Yellow                | Checking time fuel valve 2                                                                                             |
| <b>Waiting phases (start prevention)</b> |                       |                                                                                                                        |
| P01                                      | Red / yellow blinking | Undervoltage                                                                                                           |
| P02                                      | Yellow                | Safety loop open                                                                                                       |
| P04                                      | Red / green blinking  | Extraneous light on burner startup (timeout / locking after 30 s)                                                      |
| P90                                      | Yellow                | Pressure switch-min open                                                                                               |
| <b>Lockout</b>                           |                       |                                                                                                                        |
| LOC                                      | Red                   | Lockout phase                                                                                                          |

## Operation :

|                                                                                   |                                                                                                                                                                        |
|-----------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | The lockout reset button (info button) (EK) is the key operating element for resetting the burner control and for activating / deactivating the diagnostics functions. |
|  | The multicolor signal lamp (LED) is the key indicating element for visual diagnostics.                                                                                 |

Both lockout reset button (EK) and signal lamp (LED) are located in the control panel.

There are 2 diagnostics choices:

1. Visual diagnostics: Indication of operating state or diagnostics of cause of fault
2. Diagnostics: Via internal display or to AZL2.. display and operating unit

Visual diagnostics:

In normal operation, the different operating states are indicated in the form of color codes according to the color code table given below.

### Color code table for multicolor signal lamp (LED) :

| State                                           | Color code                          | Color             |
|-------------------------------------------------|-------------------------------------|-------------------|
| Waiting time (tw), other waiting states         | ○ .....                             | OFF               |
| Ignition phase, ignition controlled             | ● ○ ● ○ ● ○ ● ○ ● ○ ● ○             | Blinking yellow   |
| Operation, flame o.k.                           | □ .....                             | Green             |
| Operation, flame not o.k.                       | □ ○ □ ○ □ ○ □ ○ □ ○ □ ○             | Blinking green    |
| Extraneous light on burner startup              | □ ▲ □ ▲ □ ▲ □ ▲ □ ▲ □ ▲             | Green-red         |
| Undervoltage                                    | ● ▲ ● ▲ ● ▲ ● ▲ ● ▲ ● ▲             | Yellow-red        |
| Fault, alarm                                    | ▲ .....                             | Red               |
| Error code output (refer to «Error code table») | ▲ ○ ▲ ○ ▲ ○ ▲ ○ ▲ ○ ▲ ○             | Blinking red      |
| Interface diagnostics                           | ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲ ▲             | Red flicker light |
| Heating request                                 | ● .....                             | Yellow            |
| Heating request                                 | ● ● ▲ ● ● ▲ ● ● ▲ ● ● ▲ ● ● ▲ ● ● ▲ | Yellow            |


### Key

|       |            |
|-------|------------|
| ..... | Steady on  |
| ○     | Led off    |
| ▲     | Led red    |
| ●     | Led yellow |
| □     | Led green  |

## Program sequence :

Version 1:

- Ignition load < low-fire
- Prepurging in high-fire
- Parameter 515 = 1 (condition parameter 259.01 > 0 seconds)

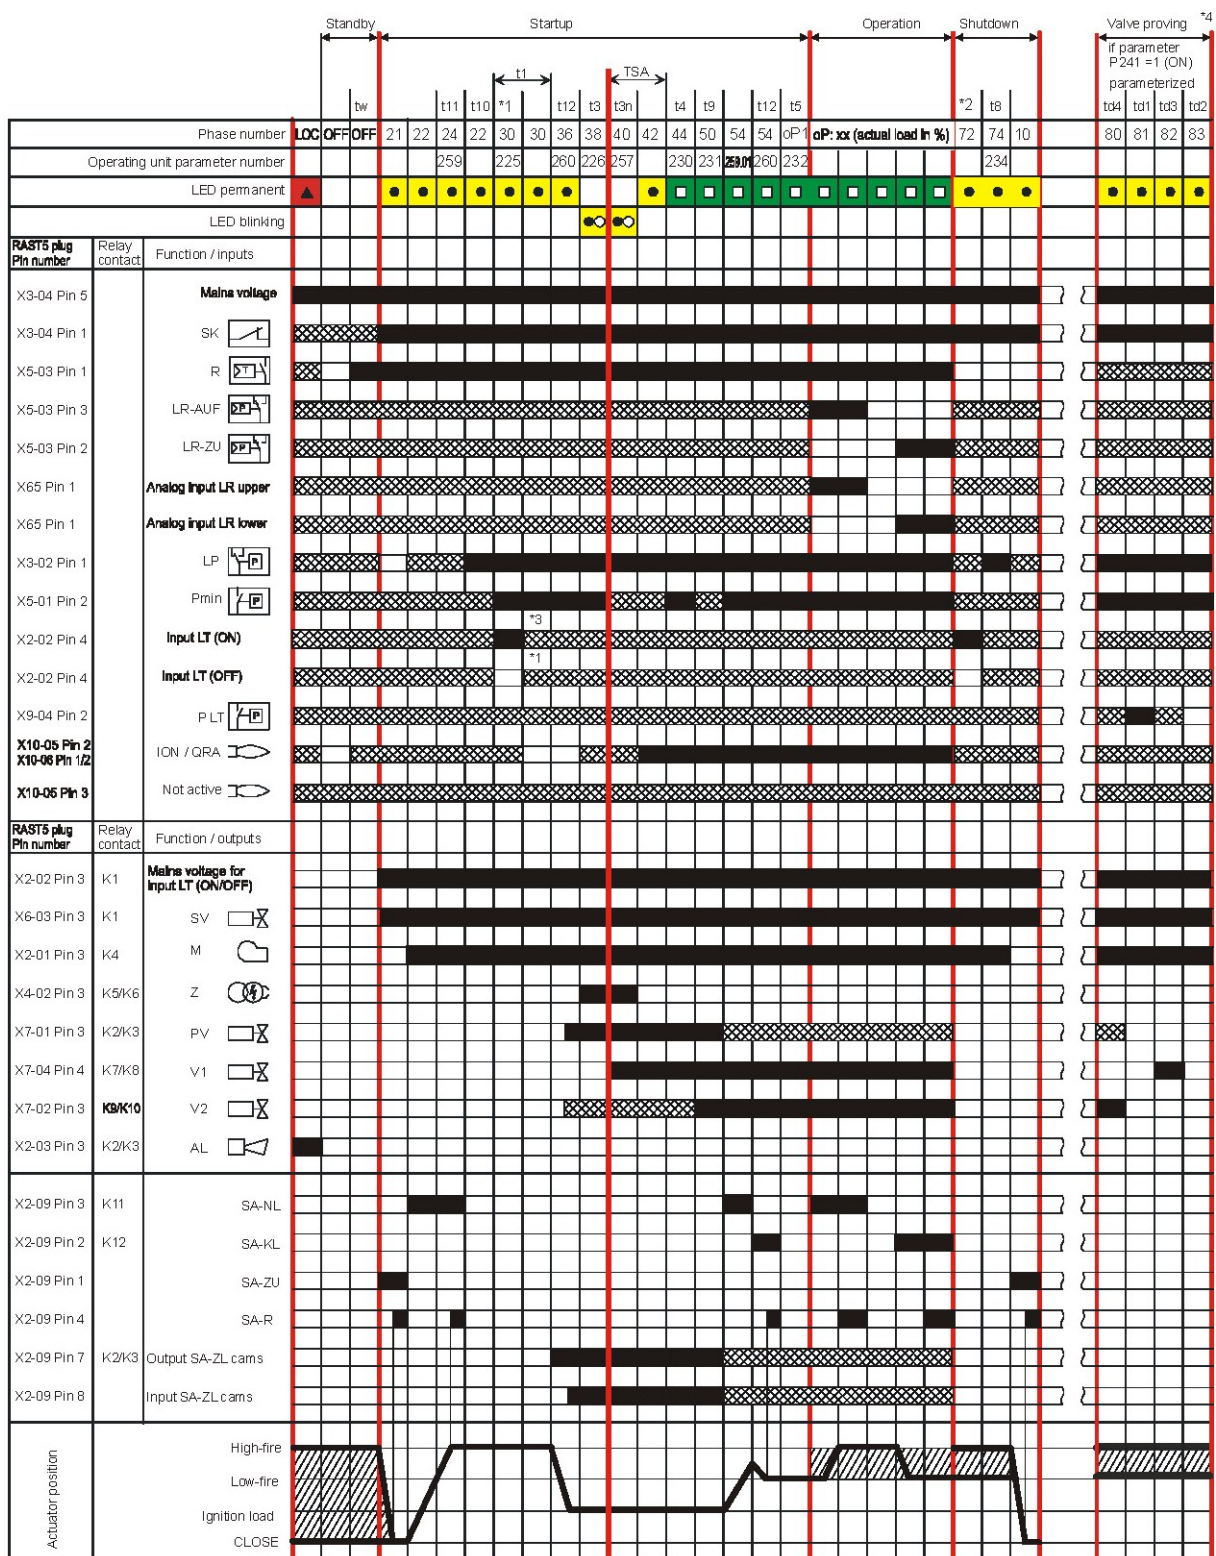

7114d05e/0112



Version 2:

- [illegible]

| Phase number | Function                                                                           |
|--------------|------------------------------------------------------------------------------------|
| LOC          | Lockout phase                                                                      |
| OFF          | Standby, waiting for heat demand                                                   |
| oP           | Operation, modulating operation                                                    |
| oP1          | Interval until release of load controller target (analog or 3-position step input) |
| 01           | Under voltage                                                                      |
| 02           | Safety loop open                                                                   |
| 04           | Extraneous light on burner startup (timeout/locking after 30 seconds)              |
| 08           | Mains ON/test phase (e.g. detector test)                                           |
| 10           | Shutdown, actuator opens in CLOSE position (homerun)                               |
| 21           | Safety valve ON, air pressure switch OFF, actuator opens in CLOSE position         |
| 22           | Part 1: Fan motor ON                                                               |
|              | Part 2: Specified time (t10) air pressure switch (LP)                              |
|              | Message (timeout) stabilization air pressure switch                                |
| 24           | Actuator opens in prepurge position                                                |
| 30           | Part 1: Prepurge time (t1) without extraneous light test                           |
|              | Valve proving after mains ON, lockout                                              |
|              | Part 2: Prepurge time (t1) with extraneous light test                              |
| 36           | Actuator closes in ignition load                                                   |
| 38           | Preignition (t3)                                                                   |
| 40           | Postignition time (t3n), parameter 257 + 0.3 seconds                               |
| 42           | Flame detection                                                                    |
| 44           | Interval (t4): End of safety time (TSA) and burner valve 2 ON                      |
| 50           | 2nd safety time (t9)                                                               |
| 54           | Parameter 259.01: Actuator opens in > low-fire                                     |
|              | Parameter 260: Actuator closes in low-fire                                         |
| 72           | End of operation, checking if valve proving (LT) shall be performed                |
| 74           | Postpurging (t8)                                                                   |
| 80           | Test space evacuation (td4)                                                        |
| 81           | Test time (td1) fuel valve 1 (V1)                                                  |
| 82           | Test space filling (td3)                                                           |
| 83           | Test time (td2) fuel valve 2 (V2)                                                  |
| 90           | Pressure switch-min open □ safety shutdown                                         |
| *1           | Valve proving is conducted when...                                                 |
|              | - parameter 241.00 = 1 and parameter 241.02 = 1, or                                |
|              | - parameter 241.00 = 1 and parameter 241.01 = 0                                    |
| *2           | Valve proving is conducted when...                                                 |
|              | - parameter 241.00 = 1 and parameter 241.02 = 1, or                                |
|              | - parameter 241.00 = 1 and parameter 241.01 = 1                                    |
| *3           | Valve proving (LT) will not be performed                                           |



# **Error code table :**

| <b>Red blink code of fault signal lamp (LED)</b> | <b>Possible cause</b>                                                                                                                                                                                                                  |
|--------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 2 x blinks                                       | No establishment of flame at the end of the safety time (TSA)                                                                                                                                                                          |
|                                                  | <ul style="list-style-type: none"> <li>- Faulty or soiled flame detector</li> <li>- Faulty or soiled fuel valves</li> <li>- Poor adjustment of burner, no fuel</li> <li>- Faulty ignition equipment</li> </ul>                         |
| 3 x blinks                                       | Air pressure switch (LP) faulty <ul style="list-style-type: none"> <li>- Loss of air pressure after specified time (t10)</li> <li>- Air pressure switch (LP) welded in no-load position</li> </ul>                                     |
| 4 x blinks                                       | Extraneous light on burner startup                                                                                                                                                                                                     |
| 5 x blinks                                       | Time supervision air pressure switch (LP) <ul style="list-style-type: none"> <li>- Air pressure switch (LP) welded in working position</li> </ul>                                                                                      |
| 6 x blinks                                       | Actuator position not reached <ul style="list-style-type: none"> <li>- Actuator faulty</li> <li>- Wrong adjustment of cam</li> <li>- Actuator defective or blocked</li> <li>- False connection</li> <li>- Misadjustment</li> </ul>     |
| 7 x blinks                                       | Too many losses of flame during operation (limitation of repetitions) <ul style="list-style-type: none"> <li>- Faulty or soiled flame detector</li> <li>- Faulty or soiled fuel valves</li> <li>- Poor adjustment of burner</li> </ul> |
| 8 x blinks                                       | Free                                                                                                                                                                                                                                   |
| 9 x blinks                                       | Free                                                                                                                                                                                                                                   |
| 10 x blinks                                      | Wiring error or internal error, output contacts, other faults                                                                                                                                                                          |
| 12 x blinks                                      | Valve proving (LT) <ul style="list-style-type: none"> <li>- Fuel valve 1 (V1) leaking</li> </ul>                                                                                                                                       |
| 13 x blinks                                      | Valve proving (LT) <ul style="list-style-type: none"> <li>- Fuel valve 2 (V2) leaking</li> </ul>                                                                                                                                       |
| 14 x blinks                                      | Error in connection with valve closure control POC                                                                                                                                                                                     |
| 15 x blinks                                      | Error code $\geq 15$                                                                                                                                                                                                                   |
|                                                  | Error code 22: Error of safety loop (SL)                                                                                                                                                                                               |

During the time the cause of fault is diagnosed, the control outputs are deactivated:


- Burner remains shut down
- External fault indication (AL) at terminal X2-03, pin 3 steady on

Diagnostics of cause of fault is quit and the burner switched on again by resetting the burner control. Press the lockout reset button (info button) for about 1 second (<3 seconds).

## Flame detection – detection electrode :

|                                                        |                                          |
|--------------------------------------------------------|------------------------------------------|
| Short-circuit current                                  | Max. AC 1 mA                             |
| Required detector current                              | Min. DC 2 $\mu$ A, display approx. 45 %  |
| Possible detector current                              | Max. DC 3 $\mu$ A, display approx. 100 % |
| Permissible length of detector cable (laid separately) | 30 m (core-earth 100 pF/m)               |

### Measuring circuit

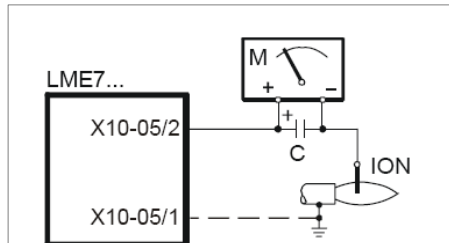

### Keys


- C - Electrolytic condenser 100...470  $\mu$ F; DC 10...25 V
- ION - Ionization probe
- M - Microammeter Ri max. 5,000  $\Omega$

## Flame detection – UV probe :

Threshold values when flame is supervised by QRA...

|                                               |                                        |
|-----------------------------------------------|----------------------------------------|
| - Start prevention (extraneous light)         | Intensity (parameter 954) approx. 12 % |
| - Operation                                   | Intensity (Parameter 954) approx. 13 % |
| Operating voltage                             | AC 280 V $\pm$ 15 %                    |
| Mains frequency                               | 50...60 Hz $\pm$ 6 %                   |
| Required detector current                     | Min. 70 $\mu$ A                        |
| Possible detector current                     |                                        |
| - Operation                                   | Max. 700 $\mu$ A                       |
| Perm. length of detector cable                |                                        |
| - Normal cable, laid separately <sup>1)</sup> | Max. 100 m                             |

<sup>1)</sup> Multicore cable not permitted

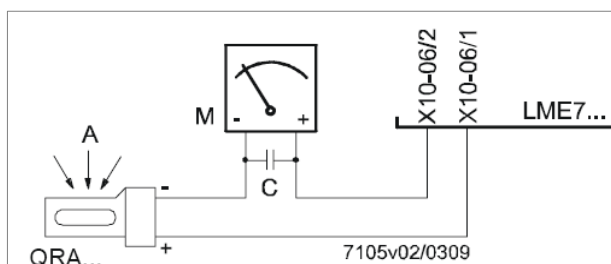

### Keys

- A - Exposure to light
- C - Electrolytic condenser 100...470  $\mu$ F; DC 10...25 V
- M - Microammeter Ri max. 5,000  $\Omega$

### Warning!

Input QRA... is not short-circuit-proof!

Short-circuits of X10-06/2 against earth can destroy the QRA... input

Simultaneous operation of flame detector QRA... and detection electrode is not permitted

To make certain the age of the UV tube can be determined, the LME7... basic unit must always be connected to mains supply.

## Gas proving system :

Valve proving is dependent on input valve proving ON / OFF (X2-02). When a leak is detected, the gas valve proving function ensures that the gas valves will not be opened and that ignition will not be switched on. Lockout will be initiated.

### Valve proving with separate pressure switch (P LT)

Step 1: td4 – Evacuation of test space

Gas valve on the burner side is opened to bring the test space to atmospheric pressure.

Step 2: td1 – Test atmospheric pressure


When the gas has closed, the gas pressure in the test space must not exceed a certain level.

Step 3: td3 Filling of test space

Gas valve on the mains side opens to fill the test space.

Step 4: td2 – Test gas pressure

When the gas valve has closed, the gas pressure in the test space must not drop below a certain level.

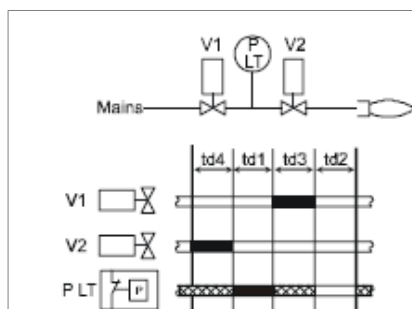

Controllo tenuta con pressostati separati

#### Keys

td1 Test atmospheric pressure

td2 Test gas pressure

td3 Filling of test space

td4 Evacuation of test space

V... Fuel valve

PLT Pressure switch valve proving

■ Input / output signal 1 (ON)


□ Input / output signal 0 (OFF)

▨ Input permissible signal 1 (ON) or 0 (OFF)

| No. | Parameter                                    |
|-----|----------------------------------------------|
| 242 | Valve proving evacuation of test space       |
| 243 | Valve proving time test atmospheric pressure |
| 244 | Valve proving filling of test space          |
| 245 | Valve proving time test gas pressure         |

## Instruction, control and modify via AZL2x :


The AZL2x.. display/programming unit is shown below:

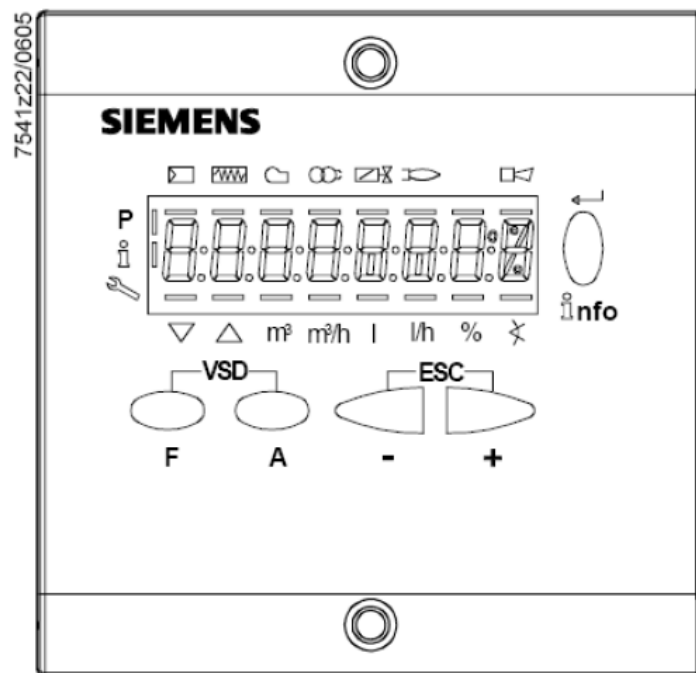

The keys functions are the following:

|  |                                                                                                                                                                                                    |
|--|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p>Key F + A<br/>While pressing the two keys contemporarily, the code message will appear: by entering the proper password it is possible to access the Service mode.</p>                          |
|  | <p>Info and Enter keys<br/>Used for Info and Service menues<br/>Used as Enter key in the setting modes<br/>Used as Reset key in the burner operation mode<br/>Used to enter a lower level menu</p> |
|  | <p>Key -<br/>Used for one menu level down<br/>Used to decrease a value</p>                                                                                                                         |
|  | <p>Key +<br/>Used for one menu level up<br/>Used to increase a value</p>                                                                                                                           |
|  | <p>Keys (+ &amp; -) = ESC<br/>By pressing + and - at the same time, the ESCAPE function is performed<br/>No adoption of value<br/>One menu level down</p>                                          |
|  |                                                                                                                                                                                                    |

The display will show these data:

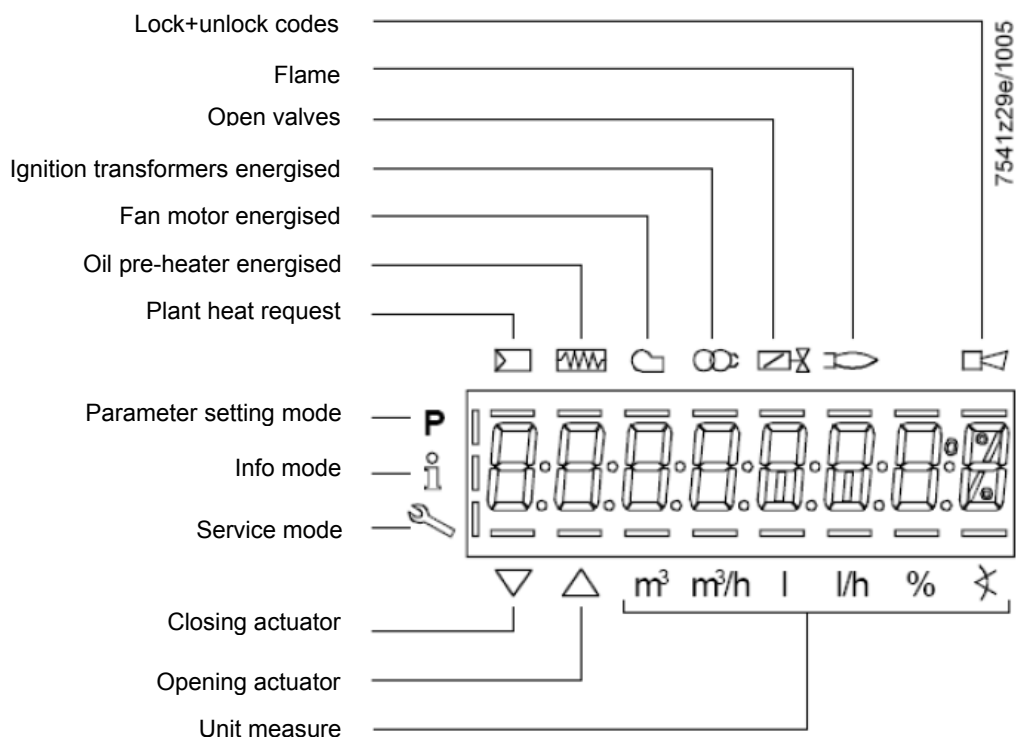

While pushing the  button together with whatever else button, LME73 locks out; the display shows



On stand-by position,  appears

On operation, all the phases appears with their number.



List of phase with display AZL2x :

| Phase number                                 | Function                                                                                                                                       |
|----------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| Standby                                      |                                                                                                                                                |
| OFF                                          | Standby, waiting for heat request                                                                                                              |
| Ph08                                         | Power ON / test phase (e.g. detector test)                                                                                                     |
| <b>Startup</b>                               |                                                                                                                                                |
| Ph21                                         | Safety valve ON, air pressure switch test / POC test (timeout / locking after 5 seconds), actuator opens in low-fire position / CLOSE position |
| Ph22                                         | Fan motor ON or air pressure switch test / settling time                                                                                       |
| Ph24                                         | Actuator travels to the prepurge position                                                                                                      |
| Ph30                                         | Prepurging                                                                                                                                     |
| Ph36                                         | Actuator closes until ignition load / low-fire is reached, and parameter 259.02: Actuator opens to a position > ignition load                  |
| Ph38                                         | Preignition                                                                                                                                    |
| Ph40                                         | 1st safety time (TSA1) / ignition transformer ON                                                                                               |
| Ph42                                         | Safety time (ignition transformer OFF), flame check                                                                                            |
| Ph44                                         | Interval: End of safety time and fuel valve 1 (V1) ON                                                                                          |
| Ph50                                         | 2nd safety time (TSA2)                                                                                                                         |
| Ph54                                         | P259.01: Actuator opens in > low-fire                                                                                                          |
| Ph54                                         | P260: Actuator closes in low-fire                                                                                                              |
| oP1                                          | Interval until release of load controller target (analog or 3-position step input)                                                             |
| <b>Operation</b>                             |                                                                                                                                                |
| oP                                           | Operation, modulating operation                                                                                                                |
| <b>Shutdown</b>                              |                                                                                                                                                |
| Ph10                                         | Shutdown, actuator opens in CLOSE position (home run)                                                                                          |
| Ph72                                         | Actuator opens in high-fire position / end of operation                                                                                        |
| Ph74                                         | Postpurging                                                                                                                                    |
| <b>Valve proving</b>                         |                                                                                                                                                |
| Ph80                                         | Test space evacuating                                                                                                                          |
| Ph81                                         | Checking time fuel valve 1                                                                                                                     |
| Ph82                                         | Test space filling                                                                                                                             |
| Ph83                                         | Checking time fuel valve 2                                                                                                                     |
| <b>Waiting phases<br/>(start prevention)</b> |                                                                                                                                                |
| Ph01                                         | Undervoltage                                                                                                                                   |
| Ph02                                         | Safety loop open                                                                                                                               |
| Ph04                                         | Extraneous light at burner startup (timeout / locking after 30 seconds)                                                                        |
| Ph90                                         | Pressure switch-min open → safety shutdown                                                                                                     |
| <b>Lockout</b>                               |                                                                                                                                                |
| LOC                                          | Lockout phase                                                                                                                                  |




**Error code list with operation via internal AZL :**

| <b>Error code</b> | <b>Clear text</b>                                                                                                                                   | <b>Possible cause</b>                                                                                                                                                                                                                     |
|-------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Loc 2             | No establishment of flame at the end of the safety time (TSA)                                                                                       | <ul style="list-style-type: none"> <li>- Faulty or soiled fuel valves</li> <li>- Faulty or soiled flame detector</li> <li>- Poor adjustment of burner, no fuel</li> <li>- Faulty ignition equipment</li> </ul>                            |
| Loc 3             | Air pressure faulty (air pressure switch (LP) welded in no-load position, decrease to specified time (t10) (air pressure switch (LP) response time) | Air pressure switch (LP) faulty<br><ul style="list-style-type: none"> <li>- Loss of air pressure signal after specified time (t10)</li> <li>- Air pressure switch (LP) is welded in no-load position</li> </ul>                           |
| Loc 4             | Extraneous light                                                                                                                                    | Extraneous light when burner startup                                                                                                                                                                                                      |
| Loc 5             | Air pressure faulty, air pressure switch welded in working position                                                                                 | Time out air pressure switch (LP)<br><ul style="list-style-type: none"> <li>- Air pressure switch (LP) is welded in working position</li> </ul>                                                                                           |
| Loc 6             | Fault of actuator                                                                                                                                   | <ul style="list-style-type: none"> <li>- Actuator faulty or blocked</li> <li>- Faulty connection</li> <li>- Wrong adjustment</li> </ul>                                                                                                   |
| Loc 7             | Loss of flame                                                                                                                                       | Too many losses of flame during operation (limitation of repetitions)<br><ul style="list-style-type: none"> <li>- Faulty or soiled fuel valves</li> <li>- Faulty or soiled flame detector</li> <li>- Poor adjustment of burner</li> </ul> |
| Loc 8             | ---                                                                                                                                                 | Free                                                                                                                                                                                                                                      |
| Loc 9             | ---                                                                                                                                                 | Free                                                                                                                                                                                                                                      |
| Loc 10            | Error not relatable (application), internal error                                                                                                   | Wiring error or internal error, output contacts, other faults                                                                                                                                                                             |
| Loc 12            | Valve proving                                                                                                                                       | Fuel valve 1 (V1) leak                                                                                                                                                                                                                    |
| Loc 13            | Valve proving                                                                                                                                       | Fuel valve 2 (V2) leak                                                                                                                                                                                                                    |
| Loc 22            | Safety loop open                                                                                                                                    | <ul style="list-style-type: none"> <li>- Gas pressure switch-max open</li> <li>- Safety limit thermostat cut out</li> </ul>                                                                                                               |
| Loc 138           | Restore process successful                                                                                                                          | Restore process successful                                                                                                                                                                                                                |
| Loc 167           | Manual locking                                                                                                                                      | Manual locking                                                                                                                                                                                                                            |
| Loc: 206          | AZL2... incompatible                                                                                                                                | Use the latest version                                                                                                                                                                                                                    |

## Entering the Parameter levels:

y means of a proper use of the keys, it is possible to enter the various level parameters, as shown in the following flow chart :

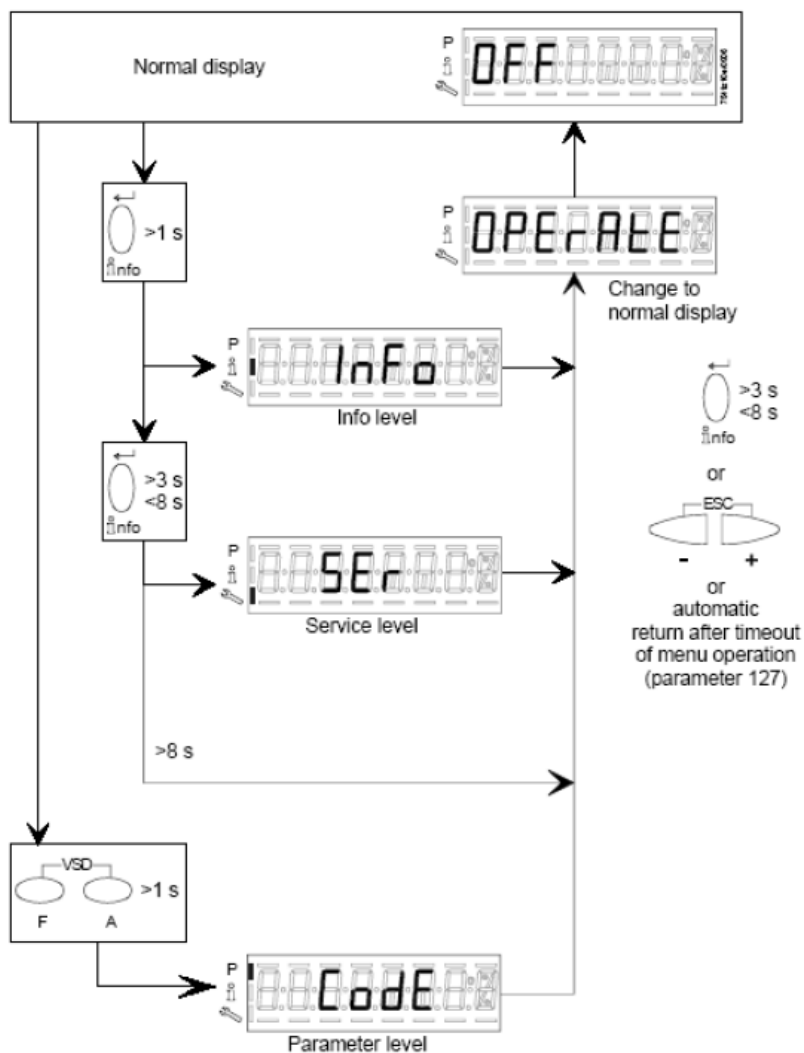


## Info level :

Keep pushing the  button until  appears. Use + or - for scrolling the parameter list. If on the right side a dash-dot appears, it means the display doesn't show the full description. Push  again for 1 to 3 s in order to show the full description.

Below the visible **Info** parameters:

| Parameter number | Parameter list<br>PME73.000Ax + PME73.831AxBC<br>LME73.831AxBC | Edit       | Value range |         | Resolution | Factory setting | Password level reading from level | Password level writing from level |
|------------------|----------------------------------------------------------------|------------|-------------|---------|------------|-----------------|-----------------------------------|-----------------------------------|
|                  |                                                                |            | Min.        | Max.    |            |                 |                                   |                                   |
| 100              | General                                                        |            |             |         |            |                 |                                   |                                   |
| 102              | Identification date                                            | Read only  | ---         | ---     | ---        |                 | Info                              | ---                               |
| 103              | Identification number                                          | Read only  | 0           | 9999    | 1          |                 | Info                              | ---                               |
| 113              | Burner identification                                          | Read only  | x           | xxxxxxx | 1          |                 | Info                              | ---                               |
| 164              | Numbers of startups resettable                                 | Resettable | 0           | 999999  | 1          |                 | Info                              | Info                              |
| 166              | Total number of startups                                       | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.00           | Switching cycles actuator relay K12                            | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.01           | Switching cycles actuator relay K11                            | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.02           | Switching cycles actuator relay K2                             | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 170.03           | Switching cycles actuator relay K1                             | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |
| 171              | Max. switching cycles actuator relay                           | Read only  | 0           | 999999  | 1          |                 | Info                              | ---                               |

## Service level :

Keep pushing the  button until  appears. Use + or - for scrolling the parameter list. . If on the right side a dash-dot appears, it means the display doesn't show the full description. Push  again for 1 to 3 s in order to show the full description.

Below the visible **Info** parameters:

| Parameter number | Parameter list<br>PME73.000Ax + PME73.831AxBC<br>LME73.831AxBC                                              | Edit      | Value range         |                              | Resolution         | Factory setting | Password level reading from level | Password level writing from level |
|------------------|-------------------------------------------------------------------------------------------------------------|-----------|---------------------|------------------------------|--------------------|-----------------|-----------------------------------|-----------------------------------|
|                  |                                                                                                             |           | Min.                | Max.                         |                    |                 |                                   |                                   |
| <b>700</b>       | <b>Error history</b>                                                                                        |           |                     |                              |                    |                 |                                   |                                   |
| 701              | Current error:<br>00: Error code<br>01: Startup meter reading<br>02: MMI phase<br>03: Power value           | Read only | 2<br>0<br>---<br>0% | 255<br>999999<br>---<br>100% | 1<br>1<br>---<br>1 |                 | Service                           | ---                               |
| 702              | Error history former 1:<br>00: Error code<br>01: Startup meter reading<br>02: MMI phase<br>03: Power value  | Read only | 2<br>0<br>---<br>0% | 255<br>999999<br>---<br>100% | 1<br>1<br>---<br>1 |                 | Service                           | ---                               |
| •                |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |
| •                |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |
| •                |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |
| 711              | Error history former 10:<br>00: Error code<br>01: Startup meter reading<br>02: MMI phase<br>03: Power value | Read only | 2<br>0<br>---<br>0% | 255<br>999999<br>---<br>100% | 1<br>1<br>---<br>1 |                 | Service                           | ---                               |
|                  |                                                                                                             |           |                     |                              |                    |                 |                                   |                                   |

|     |                  |           |     |                                                |        |  |         |     |
|-----|------------------|-----------|-----|------------------------------------------------|--------|--|---------|-----|
| 900 | Process data     |           |     |                                                |        |  |         |     |
| 936 | Normalized speed | Read only | 0%  | 100%                                           | 0.01 % |  | Service | --- |
| 951 | Mains voltage    | Read only | 0 V | LME73.000A1:<br>175 V<br>LME73.000A2:<br>350 V | 1 V    |  | Service | --- |
| 954 | Flame intensity  | Read only | 0%  | 100%                                           | 1%     |  | Service | --- |

## Parameter level (Heating engineering) :

This level lets the engineer to modify some burner parameters. It is protect with a 4 digit password (SO level) and a 5 digit password (OEM level)

Password input : push **F** and **A** buttons together until the display shows "**code**" and 7 underlines. The left one flashes. By **+** or **-** move the flashing underline until it is on the desired position and push "enter". The underline becomes a dash. By means of **+** or **-**, choose the right character and push "enter". Input the whole password and the **PArA** appears and later on **000 Int**.

Scroll the parameters using **+** or **-**: **000Int, 100, 200, 500, 600 are on the display**. Choose the proper parameter group with the **enter** button and scroll the options with **+** e poi **-** (below the full par set: the two columns on the right give the level access). Choose the parameter to be modified with "enter" is writing is allowed. The parameter now flashes: **+** or **-** modifies the parameter and **enter** confirms. **+** and **-** pushed together move the menu one step back. Push **+** and **-** several times in order to get the home position..

| Parameter number | Parameter list<br>PME73.000Ax + PME73.831AxBC<br>LME73.831AxBC                                                                                                                      | Edit | Value range |          | Resolution | Factory setting | Password level<br>reading from level | Password level<br>writing from level |
|------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|-------------|----------|------------|-----------------|--------------------------------------|--------------------------------------|
|                  |                                                                                                                                                                                     |      | Min.        | Max.     |            |                 |                                      |                                      |
| <b>0</b>         | <b>Internal parameter</b>                                                                                                                                                           |      |             |          |            |                 |                                      |                                      |
| 41               | Heating engineers password (4 characters)                                                                                                                                           | Edit | xxxx        | xxxx     | ---        |                 | ---                                  | OEM                                  |
| 42               | OEM's password (5 characters)                                                                                                                                                       | Edit | xxxxx       | xxxxx    | ---        |                 | ---                                  | OEM                                  |
| 60               | Backup / restore                                                                                                                                                                    | Edit | Restore     | Backup   | ---        |                 | ---                                  | SO                                   |
| <b>100</b>       | <b>General</b>                                                                                                                                                                      |      |             |          |            |                 |                                      |                                      |
| 123              | Min. power control step                                                                                                                                                             | Edit | 1%          | 10%      | 0.1        |                 | SO                                   | SO                                   |
| 140              | Mode display of Display and operating unit AZL2...<br>1 = Standard (program phase)<br>2 = Flame 1 (QRA... / ION)<br>3 = Flame 2 (QRB... / QRC...)<br>4 = Active power (power value) | Edit | 1           | 4        | 4          |                 | SO                                   | SO                                   |
| <b>200</b>       | <b>Burner control</b>                                                                                                                                                               |      |             |          |            |                 |                                      |                                      |
| 224              | Specified time (t10) air pressure switch (LP)                                                                                                                                       | Edit | 0 s         | 13.818 s | 0.294 s    | 12,054          | SO                                   | OEM                                  |
| 225              | Gas: Prepurge time (t1)                                                                                                                                                             | Edit | 0 s         | 1237 s   | 4.851 s    | 29,106          | SO                                   | OEM                                  |
| 226              | Gas: Preignition time (t3)                                                                                                                                                          | Edit | 1.029 s     | 37.485 s | 0.147 s    | 2,058           | SO                                   | OEM                                  |
| 230              | Interval (t4): End of safety time (TSA) - fuel valve 1 (V1) ON                                                                                                                      | Edit | 3.234 s     | 74.97 s  | 0.294 s    | 3,234           | SO                                   | OEM                                  |
| 231              | Interval (t9): Fuel valve 1 (V1) ON - pilot valve (PV) OFF                                                                                                                          | Edit | 0 s         | 74.97 s  | 0.294 s    | 2,940           | SO                                   | OEM                                  |
| 232              | Interval (t5): Pilot valve (PV) OFF - load controller (LR) release                                                                                                                  | Edit | 2.058 s     | 74.97 s  | 0.294 s    | 8.820           | SO                                   | OEM                                  |
| 234              | Gas: Postpurge time (t8)                                                                                                                                                            | Edit | 0 s         | 1237 s   | 4.851 s    | 0               | SO                                   | OEM                                  |
| 239              | Gas: Intermittent operation after 24 hours of continuous operation<br>0=OFF<br>1=ON                                                                                                 | Edit | 0           | 1        | 1          | 1               | SO                                   | OEM                                  |

|        |                                                                                                                                                                                 |      |         |          |         |        |    |     |
|--------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|---------|----------|---------|--------|----|-----|
| 240    | Repetition in the event of loss of flame during operation<br>0 = None<br>1 = None<br>2 = 1 x Repetition                                                                         | Edit | 0       | 2        | 1       | 0      | SO | OEM |
| 241.00 | Valve proving<br>0 = Off<br>1 = On                                                                                                                                              | Edit | 0       | 1        | 1       | 1      | SO | OEM |
| 241.01 | Valve proving<br>0 = During prepurge time (t1)<br>1 = During postpurge time (t8)                                                                                                | Edit | 0       | 1        | 1       | 0      | SO | OEM |
| 241.02 | Valve proving<br>0 = According to P241.01<br>1 = During prepurge time (t1) and postpurge time (t8)                                                                              | Edit | 0       | 1        | 1       | 0      | SO | OEM |
| 242    | Valve proving test space evacuating                                                                                                                                             | Edit | 0 s     | 2.648 s  | 0.147 s | 2,646  | SO | OEM |
| 243    | Valve proving time test atmospheric pressure                                                                                                                                    | Edit | 1.029 s | 37.485 s | 0.147 s | 10,290 | SO | OEM |
| 244    | Valve proving test space filling                                                                                                                                                | Edit | 0 s     | 2.648 s  | 0.147 s | 2,646  | SO | OEM |
| 245    | Valve proving time test gas pressure                                                                                                                                            | Edit | 1.029 s | 37.485 s | 0.147 s | 10,290 | SO | OEM |
| 254    | Response time detector error<br>0 = 1 s<br>1 = 3 s                                                                                                                              | Edit | 0       | 1        | 1       | 0      | SO | OEM |
| 257    | Gas: Postignition time (t3n – 0.3 seconds)                                                                                                                                      | Edit | 0 s     | 13.23 s  | 0.147 s | 2,205  | SO | OEM |
| 259.00 | Opening time of actuator (t11) (timeout for lockout)                                                                                                                            | Edit | 0 s     | 1237 s   | 4.851 s | 67,914 | SO | OEM |
| 259.01 | Opening time of actuator from ignition load to low-fire position                                                                                                                | Edit | 0 s     | 37.485 s | 0.147 s | 14,994 | SO | OEM |
| 259.02 | Opening time of actuator from low-fire to ignition load position                                                                                                                | Edit | 0 s     | 37.485 s | 0.147 s | 14,994 |    |     |
| 260    | Closing time of actuator (t12) (timeout for lockout)                                                                                                                            | Edit | 0 s     | 1237 s   | 4.851 s | 67,914 | SO | OEM |
| 500    | <b>Ratio control</b>                                                                                                                                                            |      |         |          |         |        |    |     |
| 515    | Actuator position during prepurge time (t1) and postpurge time (t8)<br>0: Purging in low-fire<br>1: Purging in high-fire                                                        | Edit | 0       | 1        | 1       | 1      | SO | OEM |
| 560    | Pneumatic combustion control<br>0 = off / 3-step modulation<br>1 = PWM fan / analog modulation<br>2 = air damper / analog modulation (feedback potentiometer ASZxx.3x required) | Edit | 0       | 2        | 1       | 1      | SO | SO  |
|        |                                                                                                                                                                                 |      |         |          |         |        |    |     |
|        |                                                                                                                                                                                 |      |         |          |         |        |    |     |

| 600 | Power setting                                                                                                                                                                                            |      |   |   |   |   |    |    |
|-----|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------|---|---|---|---|----|----|
| 654 | Analog input (feedback potentiometer ASZxx.3x required)<br>0 = 3-position step input<br>1 = 0...10 V<br>2 = 0...135 $\Omega$<br>3 = 0...20 mA<br>4 = 4...20 mA with lockout at I < 4 mA<br>5 = 4...20 mA | Edit | 0 | 5 | 1 | 0 | SO | SO |

| WARNING                                                                                |                                                                  |
|----------------------------------------------------------------------------------------|------------------------------------------------------------------|
| Parameter Num. :<br>41<br>42<br>60<br>123<br>140<br>242<br>243<br>244<br>245<br>259.01 | Adjustable parameters from SO or OEM levels for<br>LME73.831AxBC |





Note: Specifications and data subject to change. Errors and omissions excepted.